

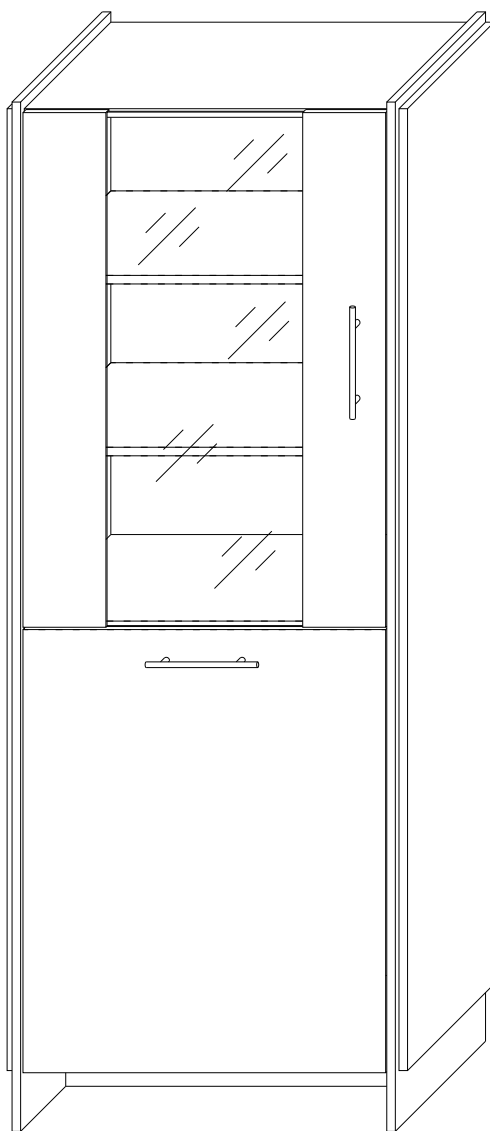
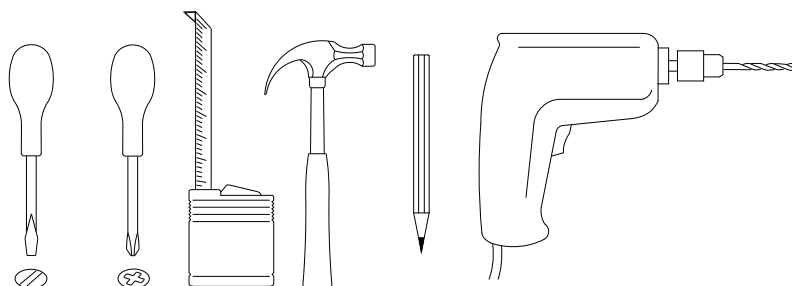
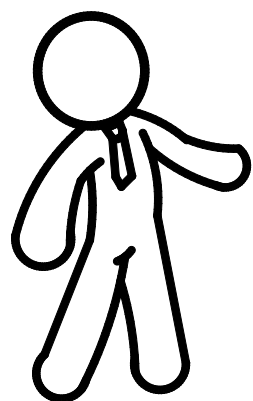
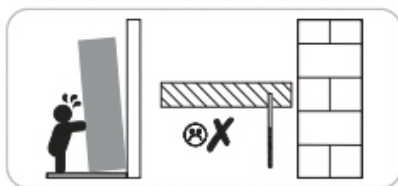
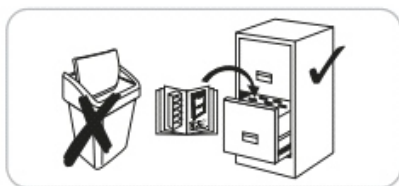
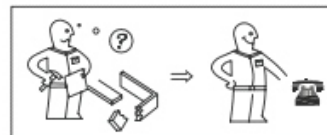


Instrukcja montażu

Assembly instructions


Amino VA

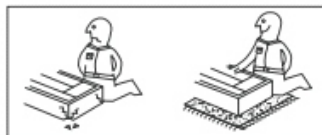

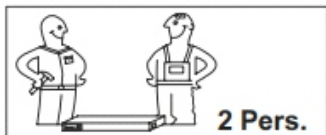


Packet	Nº	Lenght	Width	Qty
Nº1	2	1800**	446*	1
	3	1800**	446*	1
	4	1682**	428**	2
		Fittings		1
Nº2	1	640**	428	2
	7	640*	408	1
	6	640*	398	3
	8	634**	775**	1
	5	640	100	1
	10	894	650/3	1
	11	768	650/3	1
Nº3	9	634	900	1

1

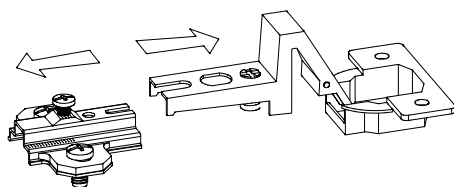


1.20 x5


2

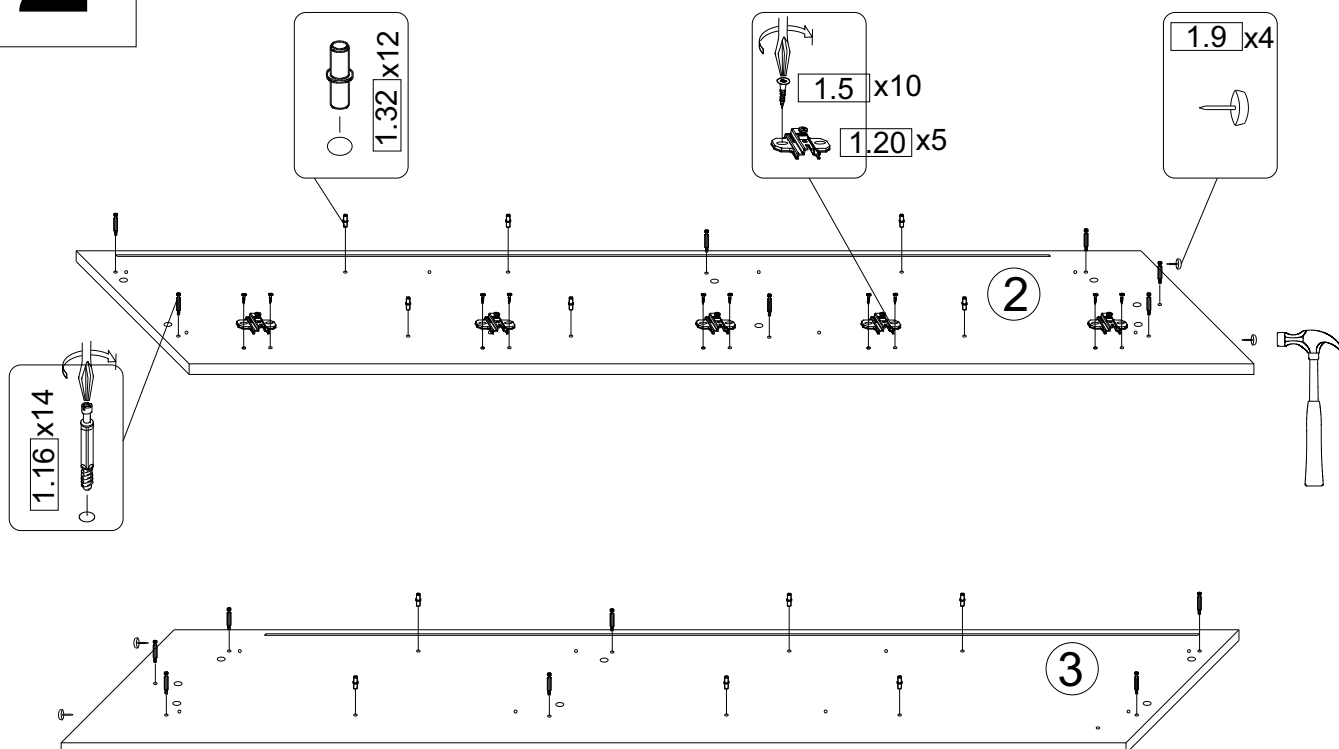


3 x2

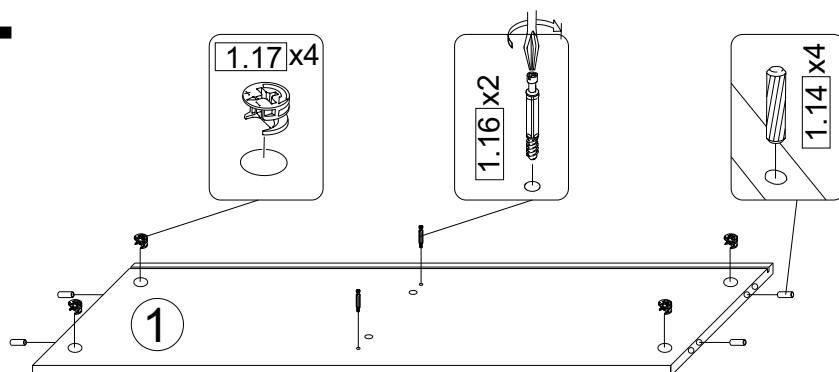


4 x2

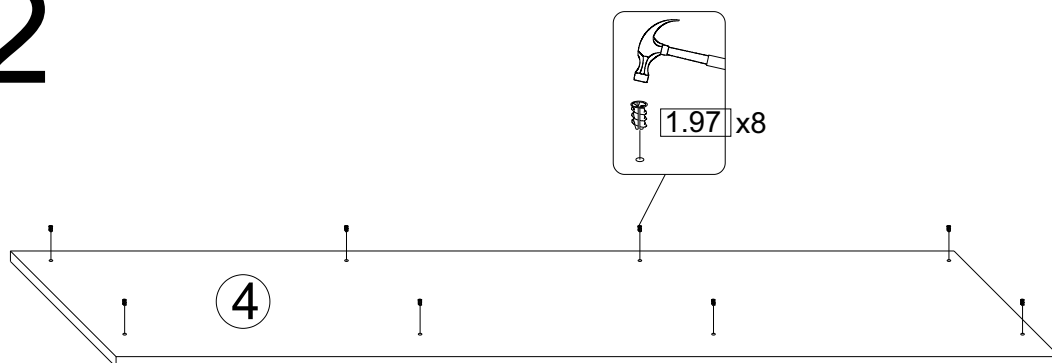

5

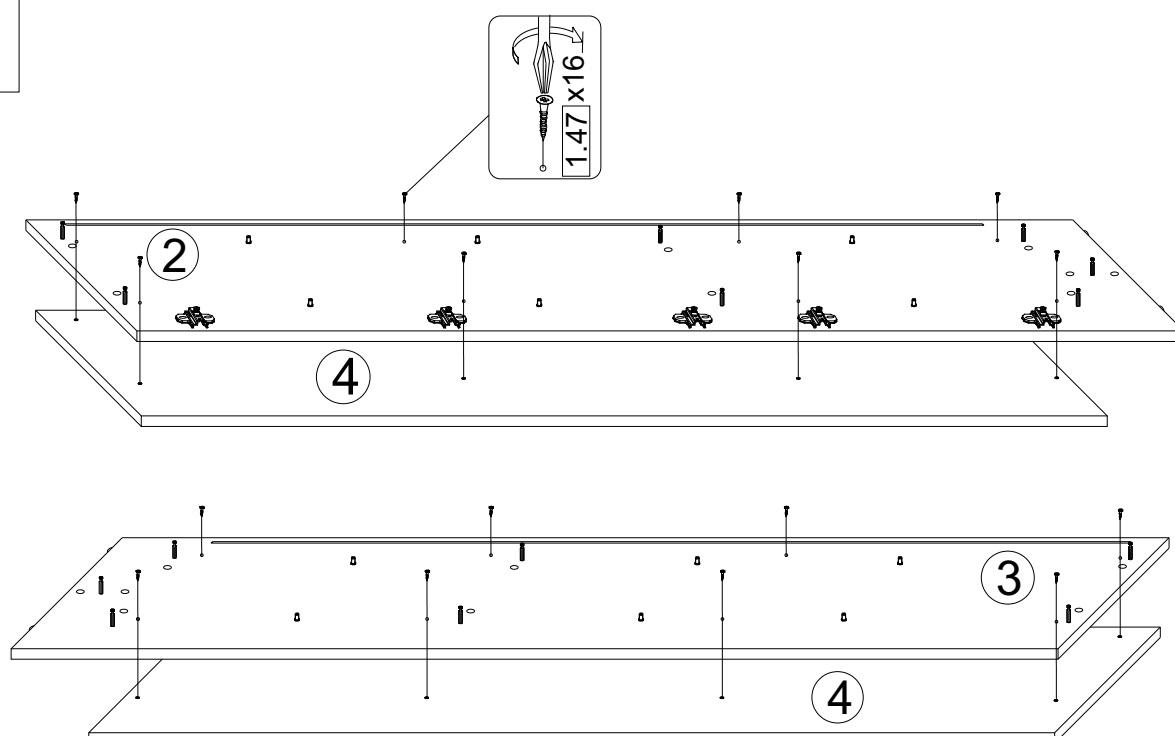

6

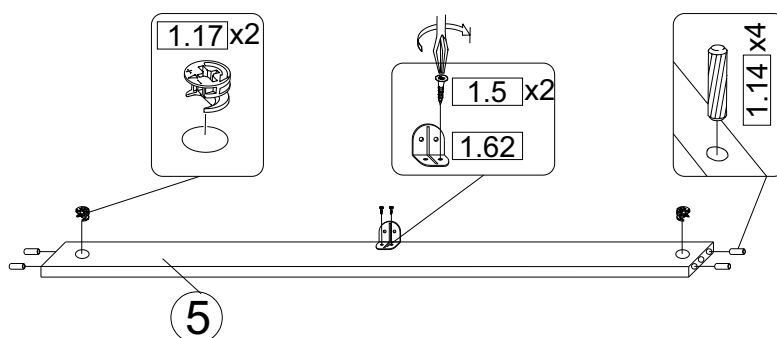


This diagram illustrates the assembly of a wooden workbench. The main components are a large rectangular wooden board (labeled 9) and a smaller rectangular wooden board (labeled 1.59). The assembly is supported by four metal brackets (labeled 1.5) and four metal bolts (labeled 1.2). The diagram shows the following parts and their quantities:


- 1.5 x6 (6 units)
- 1.20 x3 (3 units)
- 9 (1 unit)
- 1.59 (1 unit)
- 1.2 x2 (2 units)

The diagram also includes detailed views of the metal brackets and bolts, showing their dimensions and how they are used to secure the wooden boards.


9

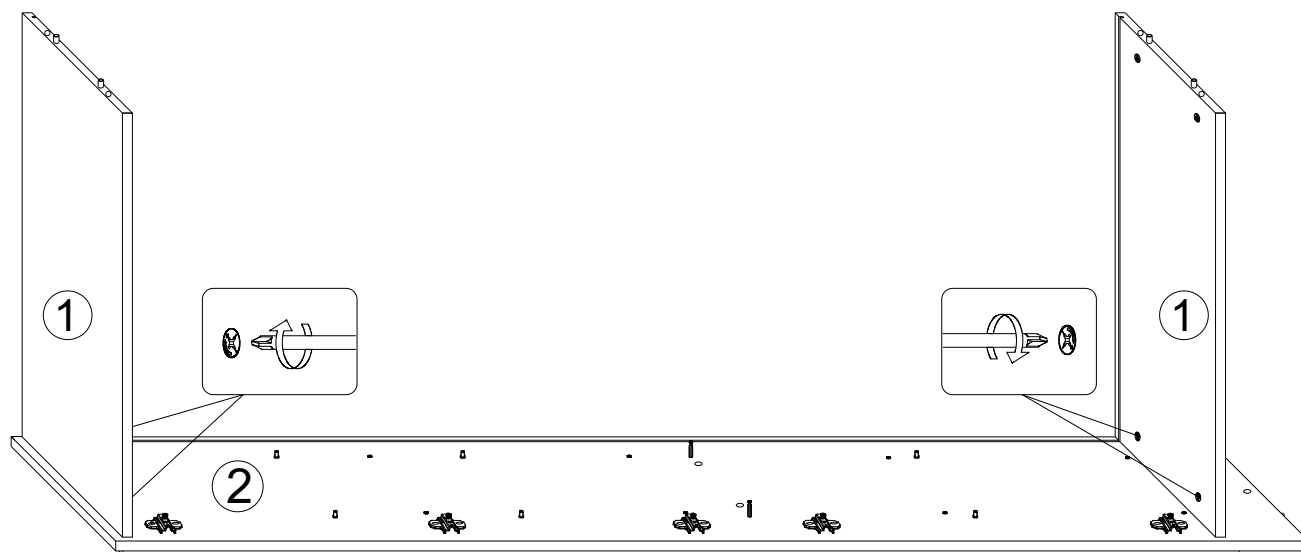


10

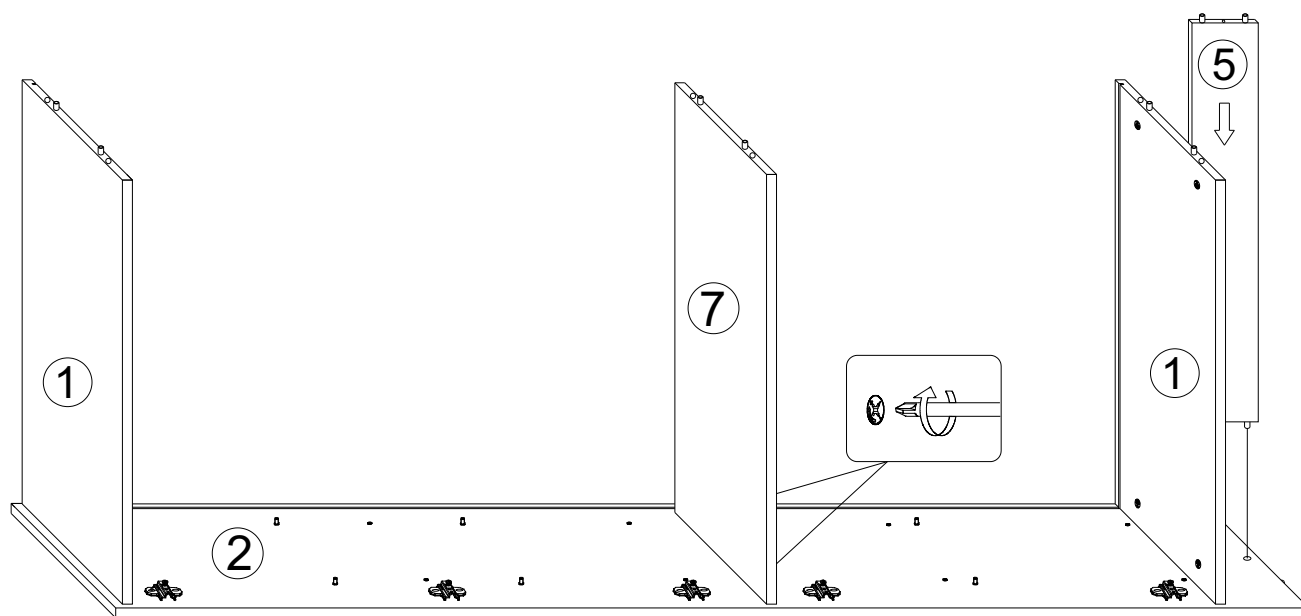



11

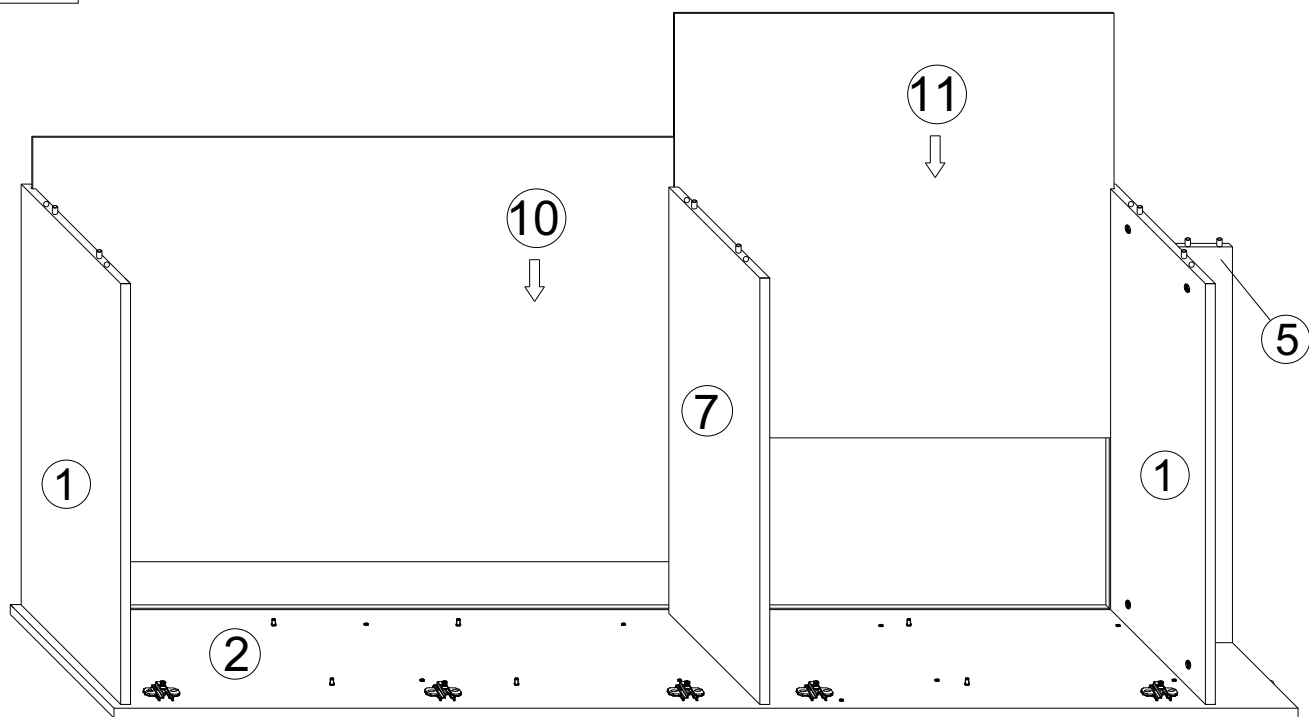



12




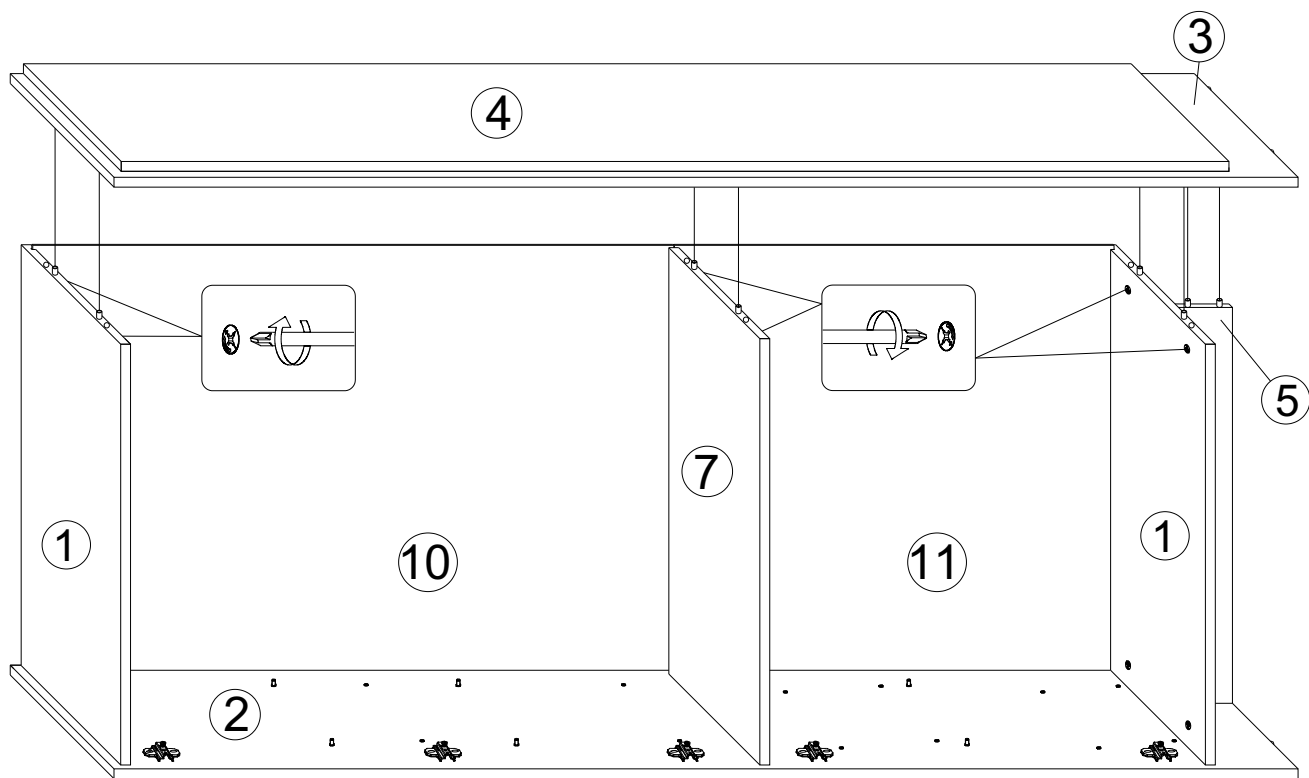




13

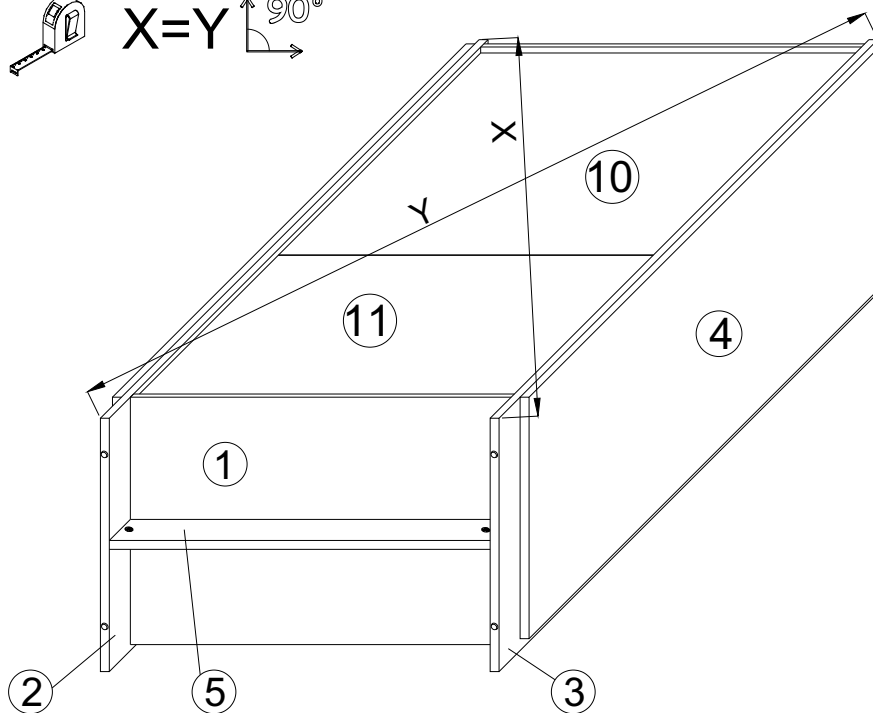






14

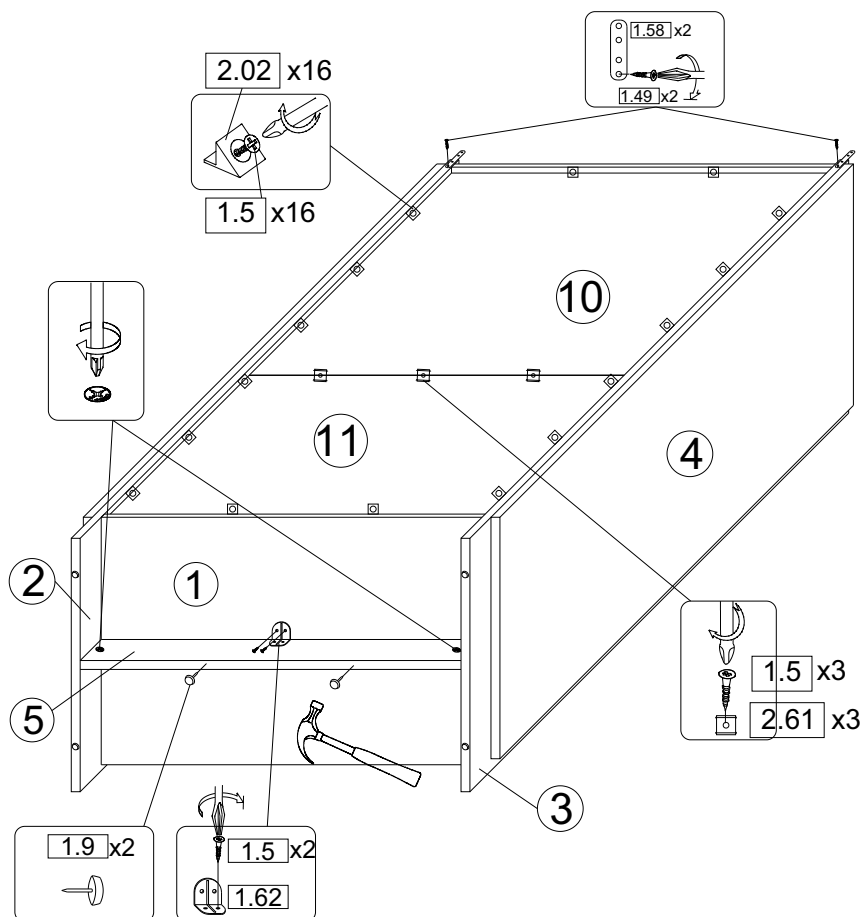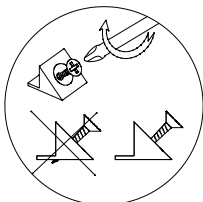

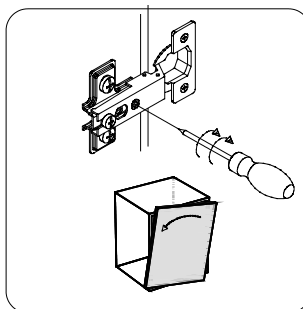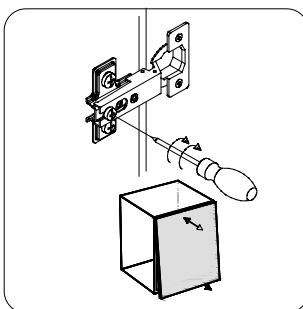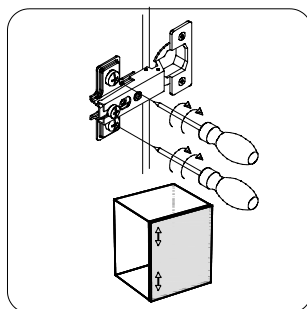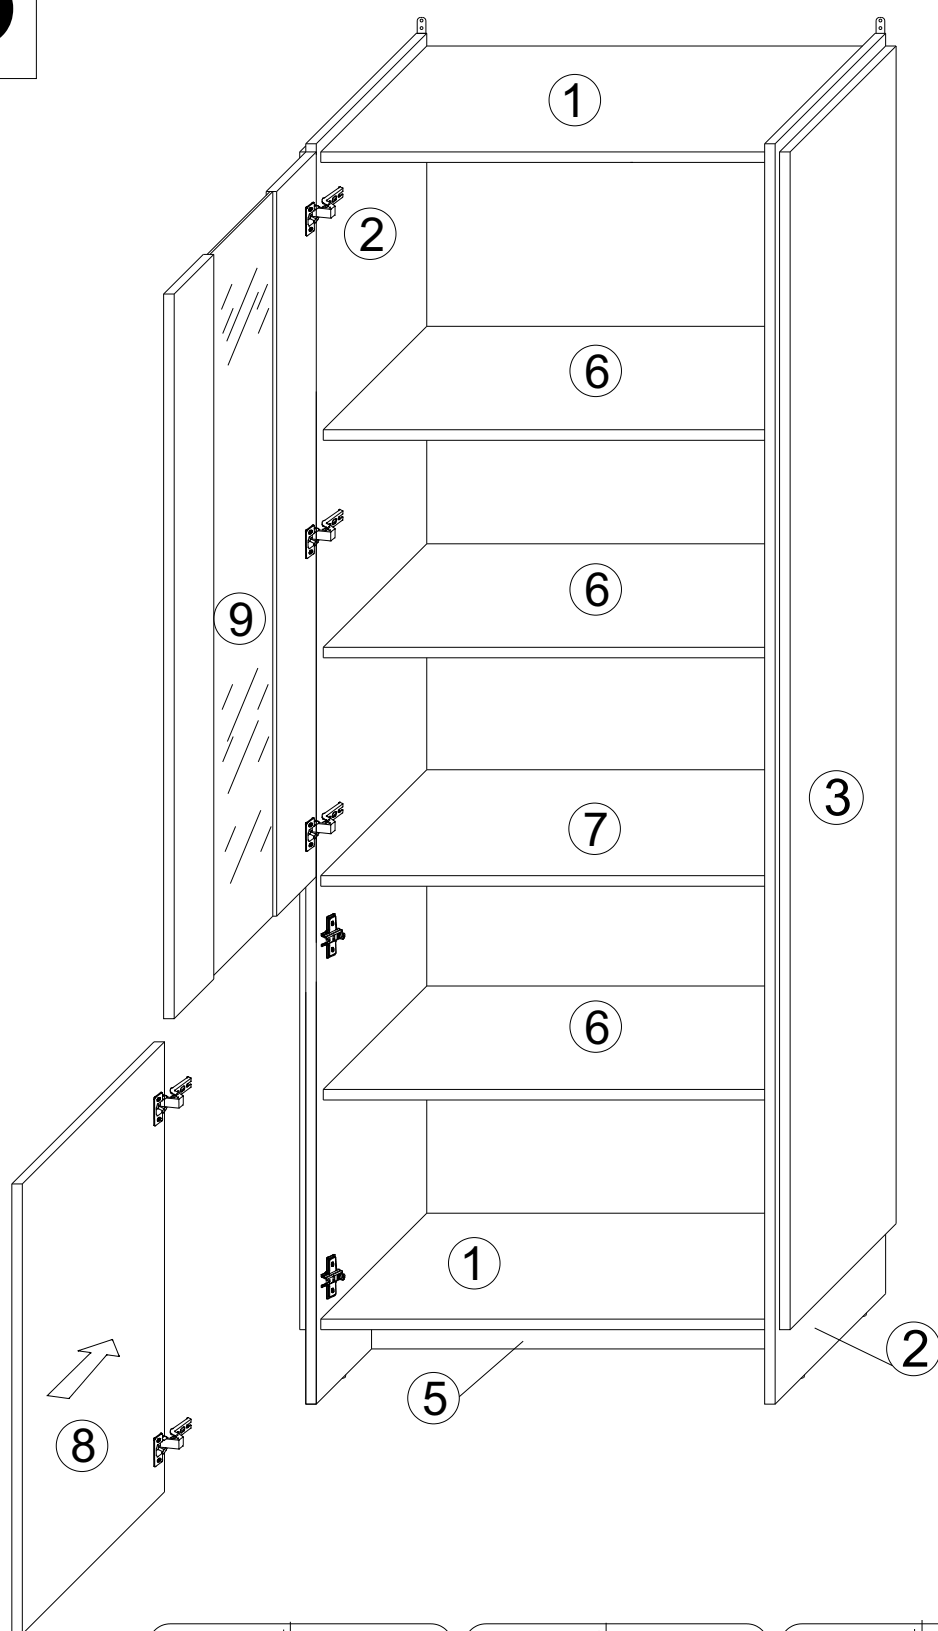

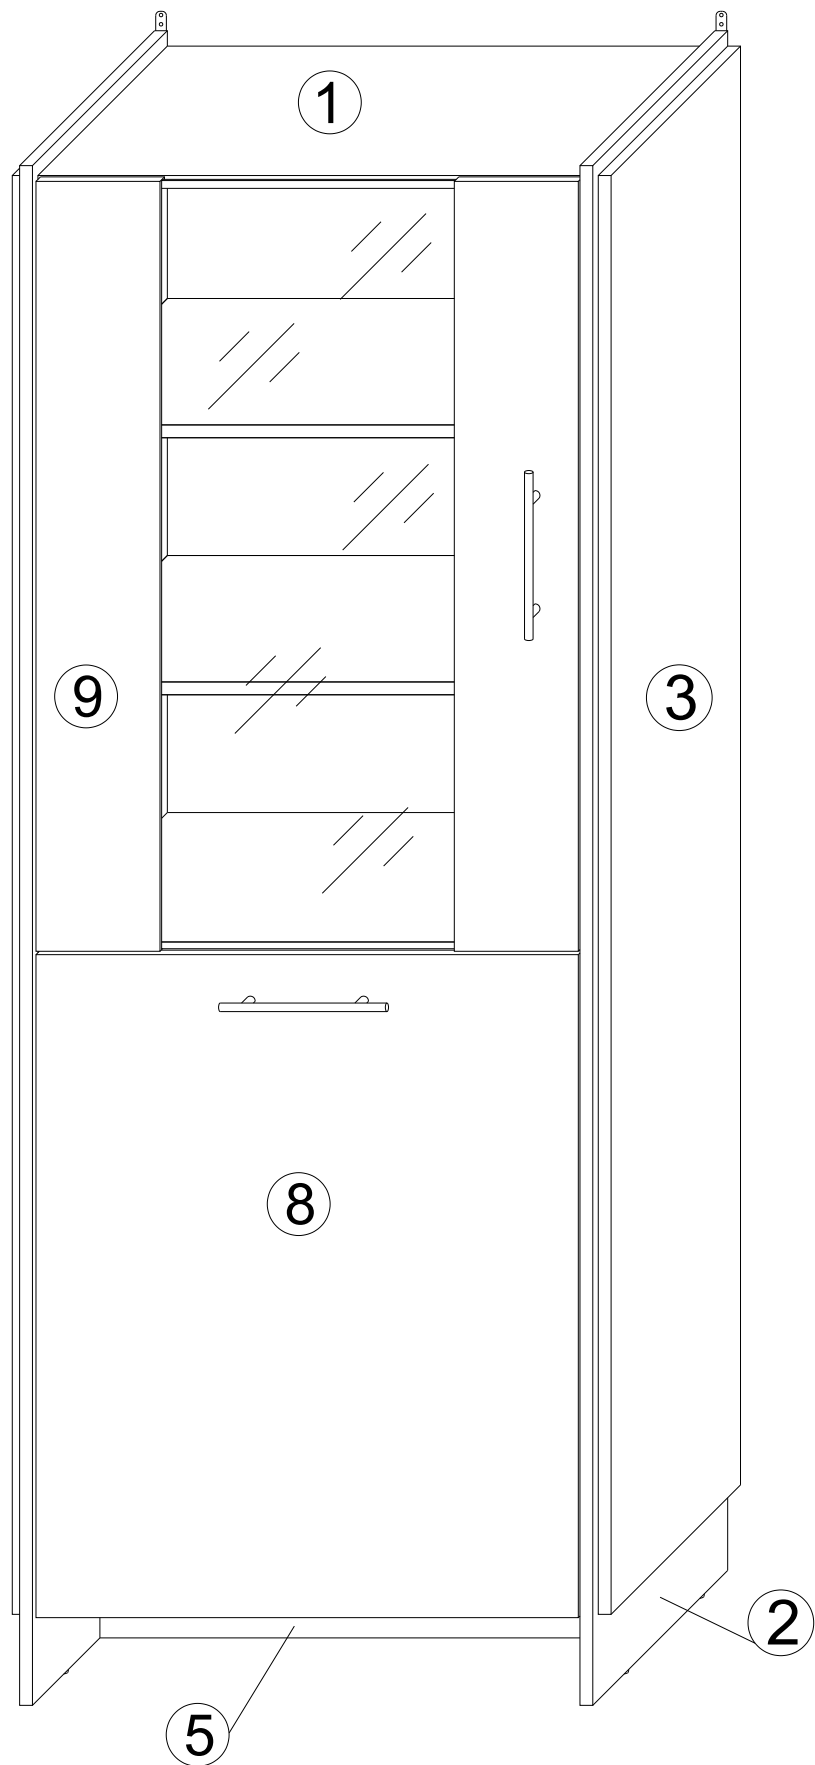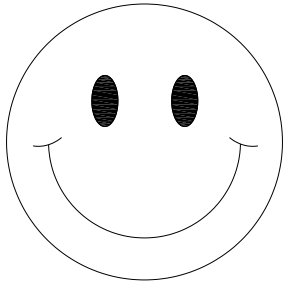

Always attach the furniture to the wall using stops! For wall mounting, use dowels appropriate to the material the wall is made of, if not If you are unsure, contact a specialist.
Ultimately, the installer is responsible for the fasteners

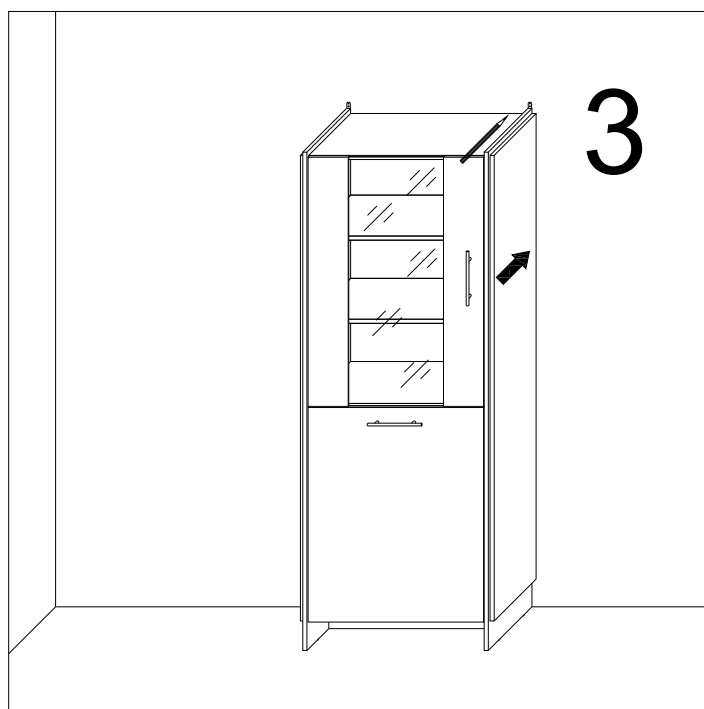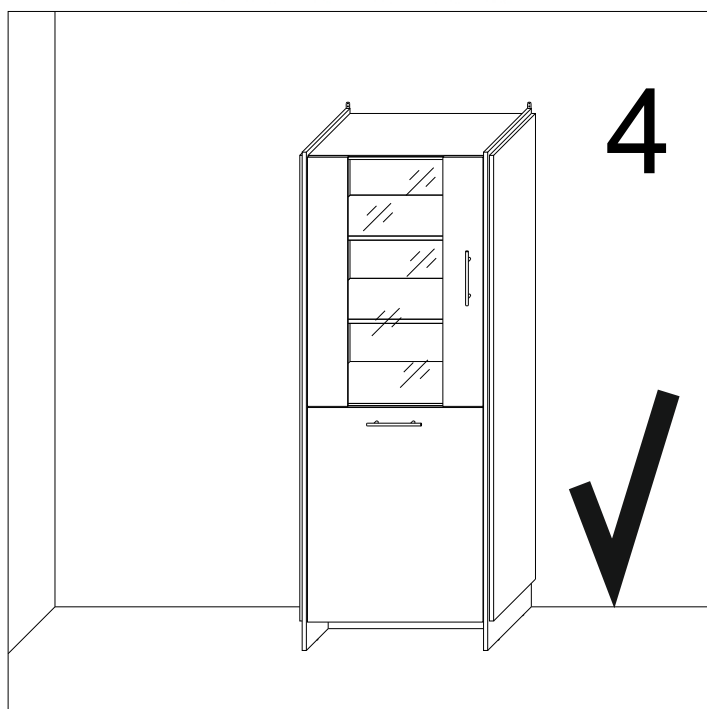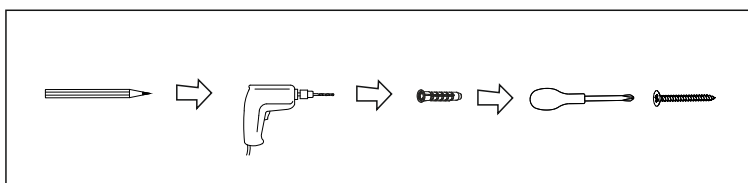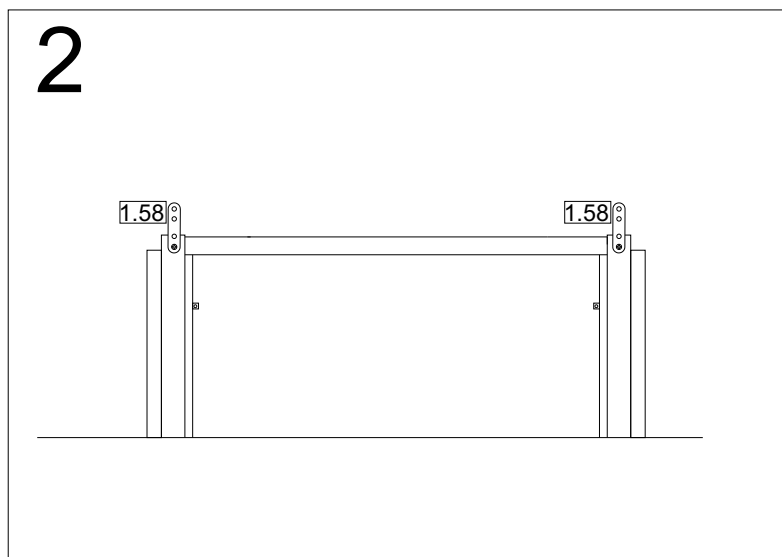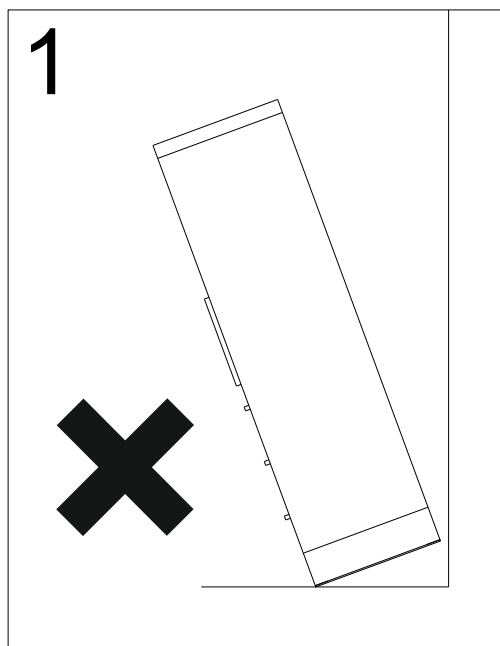

Przy eksploatacji mebli zabrania się :

- ustawiać meble w pobliżu grzewczych przyrządów i obok wilgotnych ścian, a także w pomieszczeniach ze względną wilgotnością więcej niż 70%
- temperatura nagrzewania elementów mebli nie może przekraczać +40 C
- w trakcie montażu i eksploatacji mebli stawać nogami na poziome panele i witryny
- stawać chemiczne środki czyszczące do sprzątania mebli
- nie należy narażać na kontakt z wodą

Ostrzeżenie:

- zawsze przymocuj mebel do ściany za pomocą ograniczników
- do montażu na ścianie użyj kołków odpowiednich do materiału z którego wykonana jest ściana, jeśli nie masz pewności skontaktuj się ze specjalistą. Ostatecznie za elementy łączne odpowiedzialny jest instalator.
- należy przestrzegać maksymalnych obciążeń