

BREMA 203

(D) Montageanleitung

(NL) Handleiding voor de montage

(TR) Montaj talimatı

(F) Notice de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(GB) Assembly Instructions








(PL) Instrukcja montażu

(RU) Инструкция по монтажу

(IT) Istruzioni di montaggio




(SK) Návod na montáž



(RO) Instrucțiunile de montaj

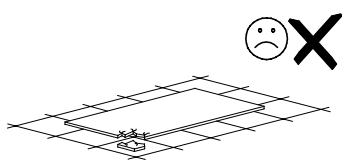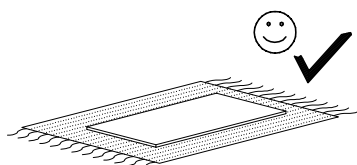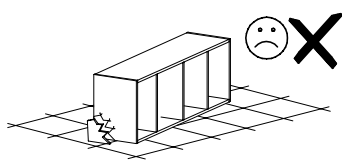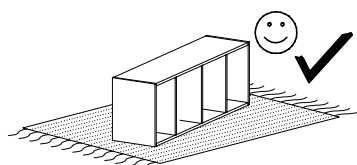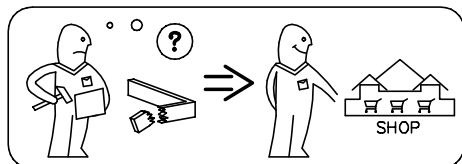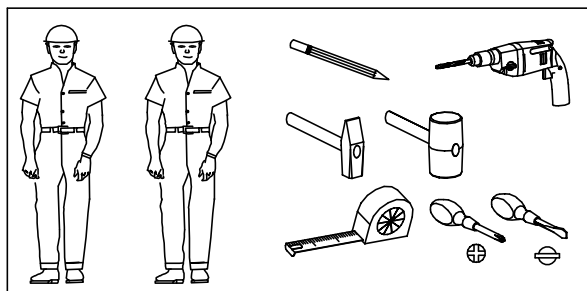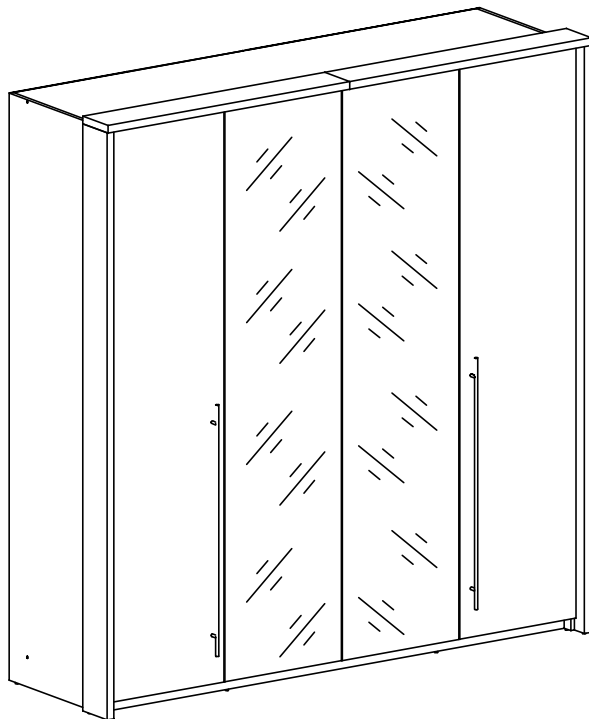

**Uwaga – Upozornini – Achtung – Attention – Caution – Figyelem
Attenzione – Opgelet – Вниманіе – Atentie – Upozornenie – Dikkat**

PL	Czyszczenie należy wykonać wyłącznie za pomocą ściereczki lub lekko nawilżonego ręcznika. Nie stosować środków czyszczących do szorowania.
CZ	Čistění je nutné vykonávat výhradně pomoci utěrky nebo lehce navlhčeného ručníku. Nepoužívejte čističí prostředky obsahující abrazivní částice.
D	Bitte nur mit einem Staubtuch oder leicht feuchtem Lappen reinigen. Keine scheuernden Putzmittel verwenden.
GB	Please only clean with duster or damp cloth. Do not use any abrasive cleaners.
F	Le nettoyage se fait uniquement à l'aide d'un torchon ou d'une serviette légèrement mouillée.
HU	A tisztítás kizárólag törleruha vagy enyhén nedvesített törölköző segítségével végezhető. Súroló hatású tisztítószerket nem szabad használni.
I	Pulire esclusivamente con un panno o un asciugamano umido.
NL	Reinig allen met een stofdoek of een lichtjes vochtige doek. Gebruik geen schurende poetsmiddelen.
RU	Очищайте от пыли тряпкой или слегка влажной ветошью. Не допускается применение чистящих средств, не предназначенных для ухода за мебелью.
RO	Curabare trebuie efectuată numai cu o cârpă sau cu un prosop ușor umed. Nu utilizați agenți de curabare abrazivi.
SK	Čistení je nutné vykonávať výhradne pomoci utierky alebo ľahko zvlhnutým ručníkom. Nepoužívajte čistiace prostriedky obsahujúci abrazívne častice.
TR	Lütfen sadece bir toz bezile veya hafif nemli yumuşak bir bezle siliniz. Asındırıcı temizlik malzemeleri kullanmayınız.

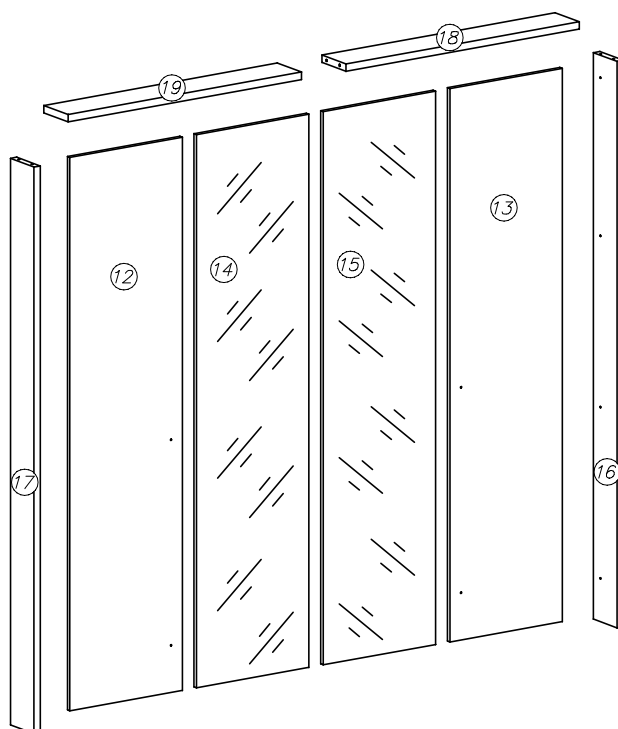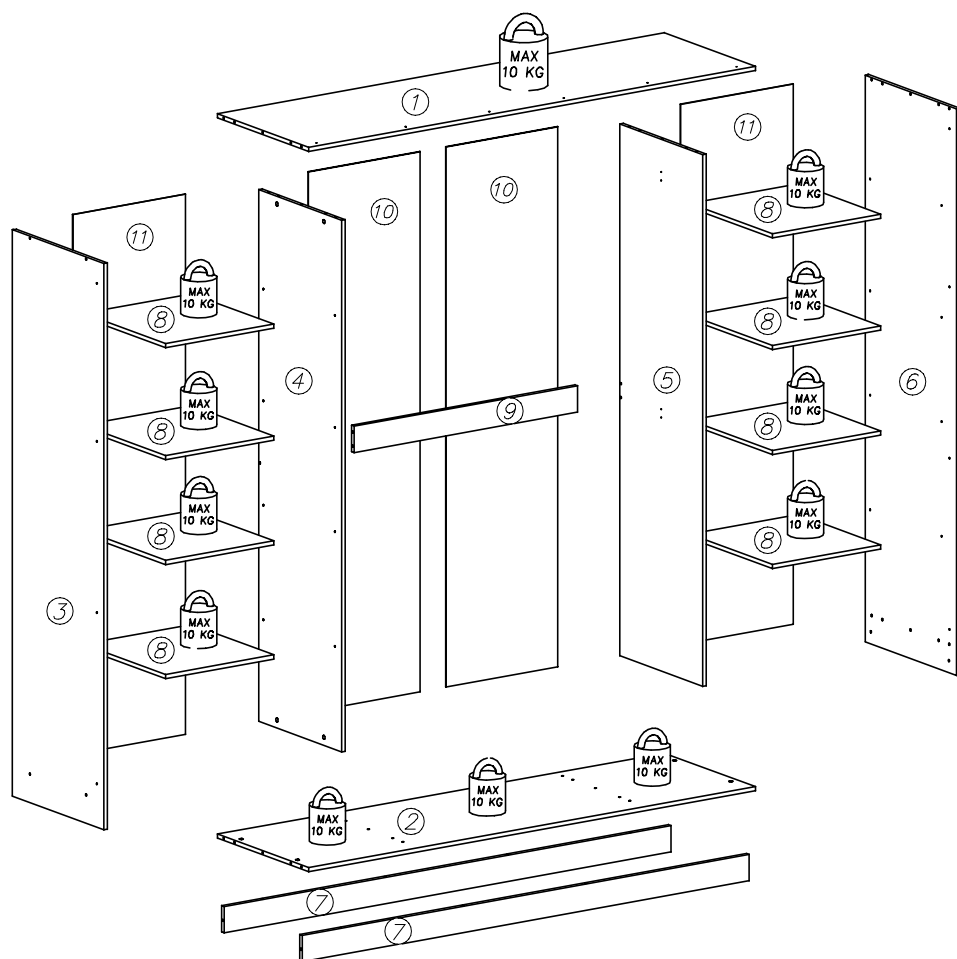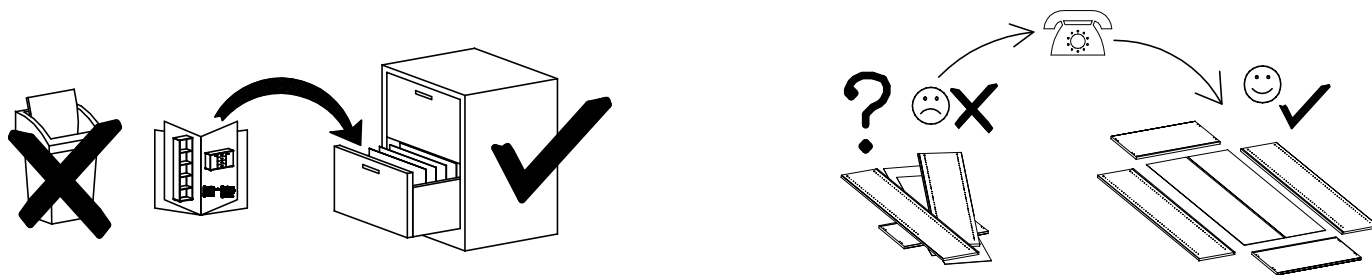









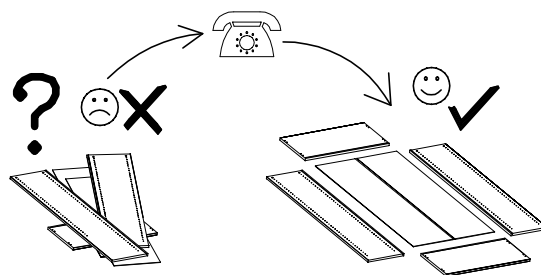
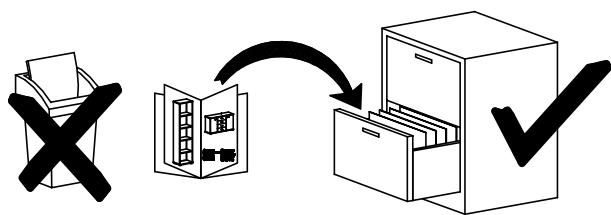





WYMIARY ELEMENTÓW
PART GUIDE
MASSE DER BAUTEILE

No.	L[mm]	W[mm]	T[mm]	Stc.
1	581	2000	16	1
2	581	2000	16	1
3	2150	585	16	1
4	2018	530	16	1
5	2018	530	16	1
6	2150	585	16	1
7	100	2000	16	2
8	525	484	16	8
9	100	1000	16	1
10	2050	504	3	2






No.	L[mm]	W[mm]	T[mm]	Stc.
11	2050	502	3	2
12	2100	503	16	1
13	2100	503	16	1
14	2100	503	16	1
15	2100	503	16	1
16	150	2150	28	1
17	150	2150	28	1
18	155	1046	28	1
19	155	1046	28	1

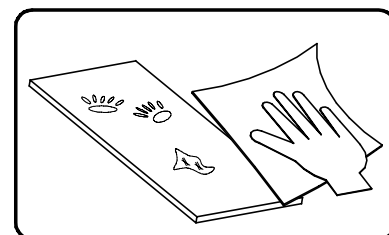

G4  4x16 x...(60)	G9  3x35 x...(14)	K19  x...(10)	E38  x...(2)		x...(8)  x...(1)
F10  x...(32)	G31  3,5x16 x...(8)	T40  x...(1)	D3  PZ35PR x...(8)	C3  Z35PR x...(8)	T34  x...(1)
T41  x...(2)	T39  x...(1)	S1  x...(1)	T37  x...(1)	T36  x...(1)	T35  x...(1)
I12  x...(18)	G36  3,5x13 x...(12)	S17  x...(30)	W4  x...(100)	P4  x...(12)	K1  ø15x12 x...(18)
S18  x...(4)	B1  ø8x35 x...(44)	N15  M4x25 x...(4)	S5  x...(2)	W2  x...(1)	K5  x...(8)

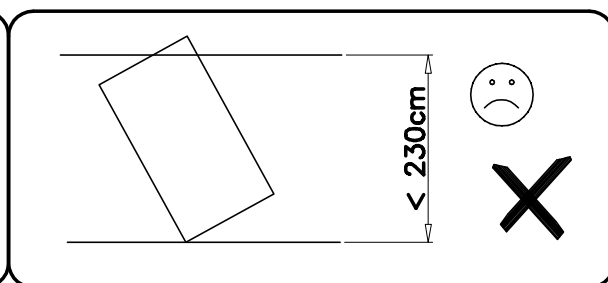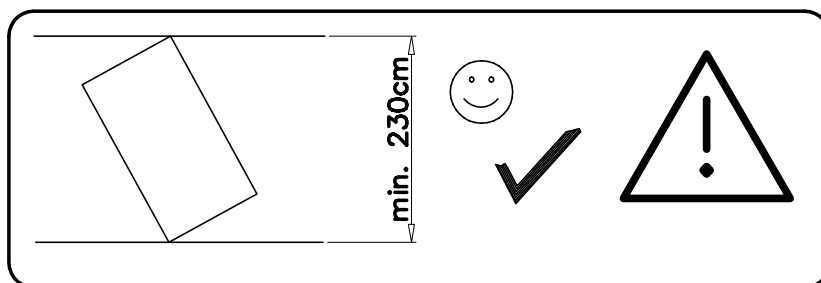
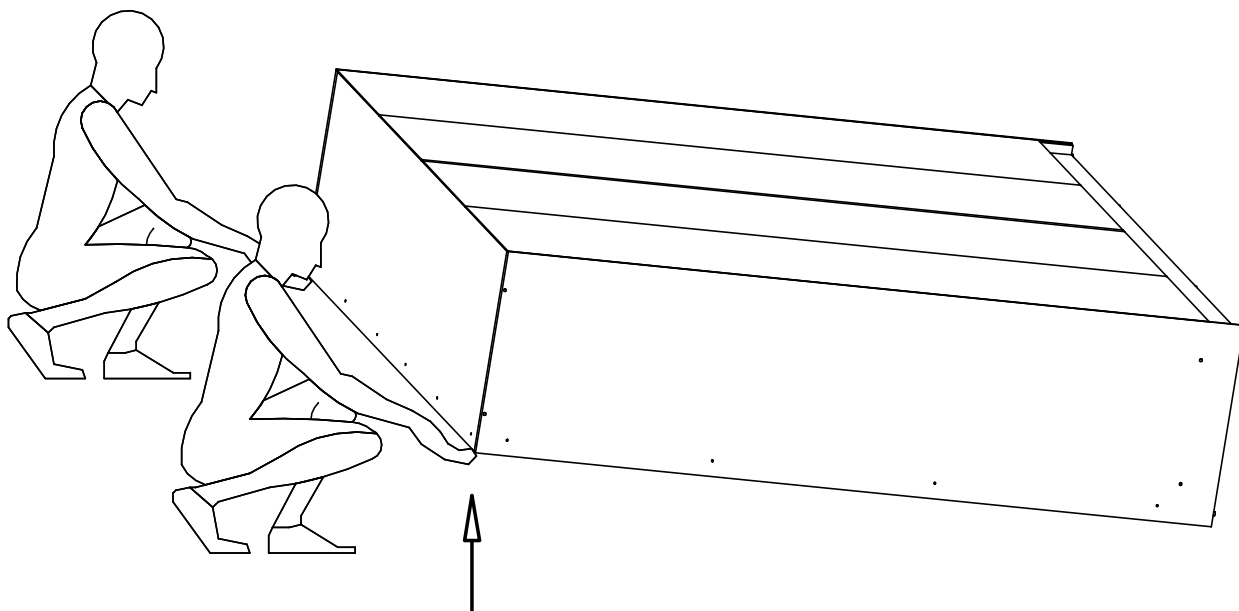


I

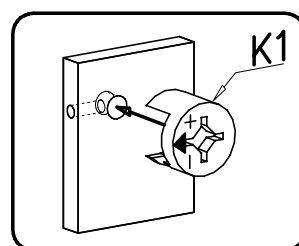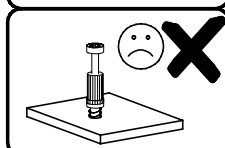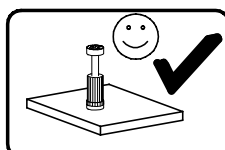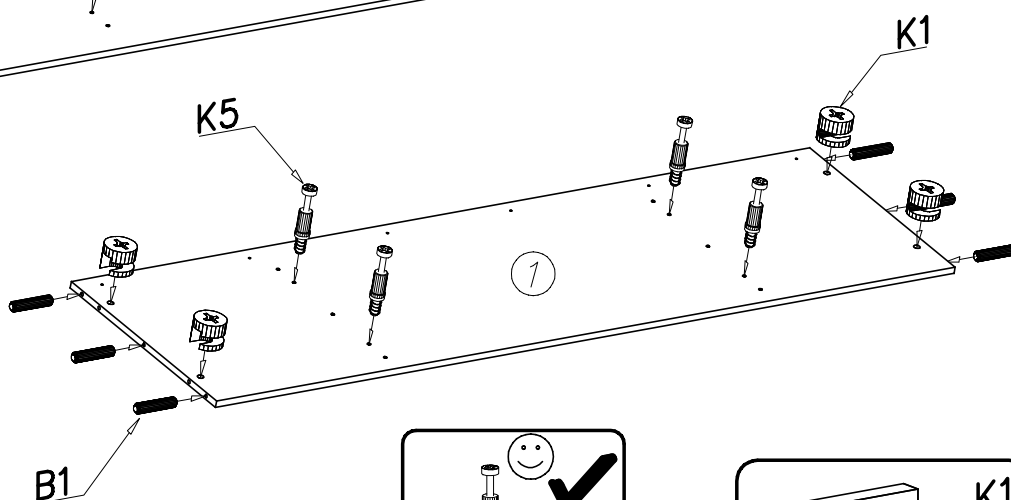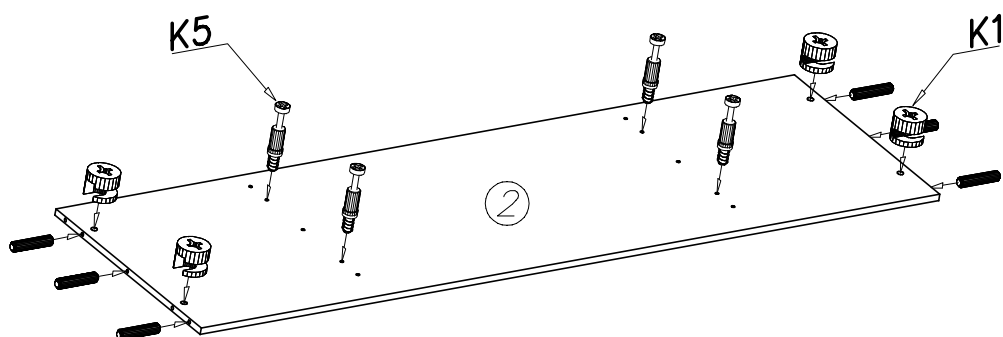

B1  $\varnothing 8 \times 35$ x...(12)	K1  $\varnothing 15 \times 12$ x...(8)	K5  $\varnothing 8 \times 35$ x...(8)
---	--	---



II

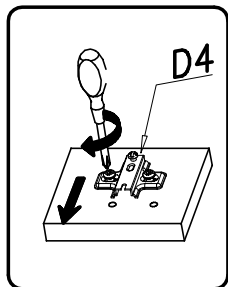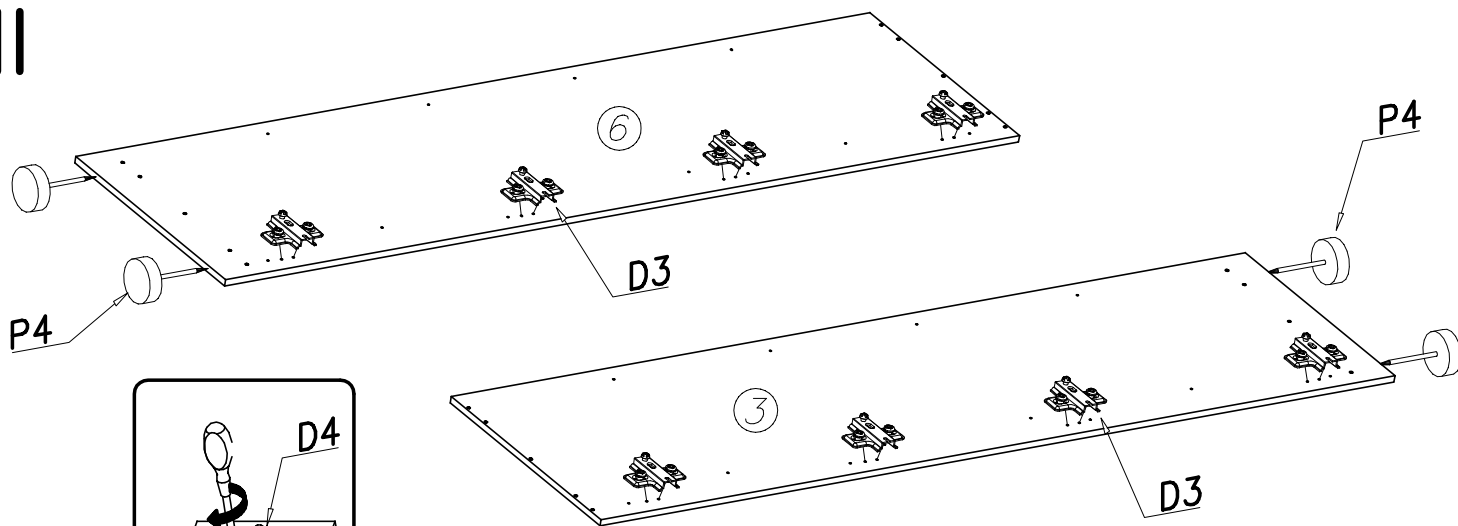

D3
PZ35PR x...(8)


P4
x...(4)

III

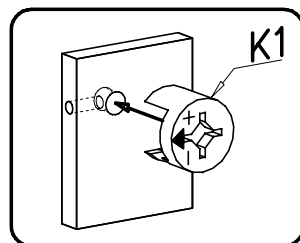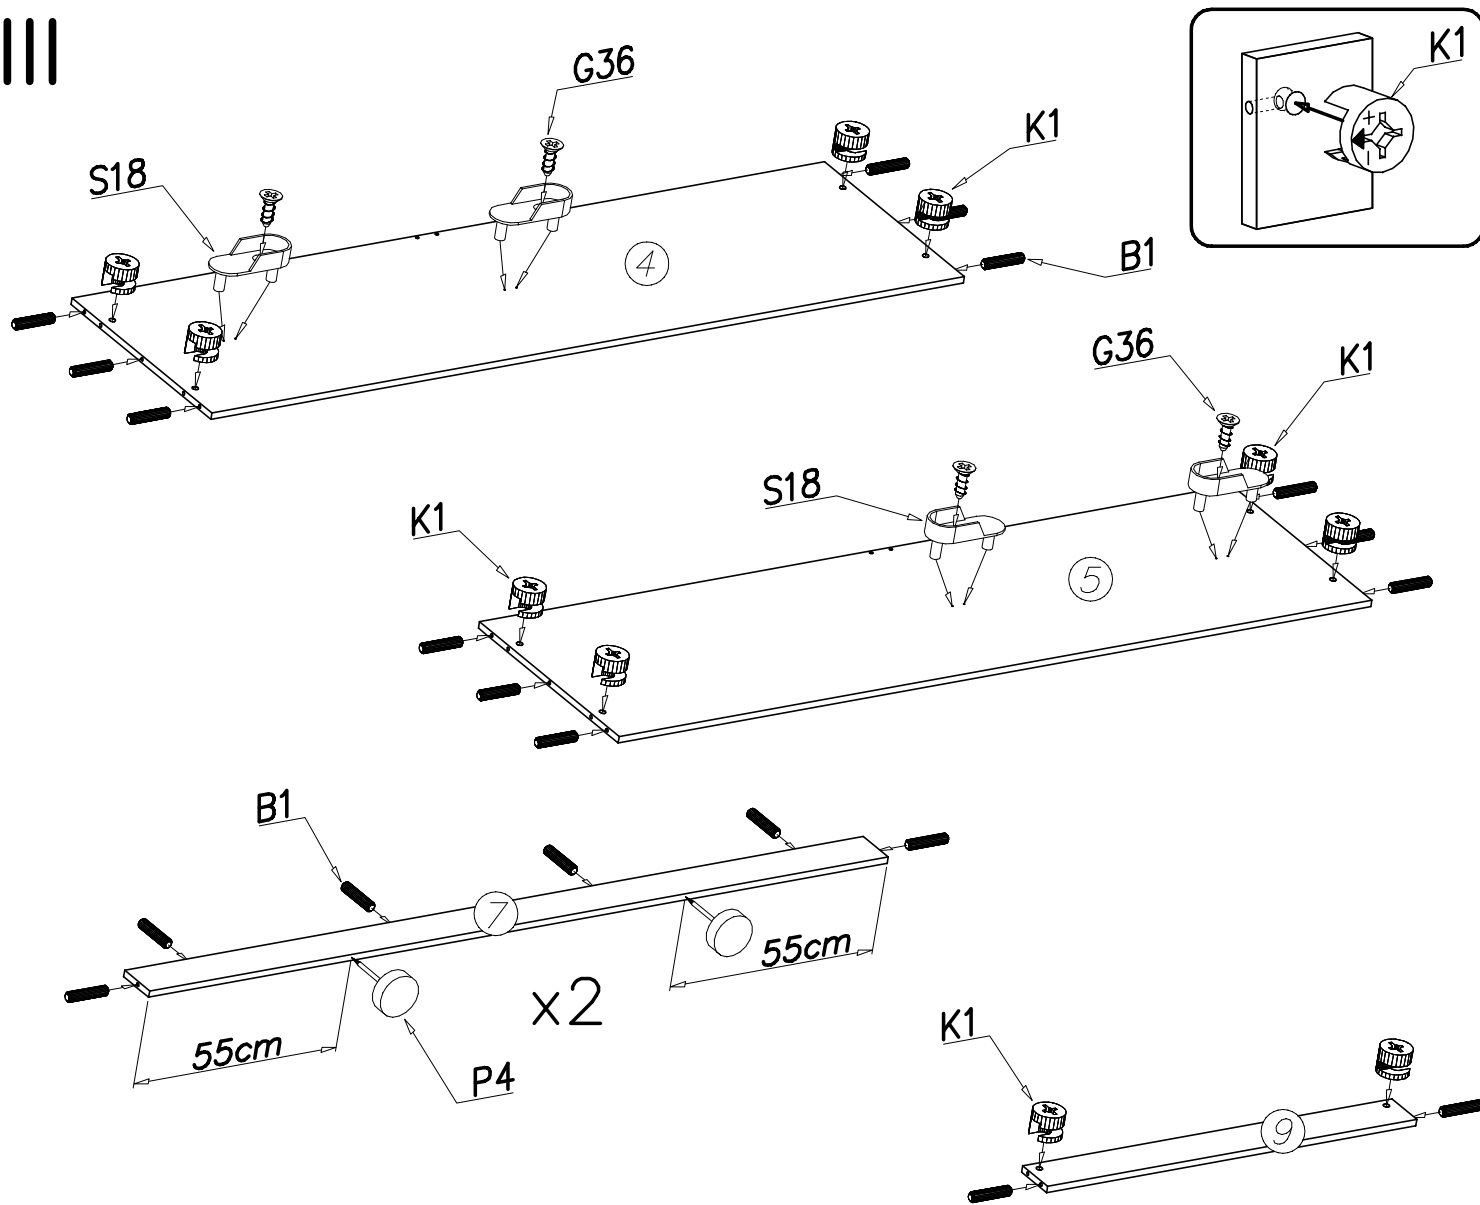


P4 x...(4)	G36 3,5x13 x...(4)	S18 x...(4)	B1 ø8x35 x...(26)	K1 ø15x12 x...(10)
---------------	-----------------------	----------------	----------------------	-----------------------





IV

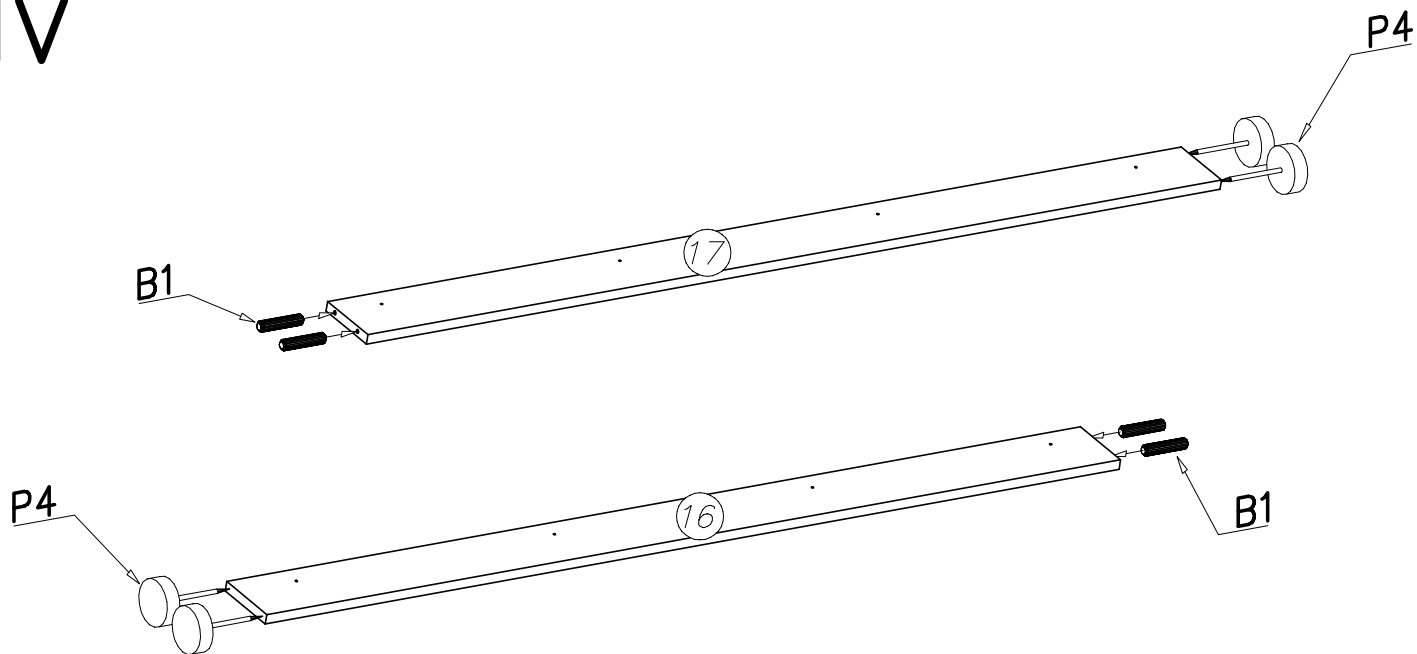





P4  x...(4)	B1  ø8x35 x...(4)
--	--

V

K19  x...(2)

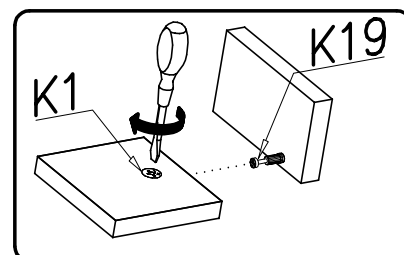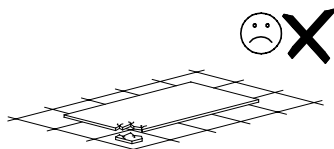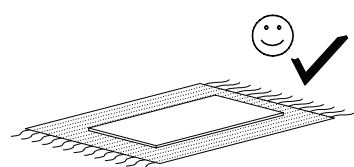
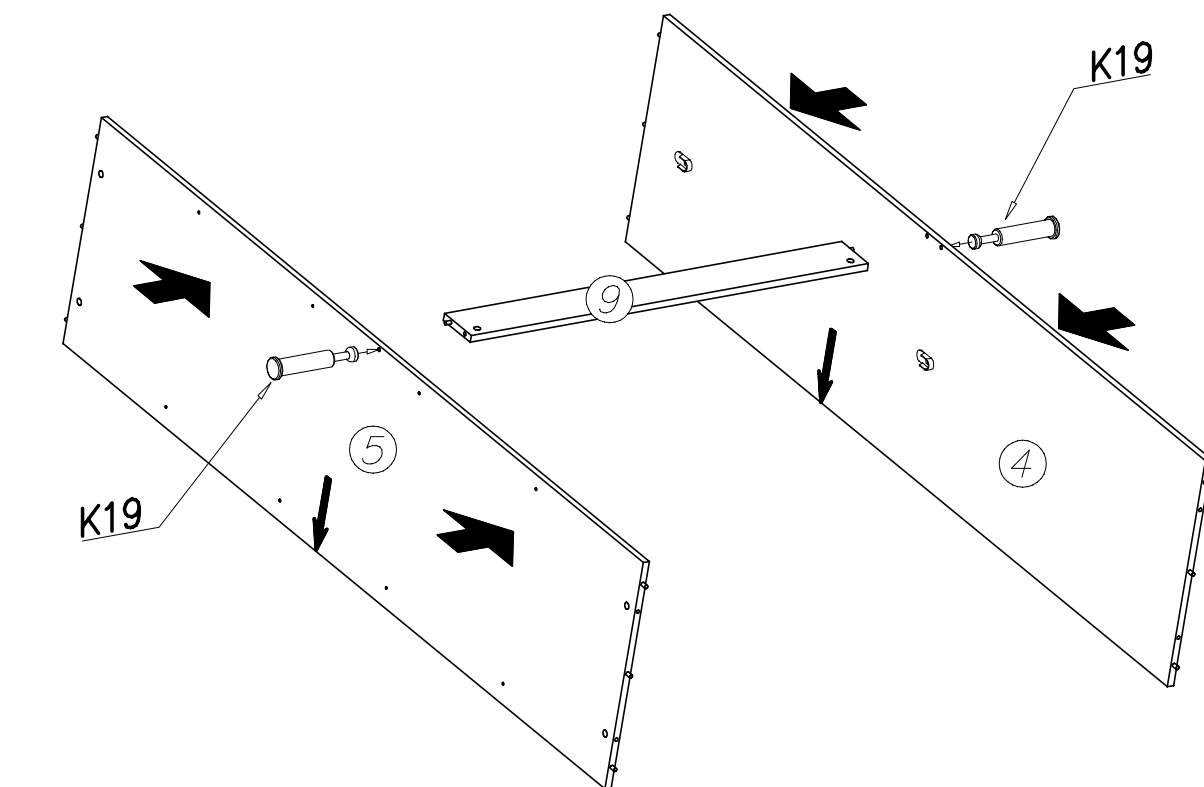


VI

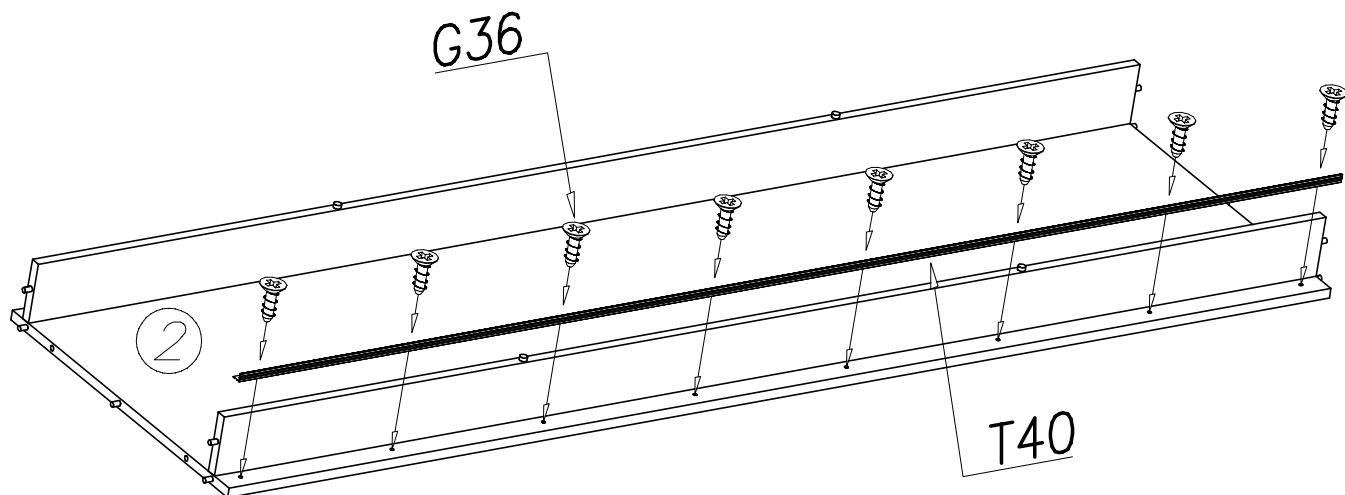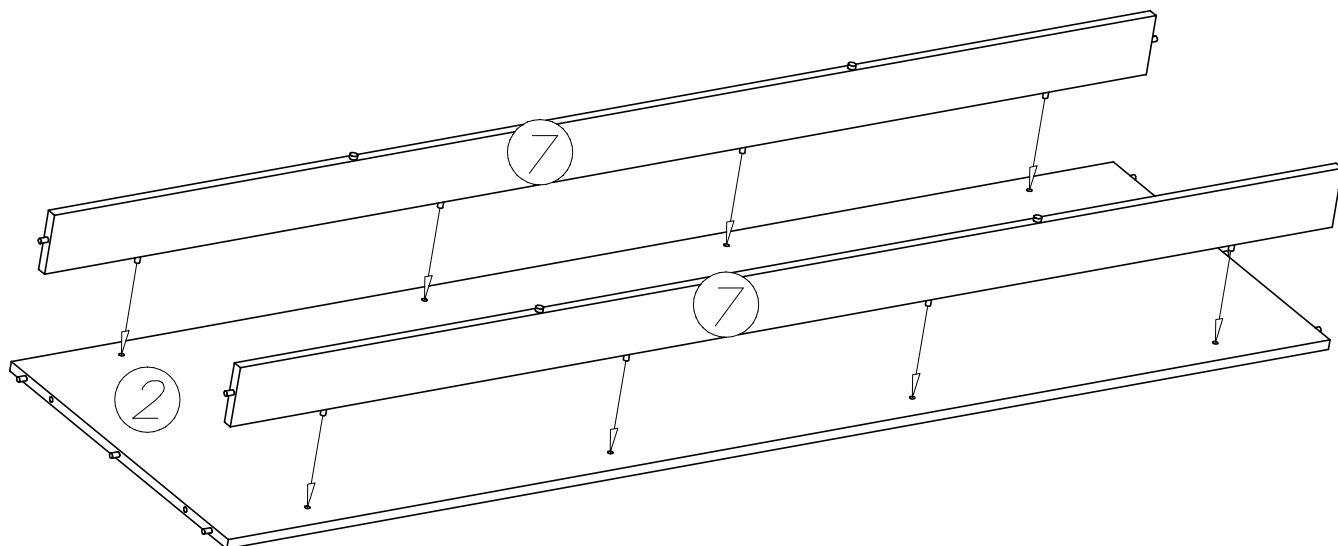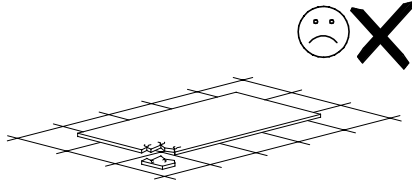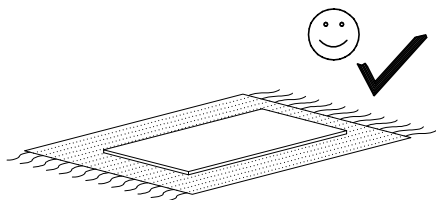

T40		G36	
	x...(1)	3,5x13	x...(8)

VII

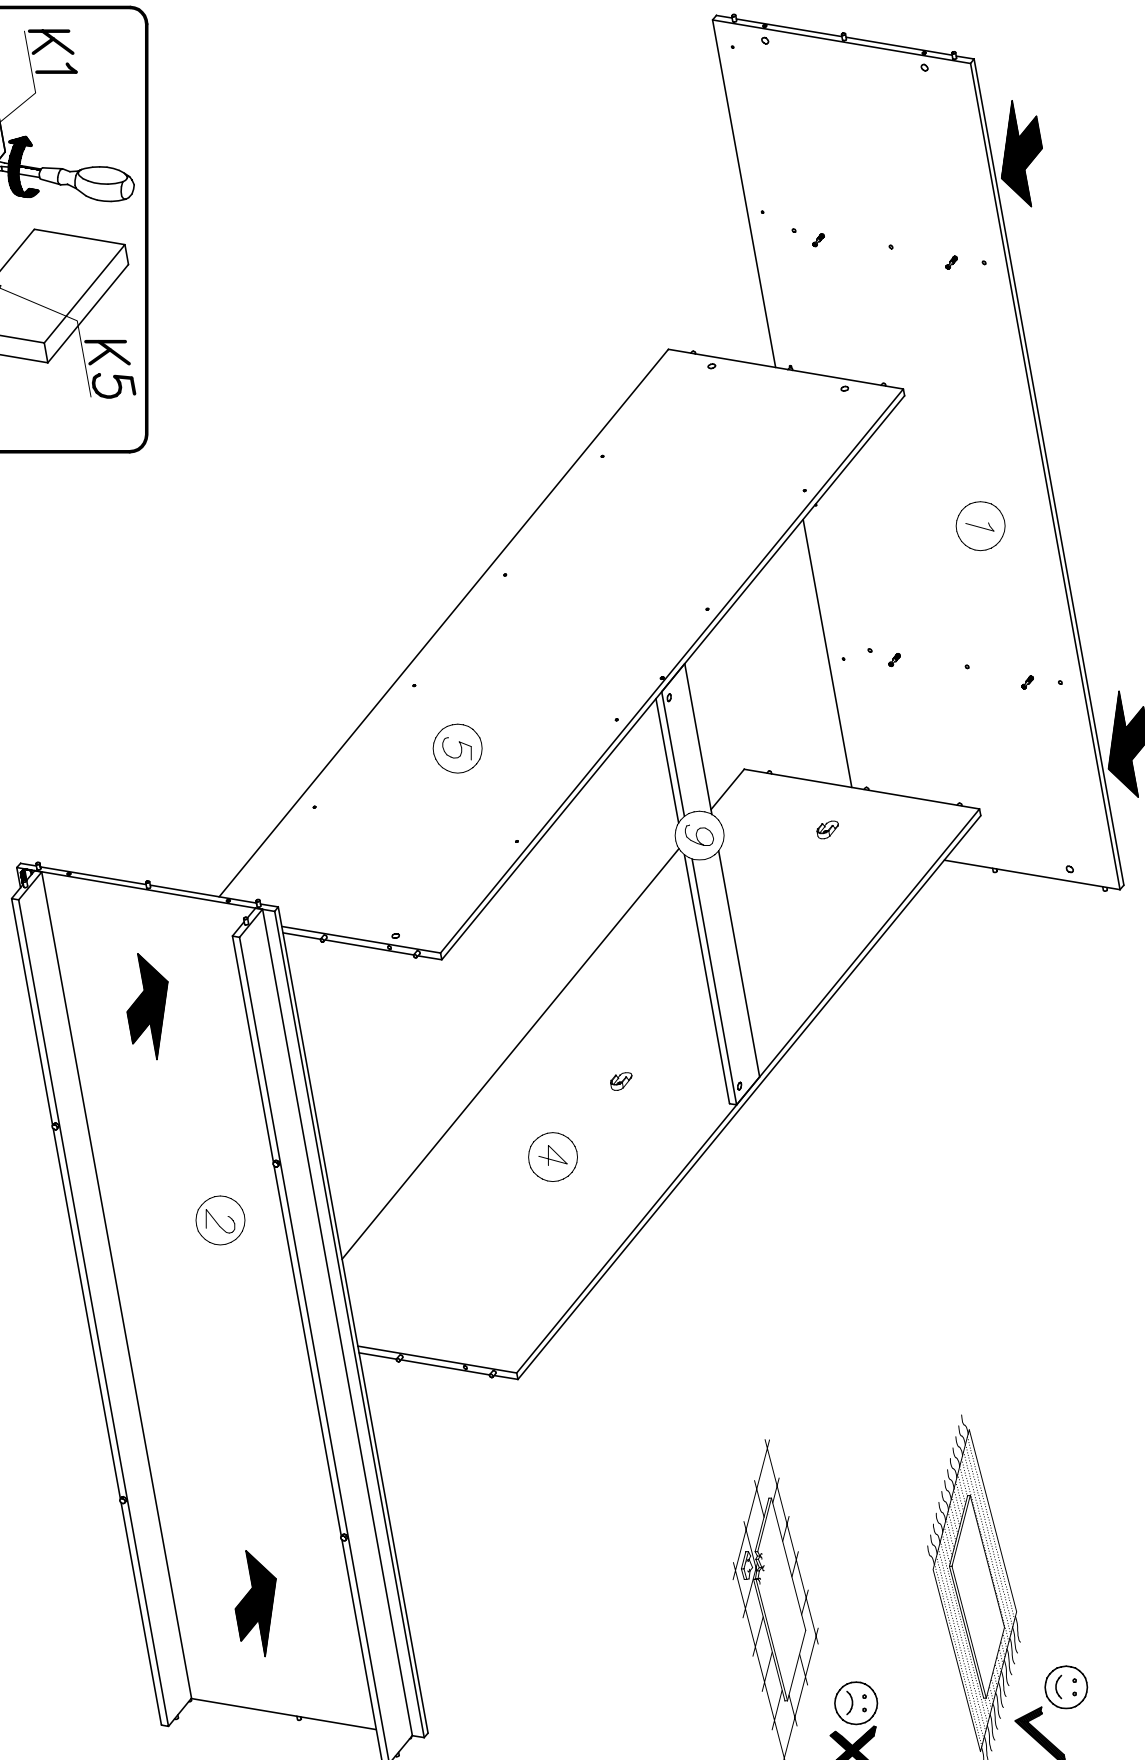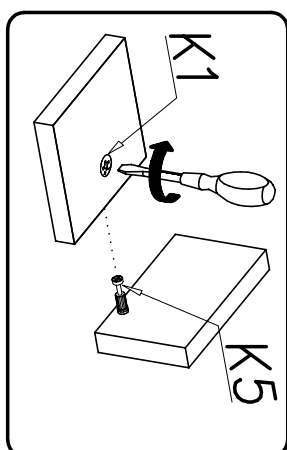

VIII

Diagram illustrating the assembly of a shelving unit, specifically step VIII. The diagram shows the unit's structure with numbered components (1-9) and arrows indicating the direction of assembly.

Key components and labels:






- K19**: Cam bolt (used for attaching panels and shelves).
- K1**: Cam lock (used for securing the shelves).
- 1-9**: Numbered components representing different parts of the unit.

Assembly instructions:




- Attach the side panel (2) to the back panel (1) using cam bolts (K19).
- Attach the bottom panel (3) to the side panel (2) using cam bolts (K19).
- Attach the middle shelf (4) to the side panel (2) using cam bolts (K19).
- Attach the top shelf (5) to the side panel (2) using cam bolts (K19).
- Attach the top panel (6) to the side panel (2) using cam bolts (K19).
- Secure the shelves (4 and 5) using cam locks (K1) and shelf supports (K19).


Warning: The unit should be placed on a soft surface (smiley face) and not directly on a hard floor (sad face with X).

IX

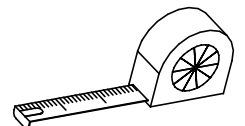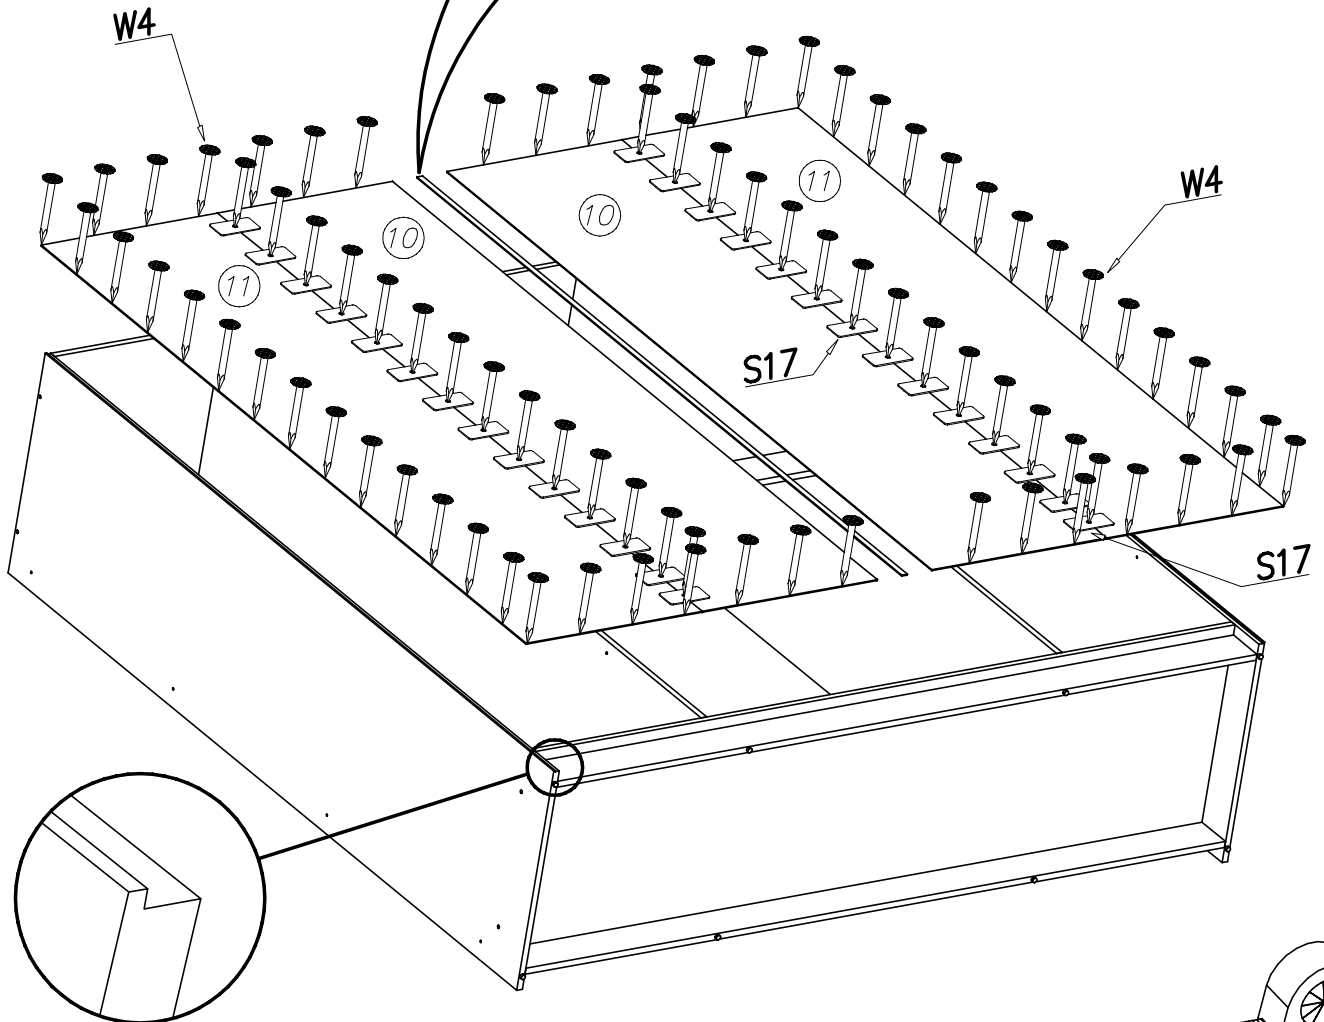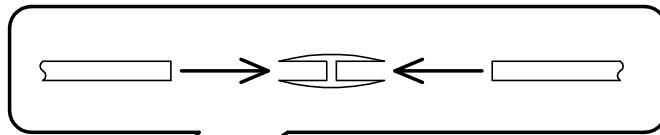


$$a=b$$

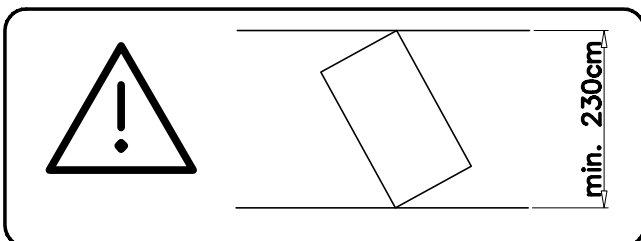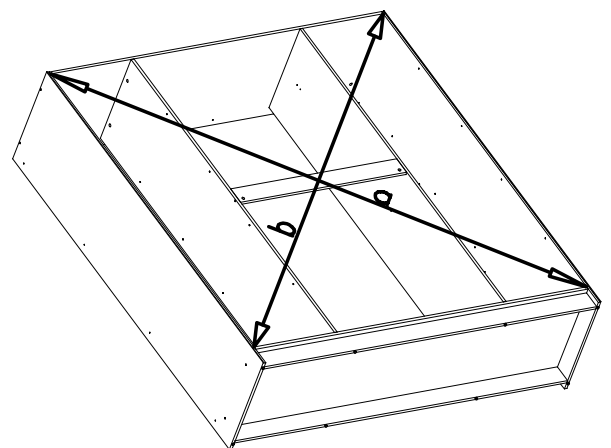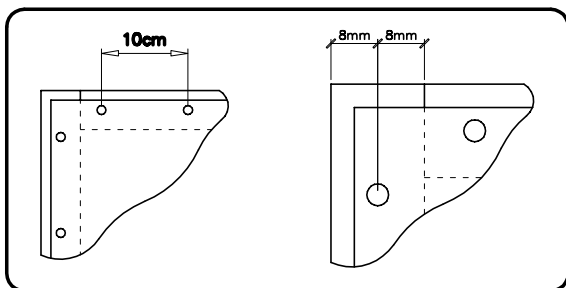


S17	S1	W4
		
x...(30)	x...(1)	x...(100)


X

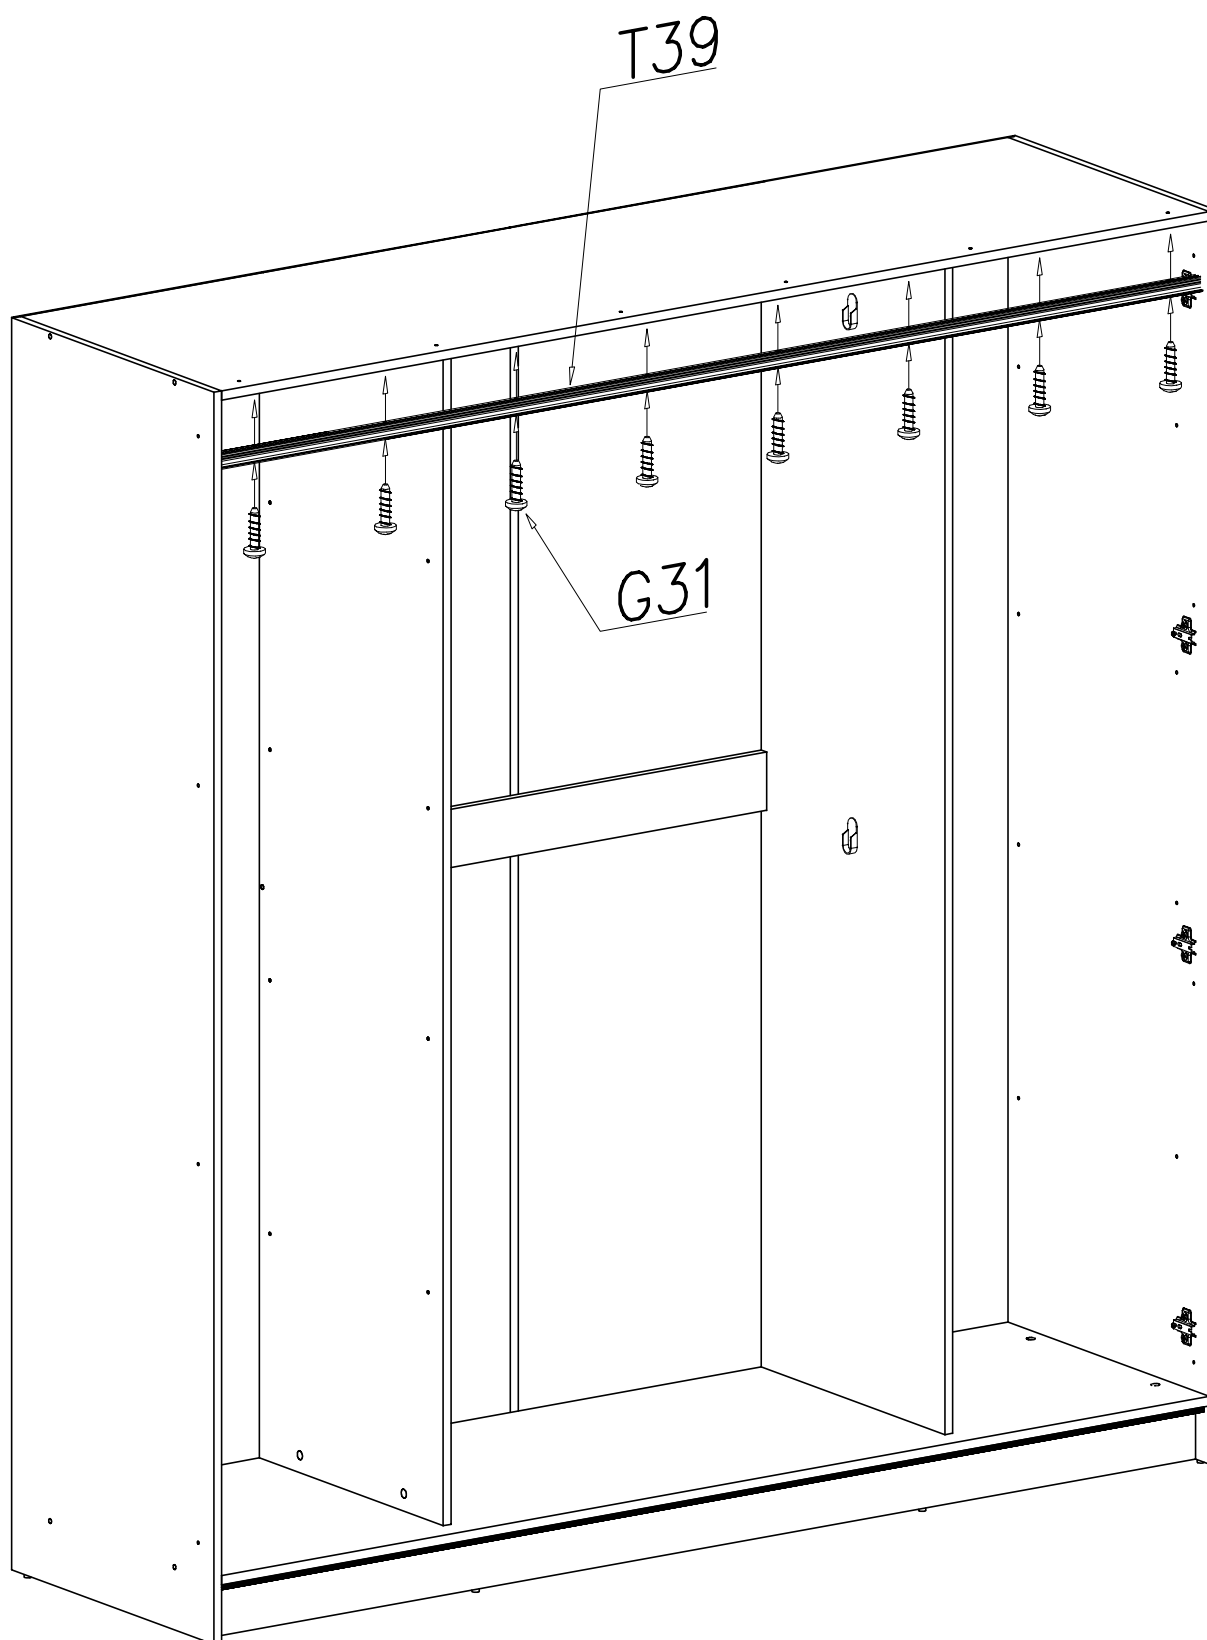




T39		x...(1)	G31		3,5x16	x...(8)
-----	--	---------	-----	---	--------	---------


XI

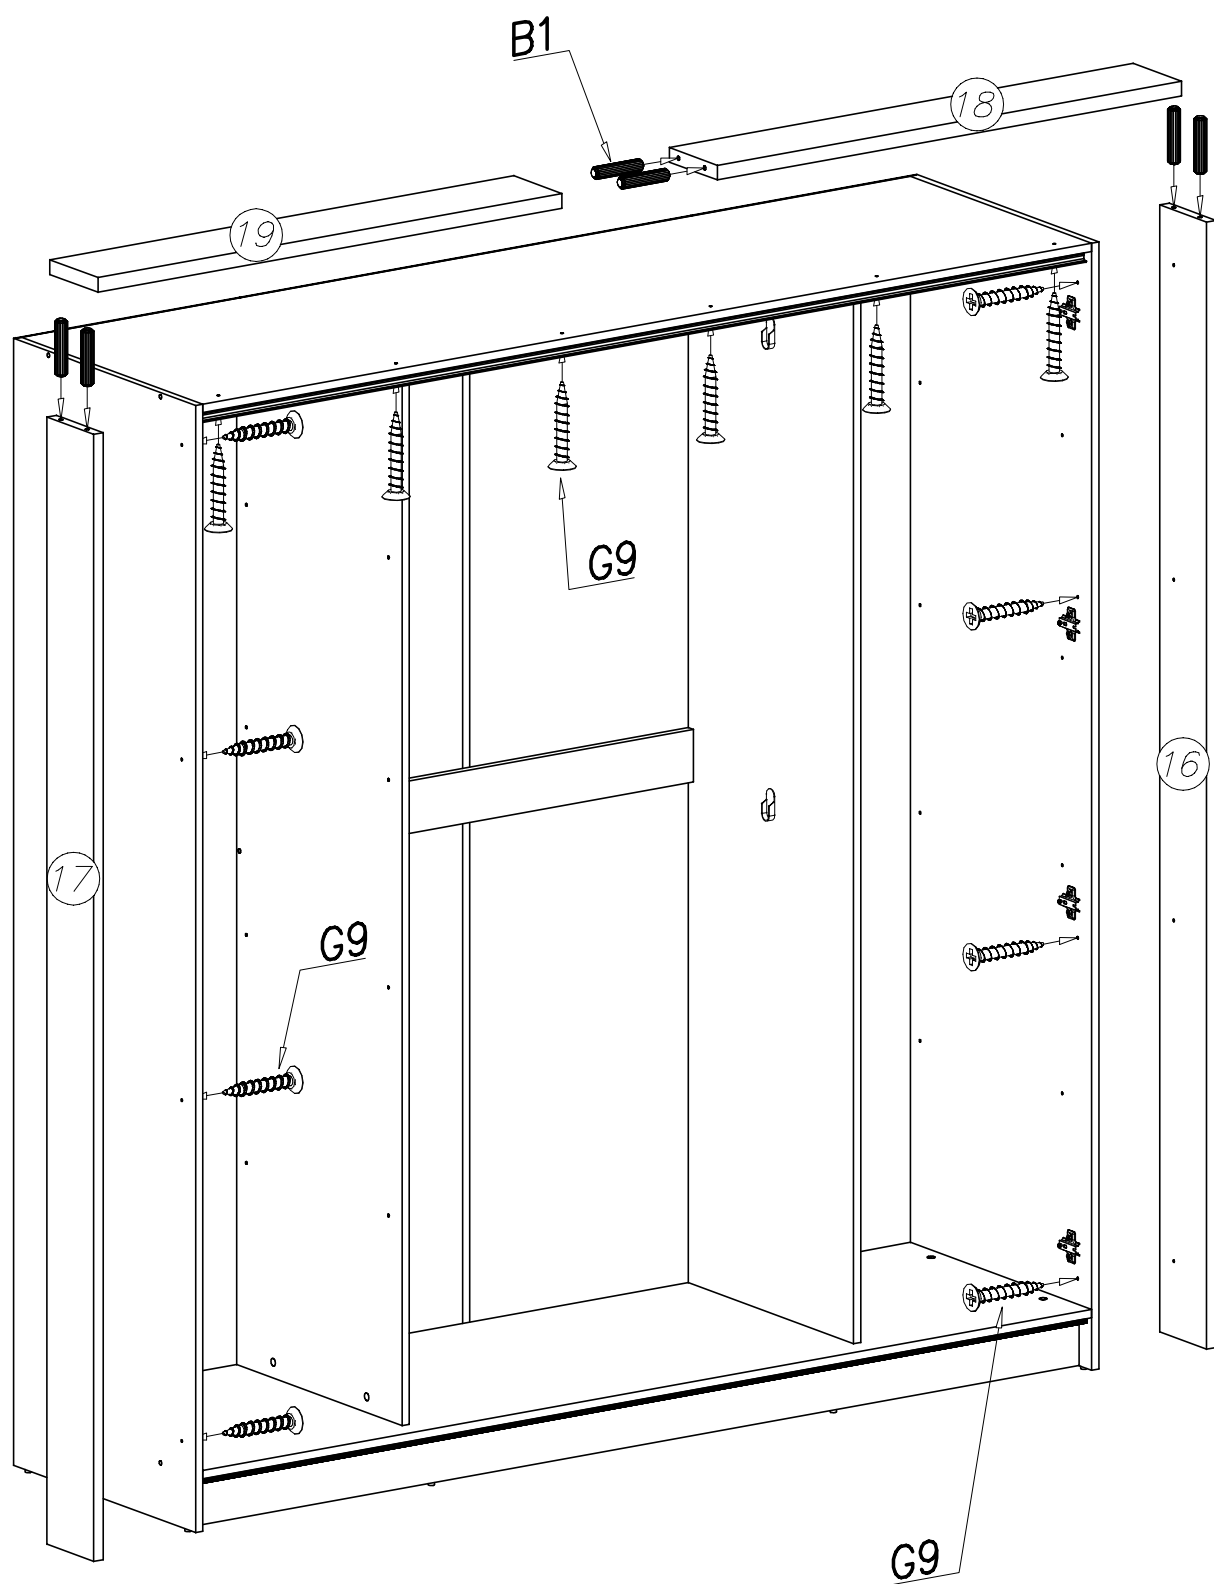



G9  3x35 x...(14)	B1  ø8x35 x...(6)
---	--

XII

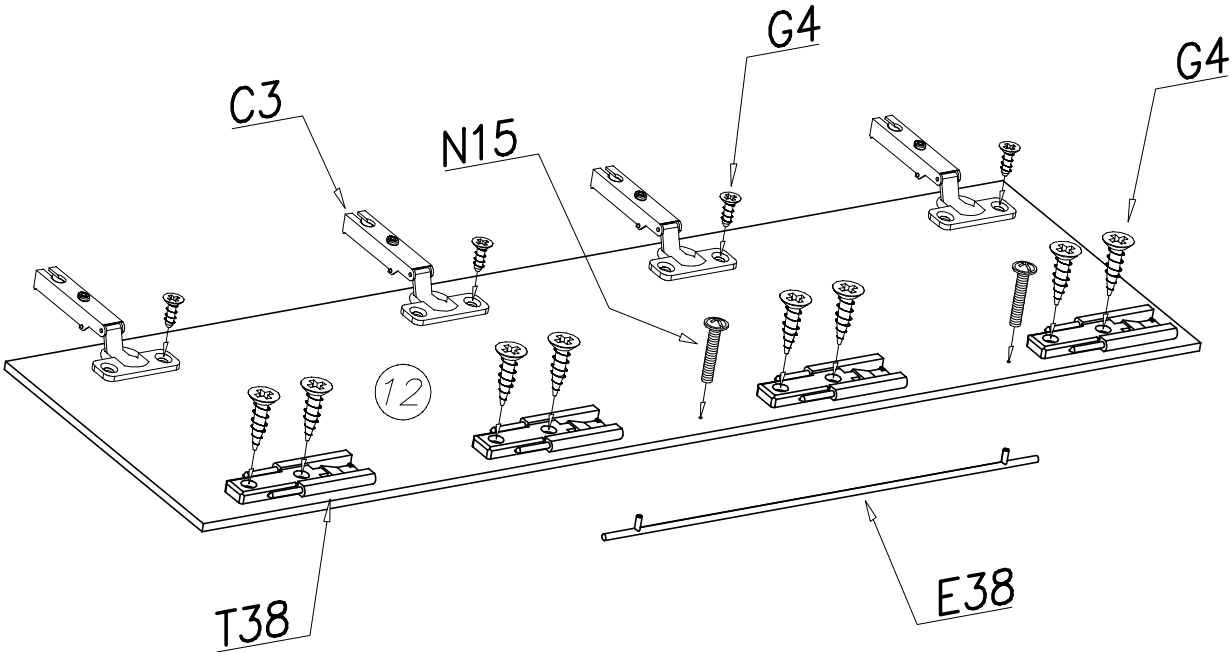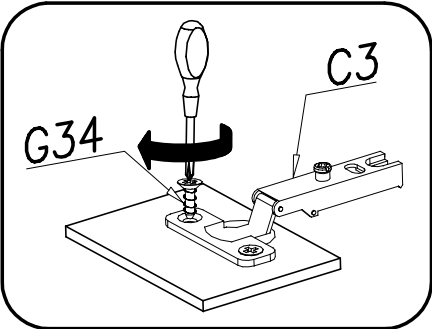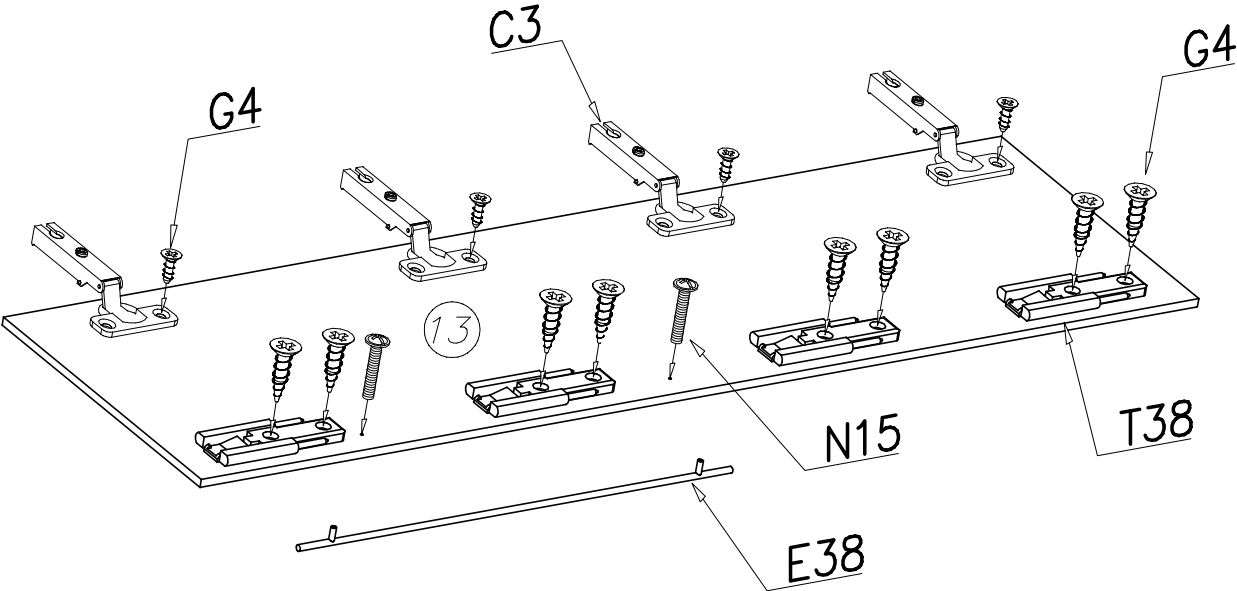



E38				x...(2)
T38		G4		x...(32)
	4x16	N15		x...(4)
	M4x25	C3		x...(8)
			Z35PR	x...(8)

XIII

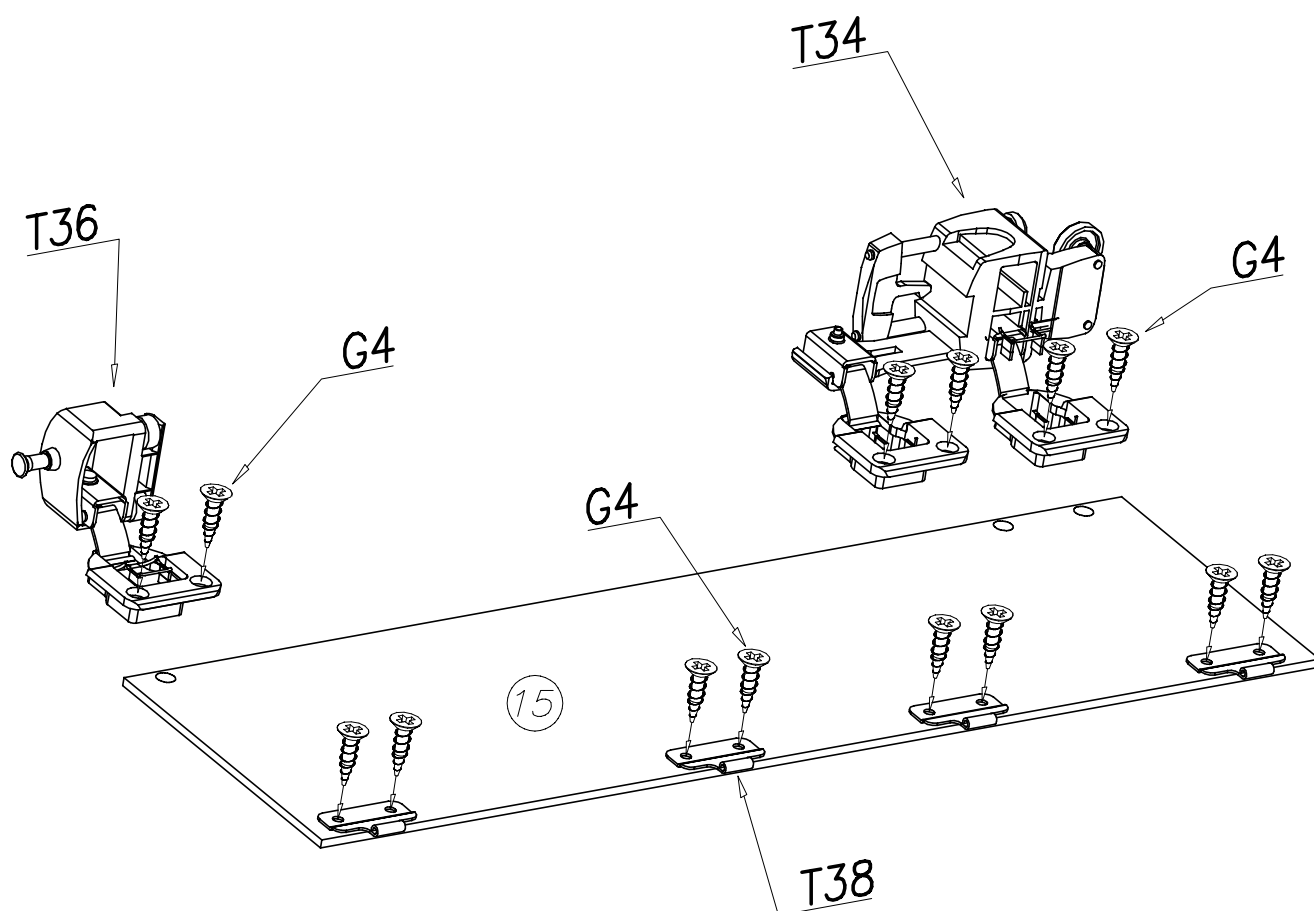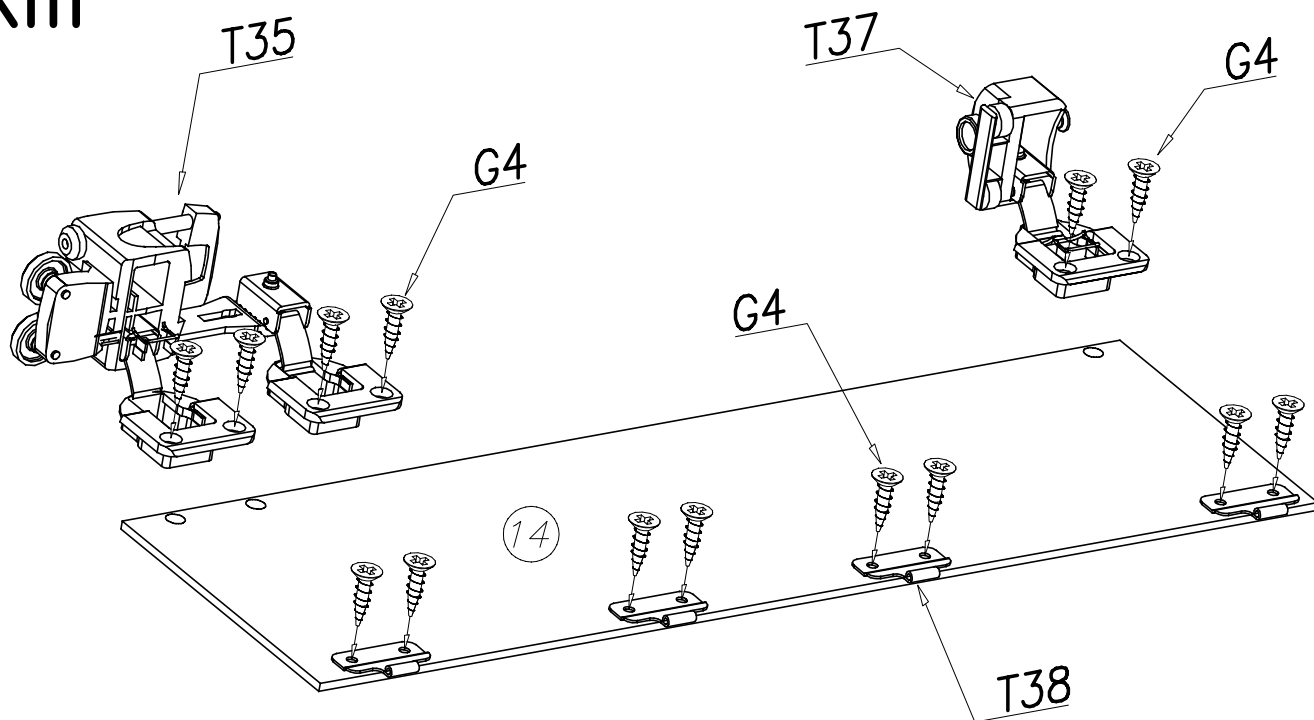





T37  x...(1)	T36  x...(1)	G4  4x16 x...(28)	T38  x...(8)	T34  x...(1)
T35  x...(1)				

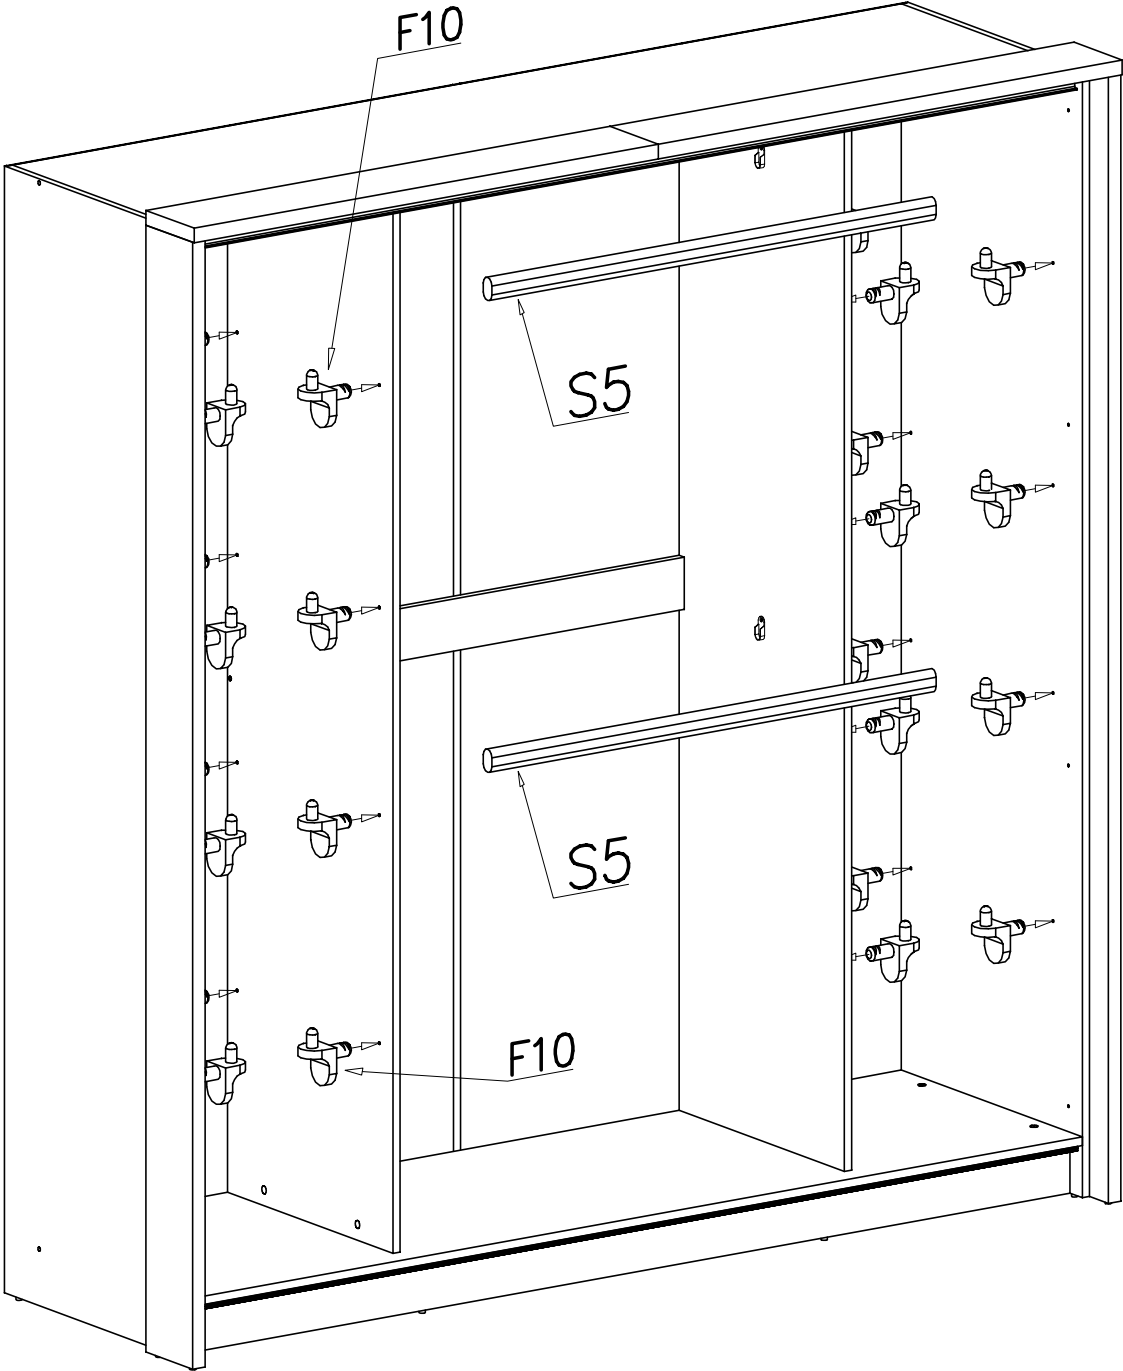





F10		S5	
	x...(32)		x...(2)

XV

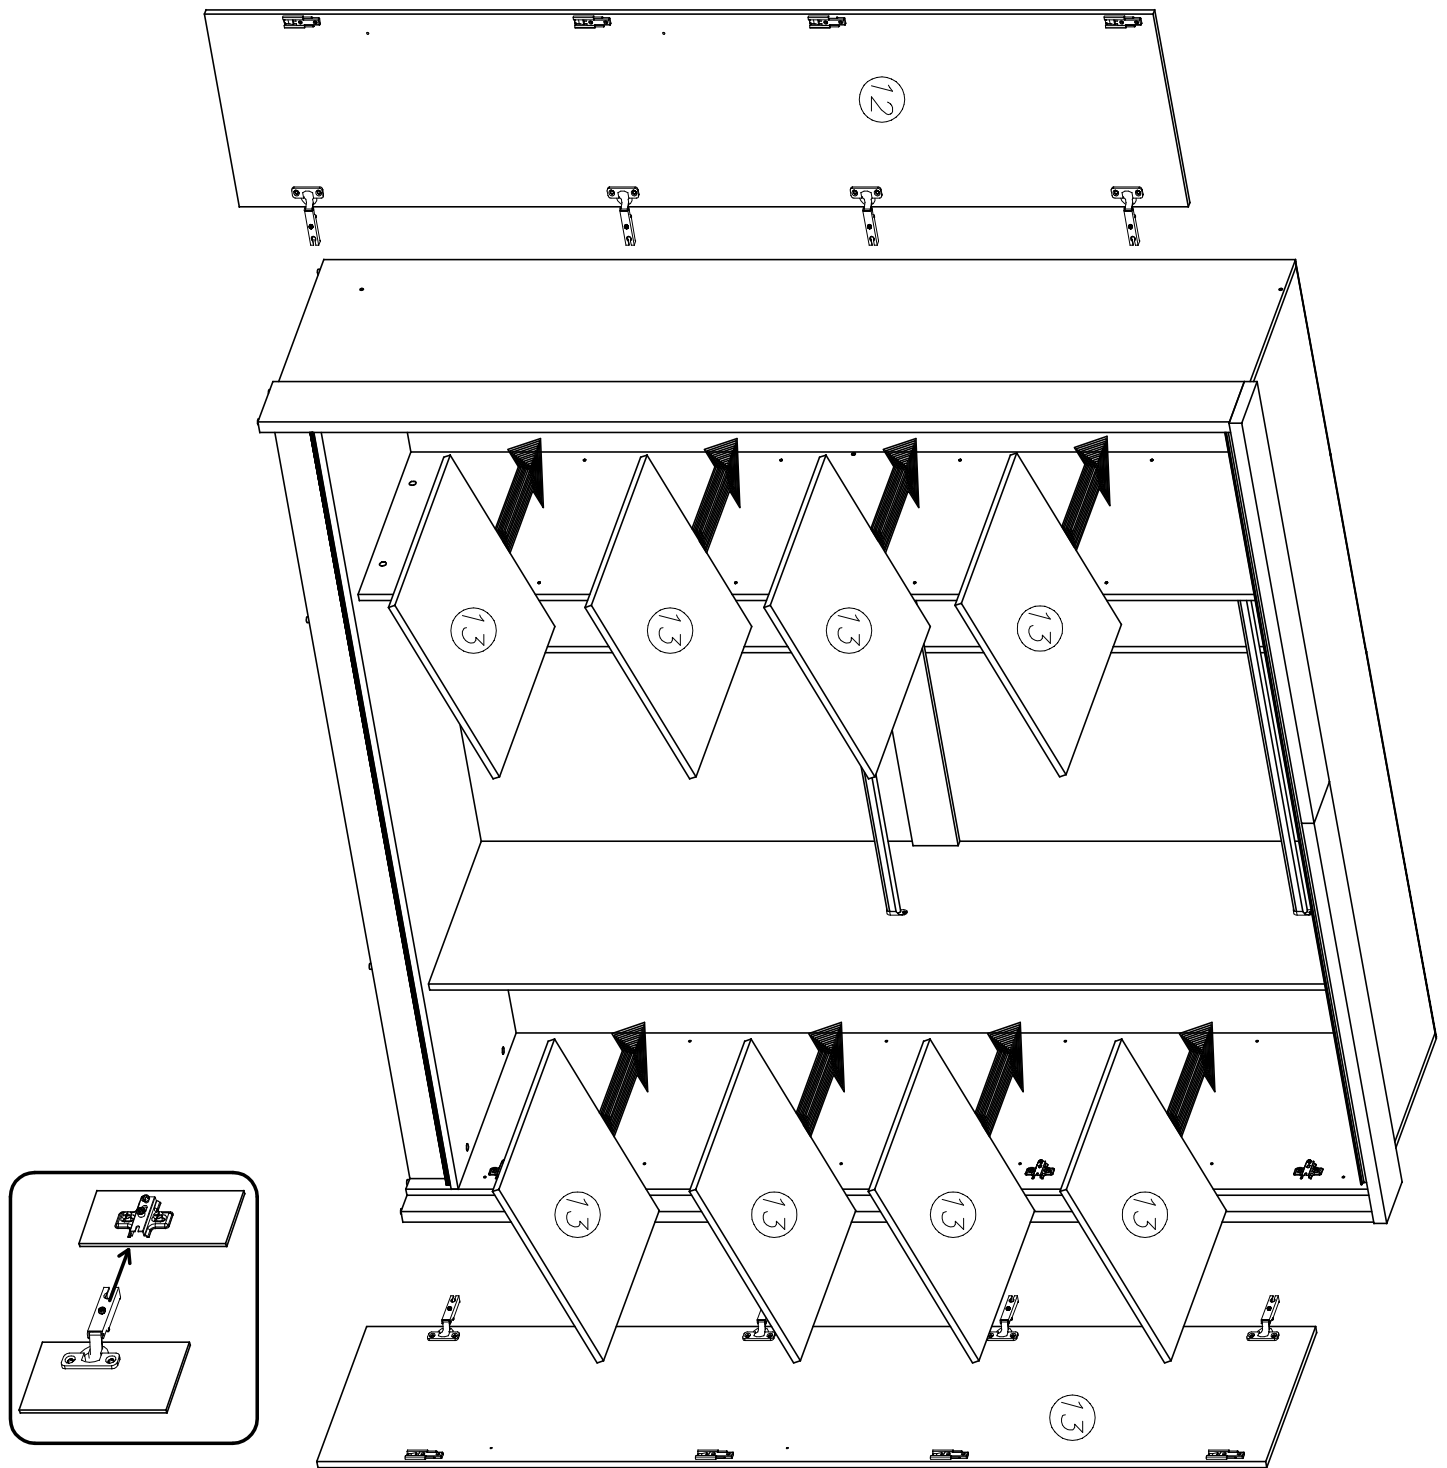

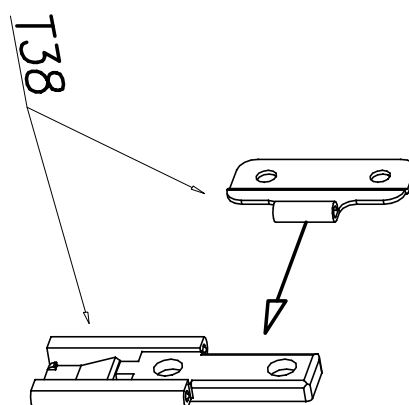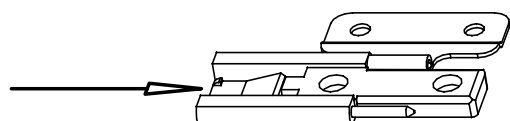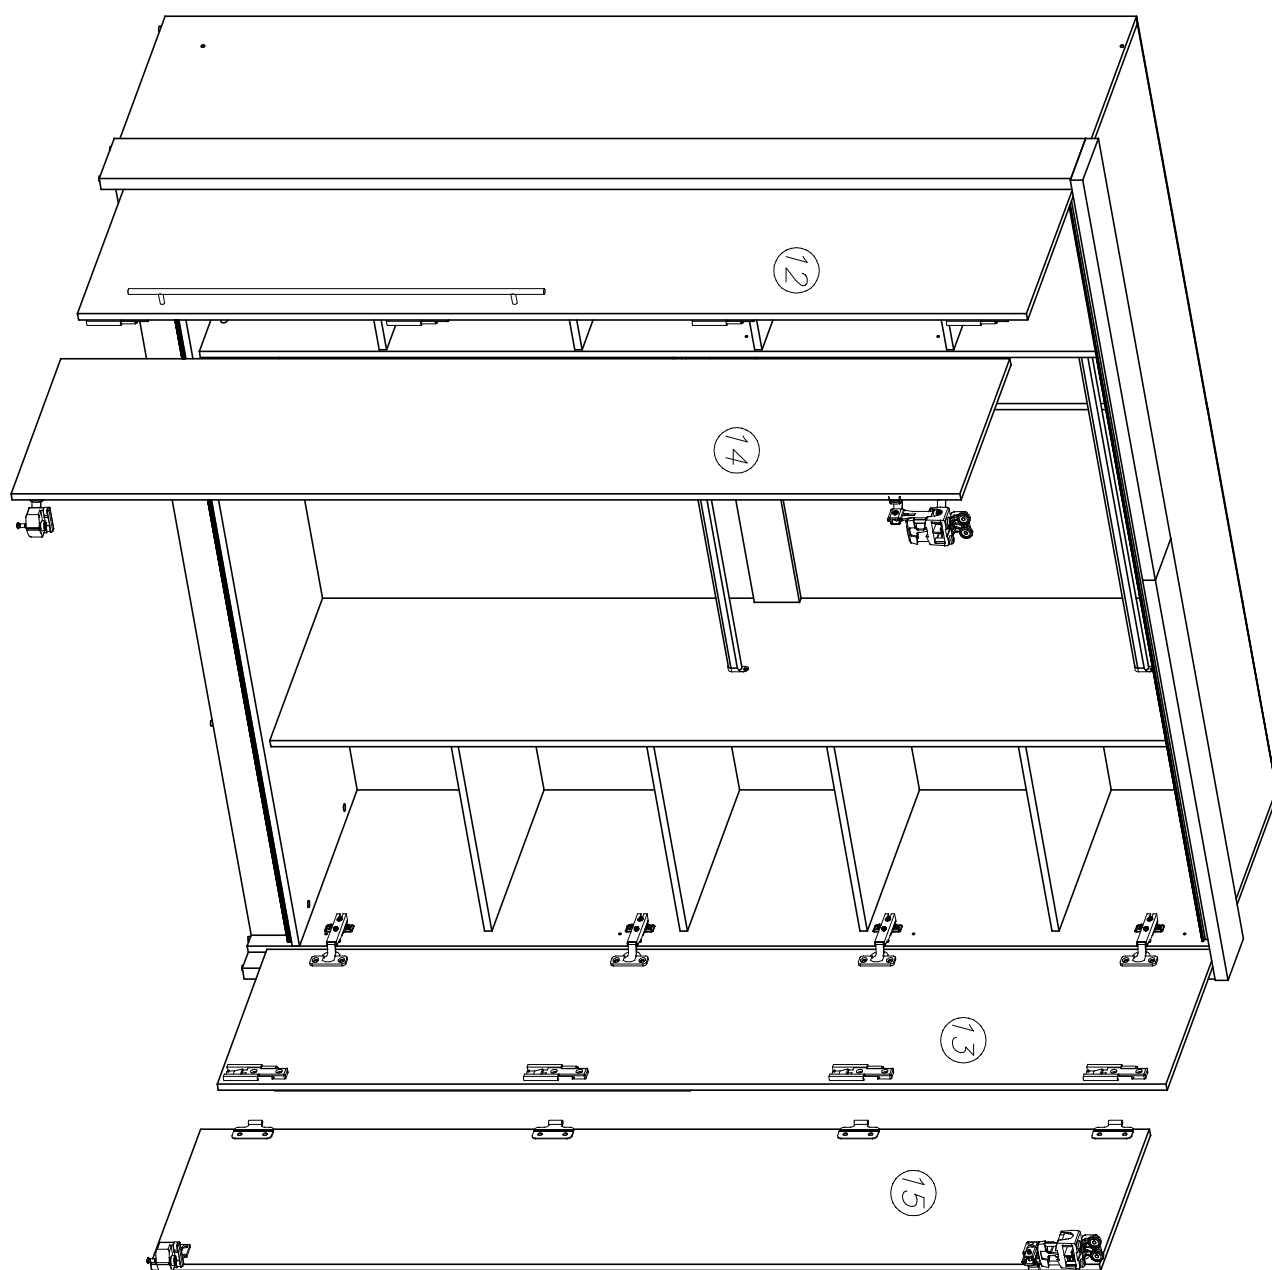

XVII

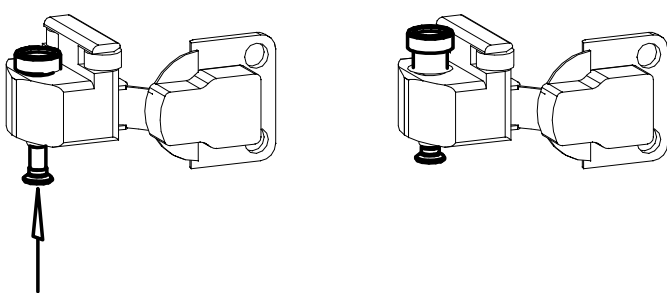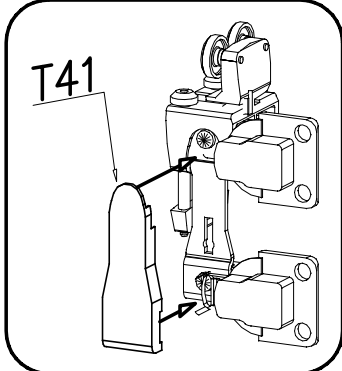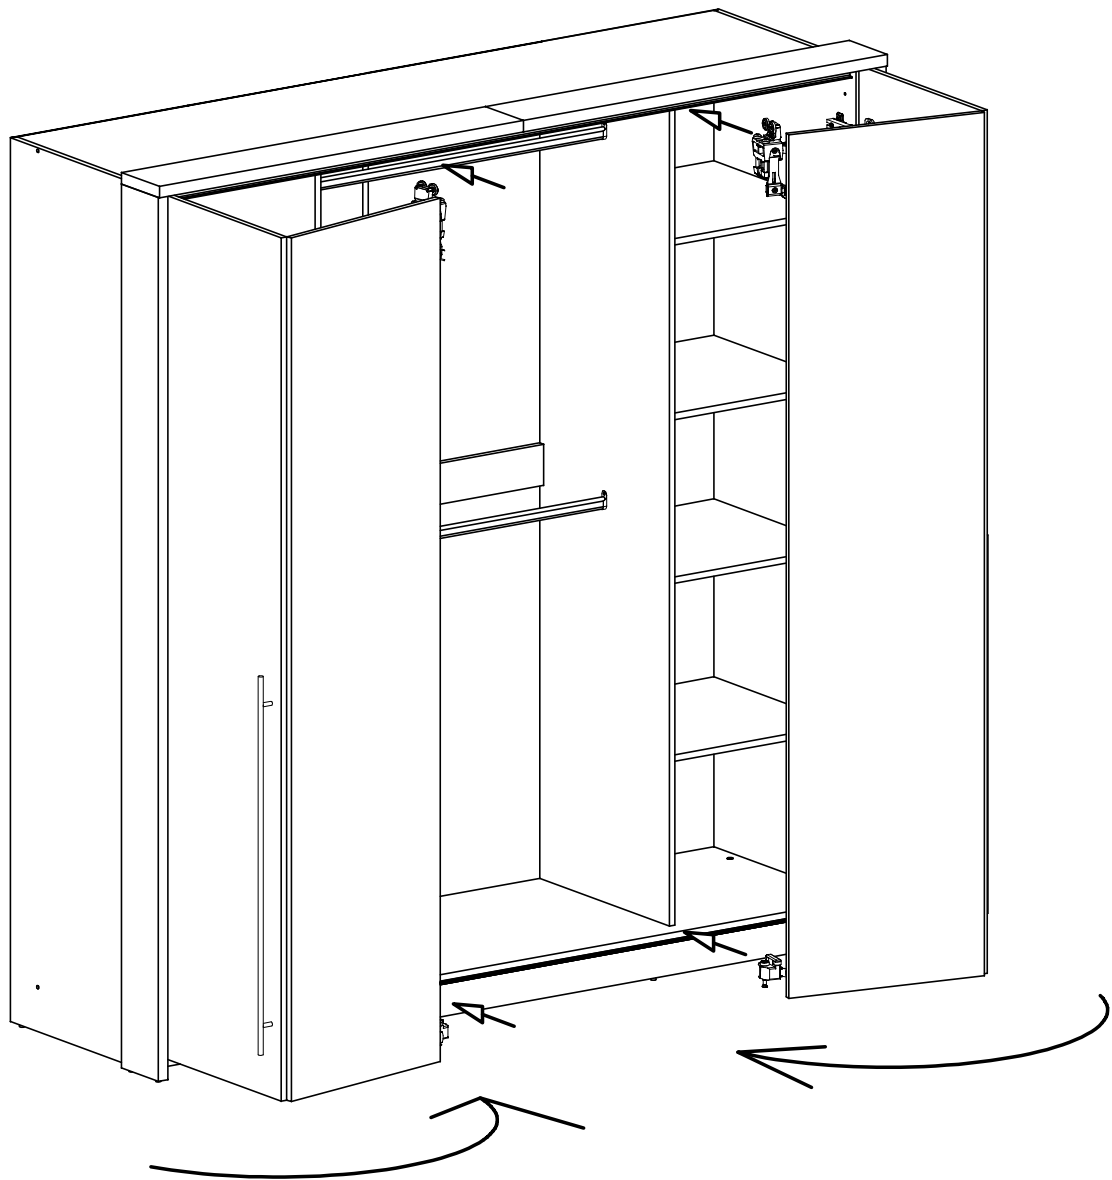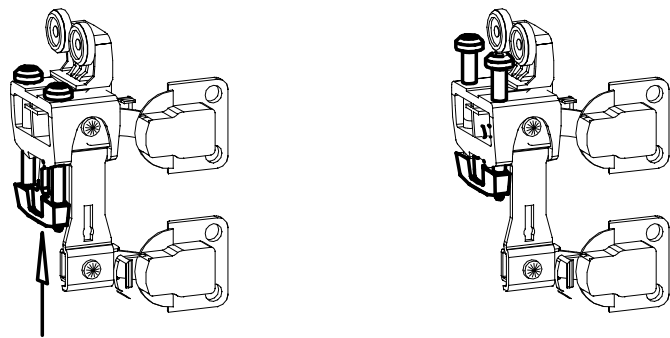

XVIII

