
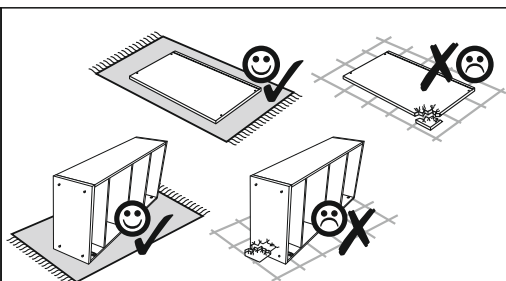
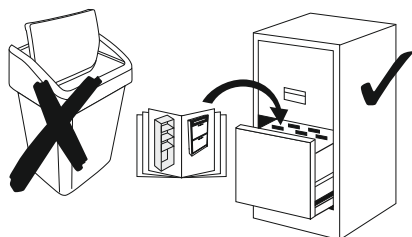
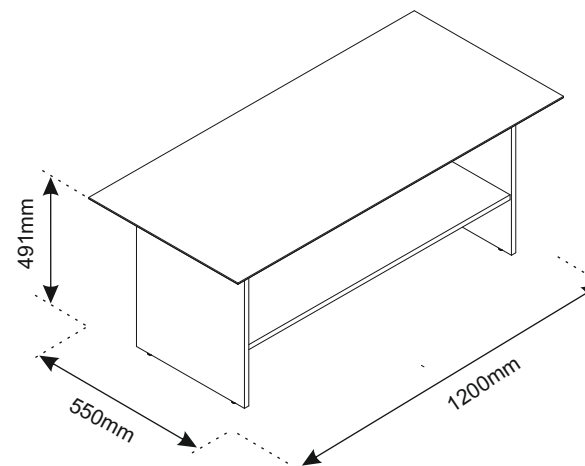
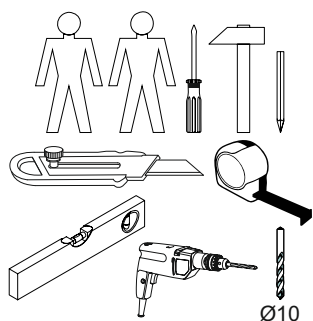



Instrukcja montażowa


LAW 120 SORETTO

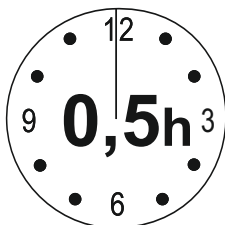

Kod	Wymiary				Pakiet
001	1200	550	16	1	1/1
002	968	388	16	1	1/1
003	470	398	16	2	1/1
004	968	100	16	1	1/1
Akcesoria					1/1


Akcesoria:

12x r1 15x12 	10x f1 Ø8x30 	12x r16 Ø5x24 	4x k1 
1x z1 	4x s2 		

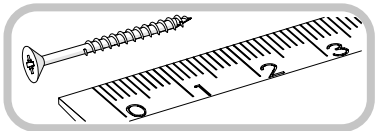


1


			
x12	x10	x12	x4

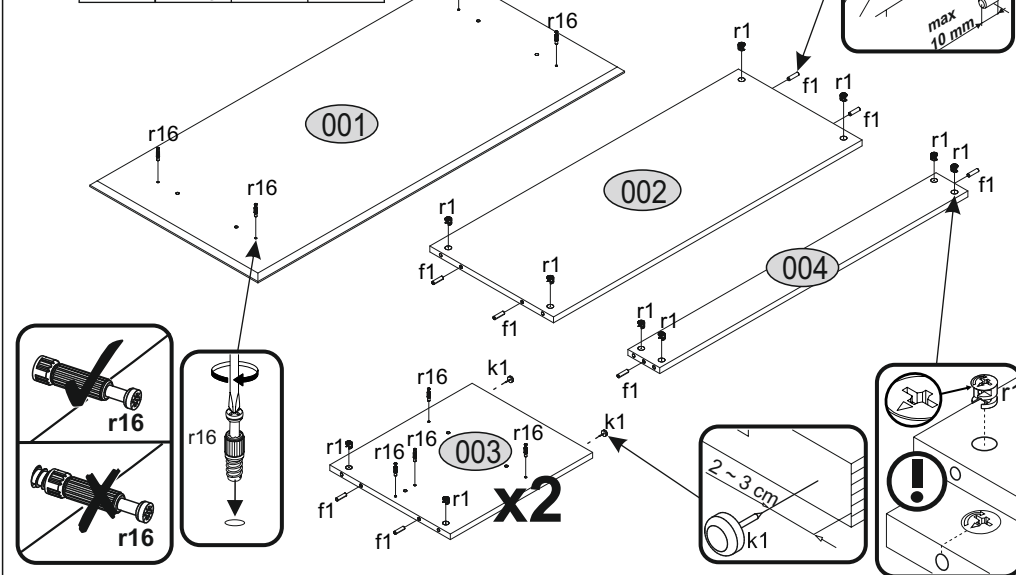

2

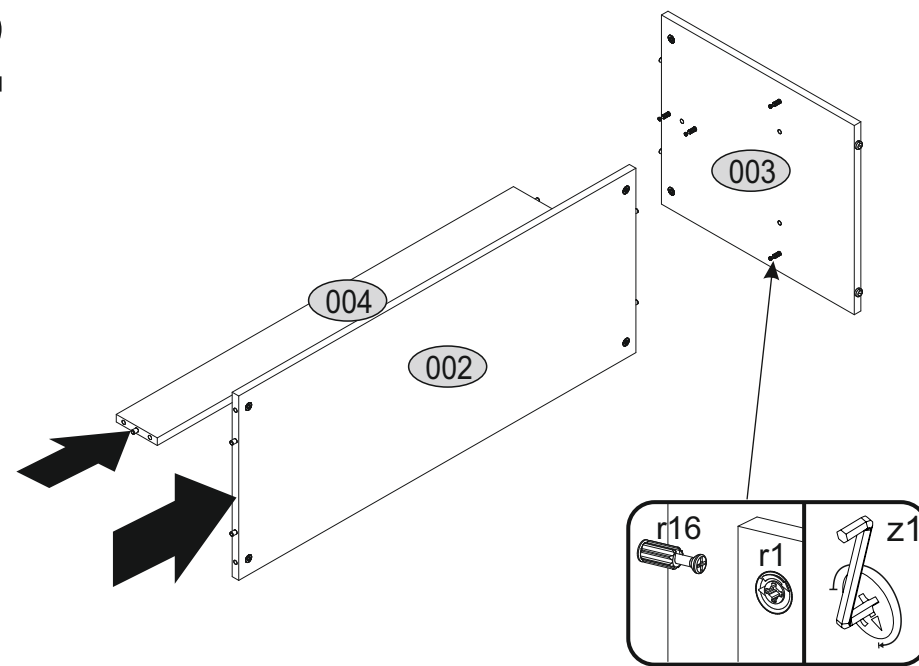

3

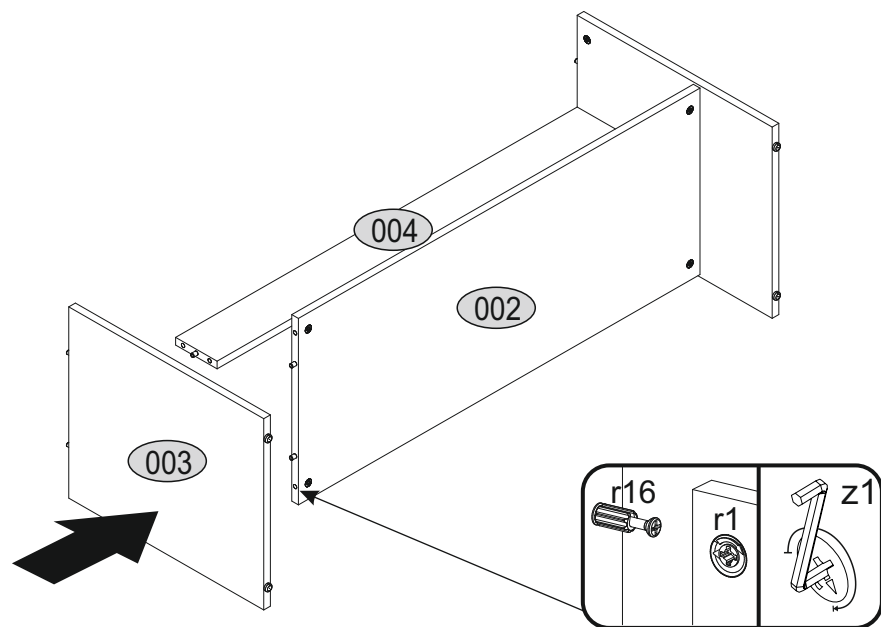

4


x4

