

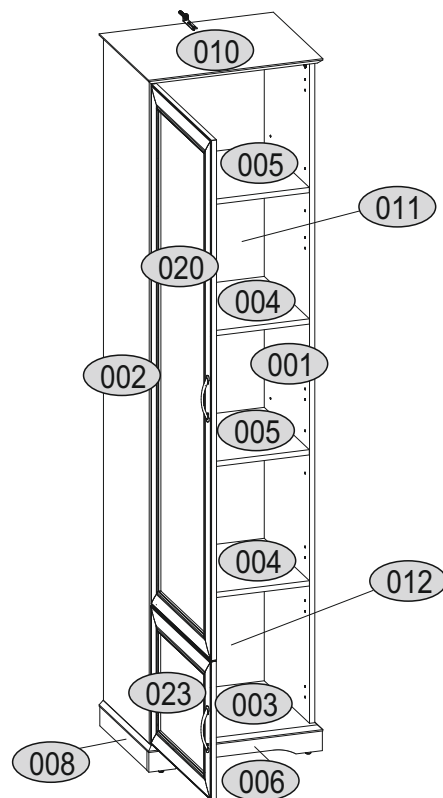
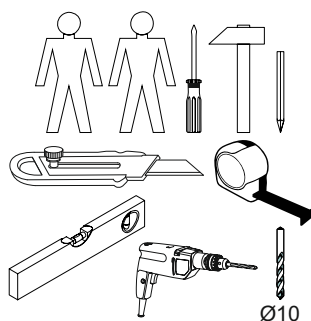
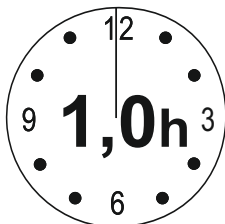
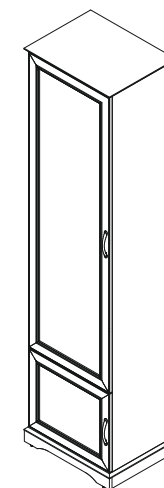
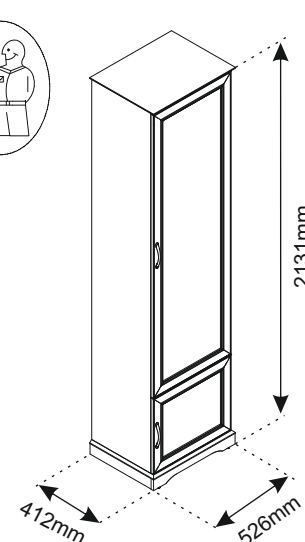


Instrukcja montażowa


REG 2D SORETTO

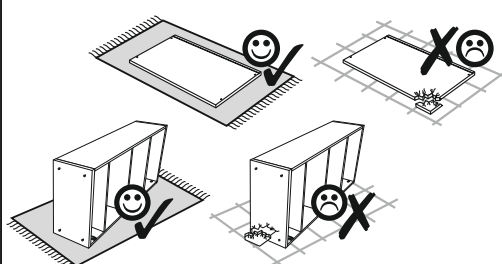


Kod	Wymiary				Pakiet
001	2006	381	16	1	1/2
002	2006	381	16	1	1/2
003	528	412	16	1	1/2
004	470	376	16	2	1/2
005	470	375	16	2	1/2
006	526	60	16	1	1/2
007	395	60	32	1	1/2
008	395	60	32	1	1/2
010	528	412	16	1	1/2
011	1591	487	2,5	1	2/2
012	433	487	2,5	1	2/2
020	1577	500	18	1	2/2
023	500	420	18	1	2/2
Akcesoria					1/2

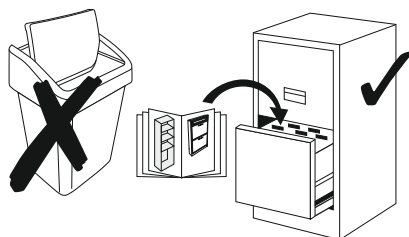









Akcesoria:

8x d1 	22x f1 <i>Ø8x30</i> 	1x f3 	1x n14 
1x p17 <i>Ø6x50</i> 	19x p25 <i>Ø3.5x16</i> 	18x r1 <i>15x12</i> 	18x r16 <i>Ø5x24</i> 
6x k1 	1x n260.01 	2x c80 	1x z1 
6x a144 	6x b119 	4x e1 <i>Ø7x50</i> 	40x l1 
12x s2 	28x s4 	2x n221.01 	

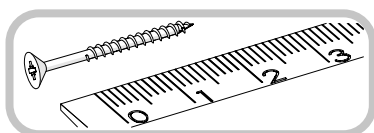

1





					
x14	x14	x10	x6	x2	x2

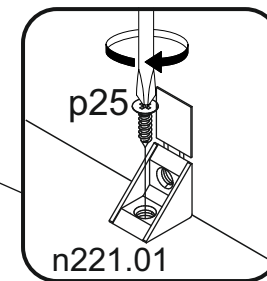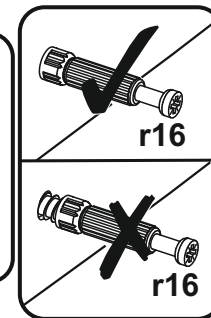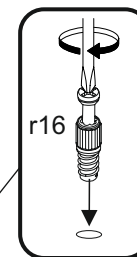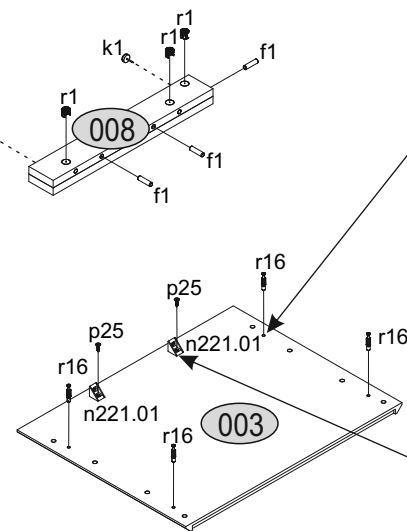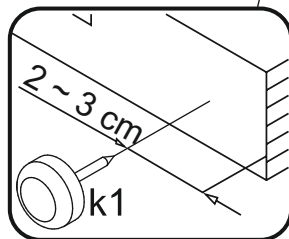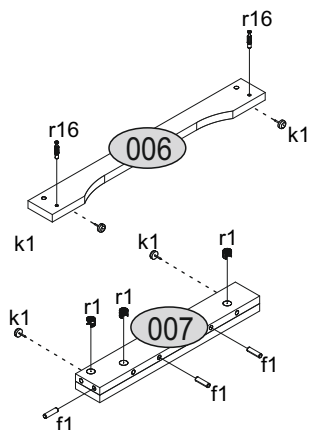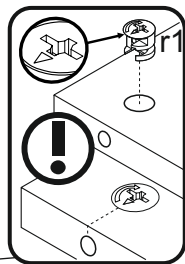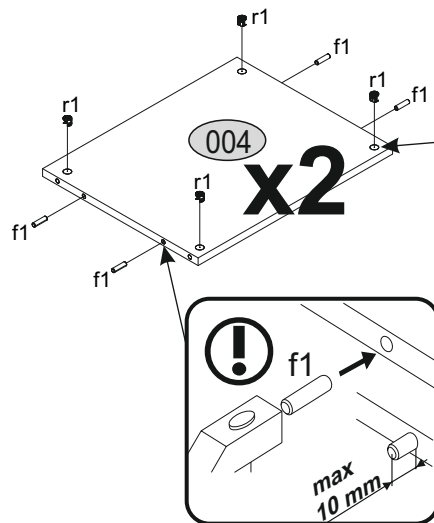

2

				
x4	x8	x8	x6	x8


L

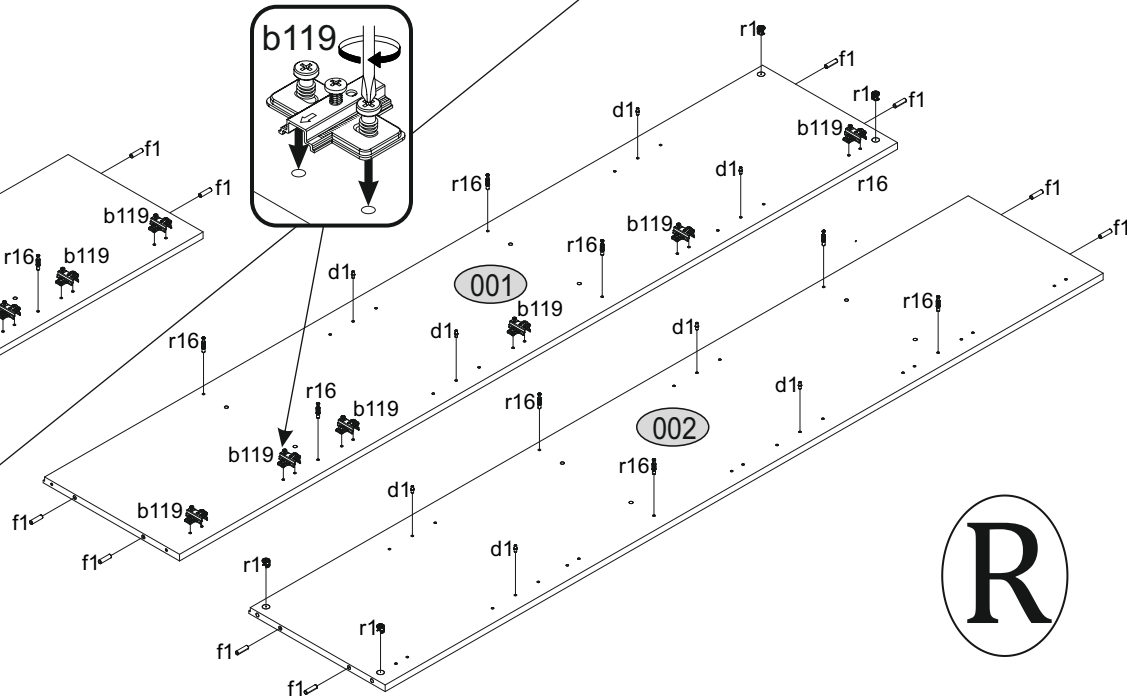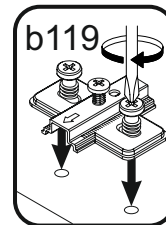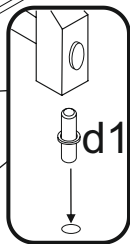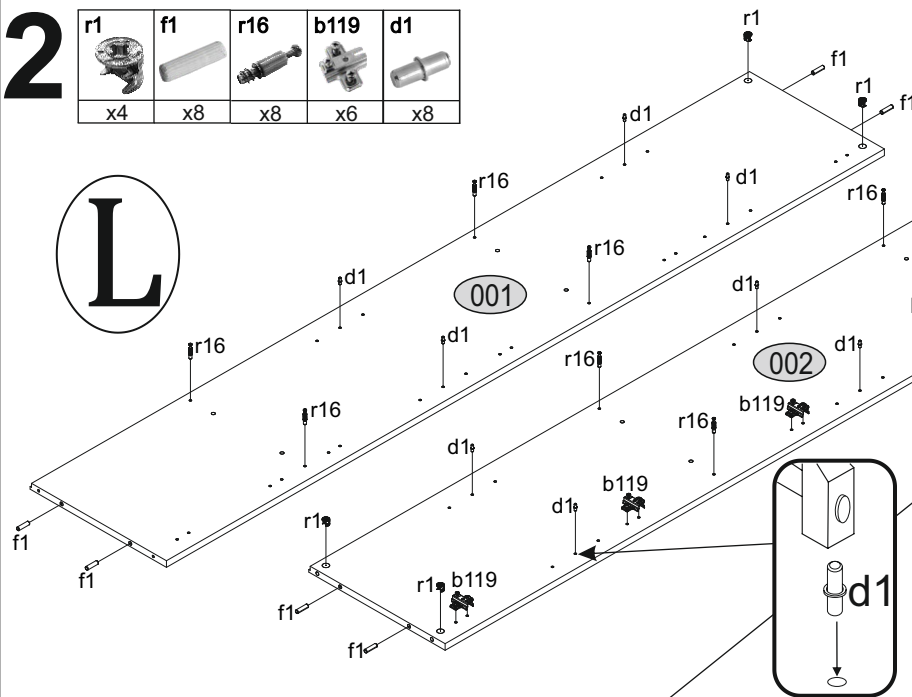


R

3


c80	p25	a144
		
x2	x12	x6

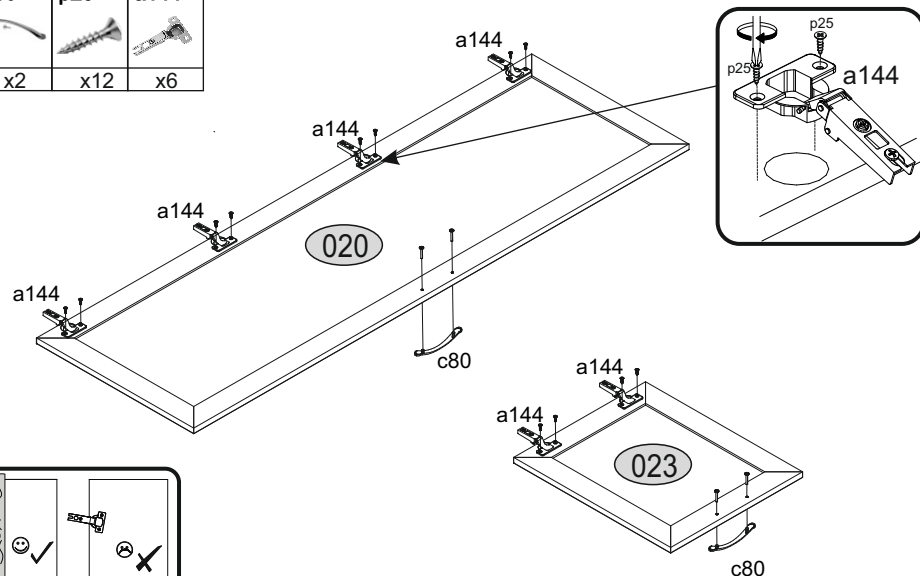


4

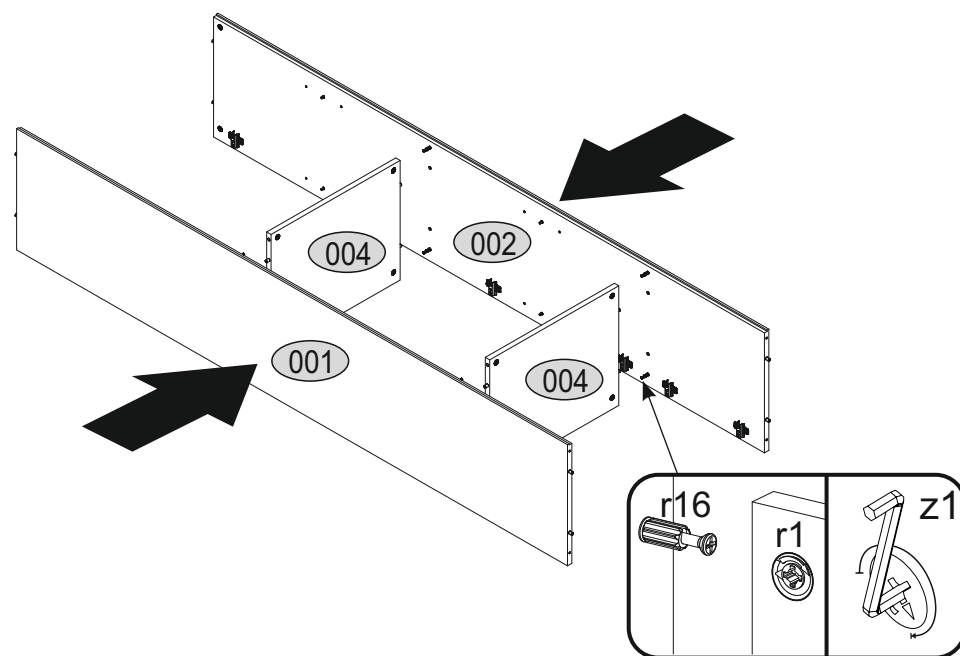


5

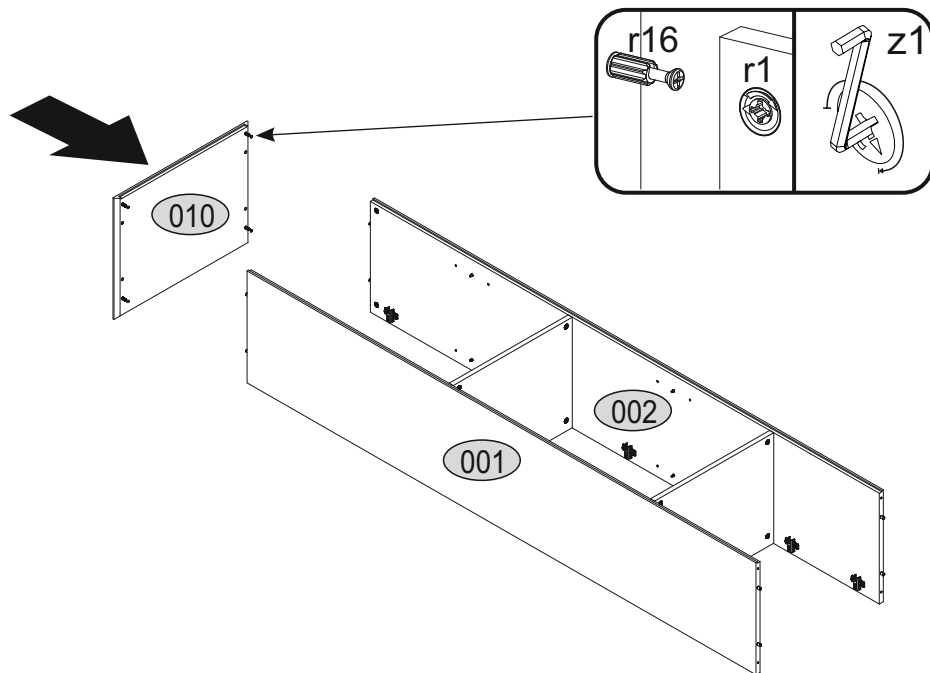



6

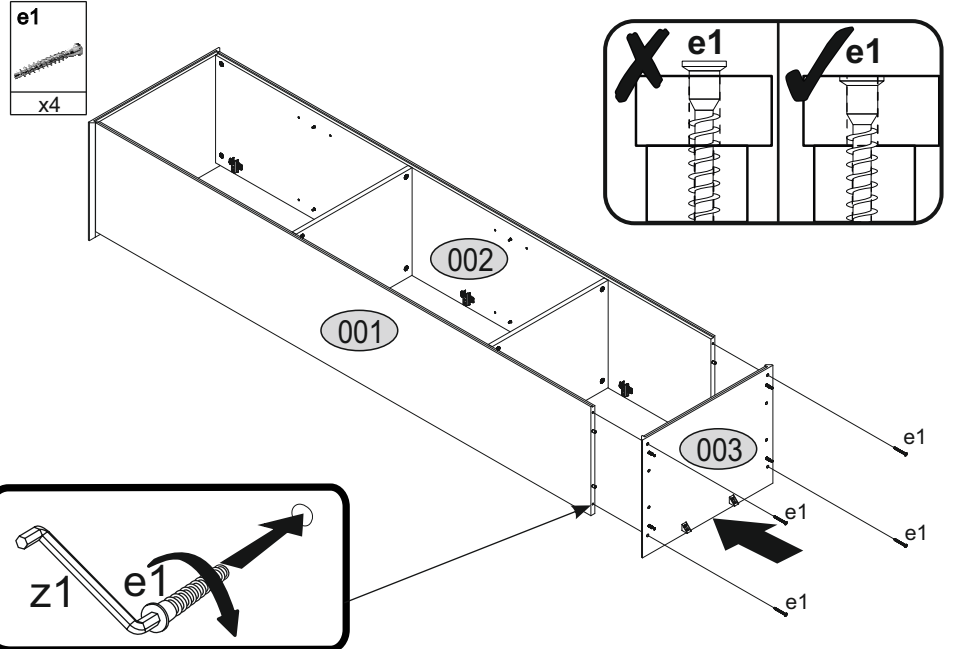




7

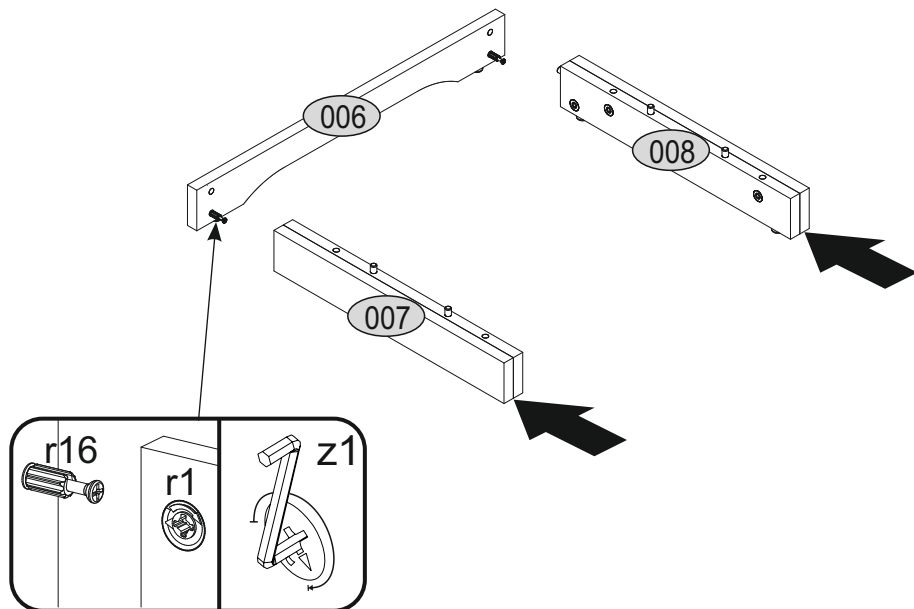


8

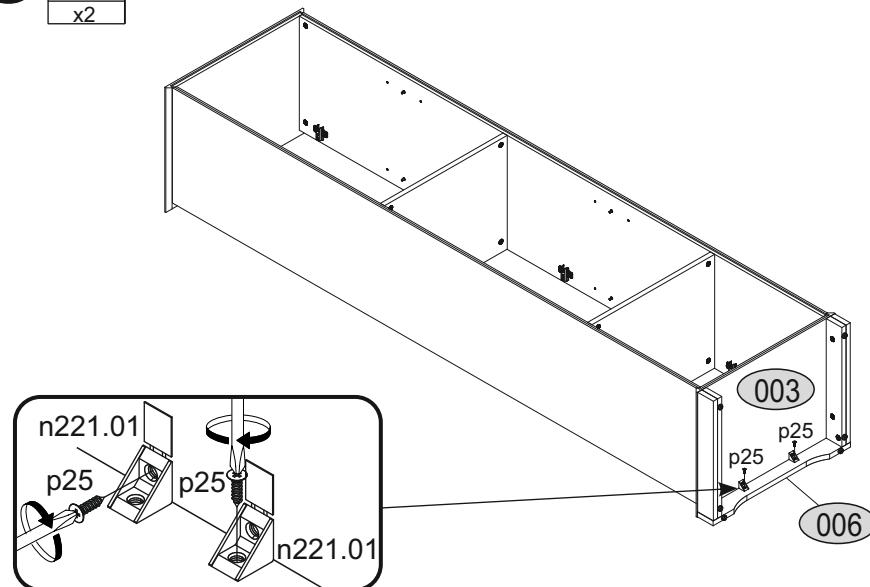



9

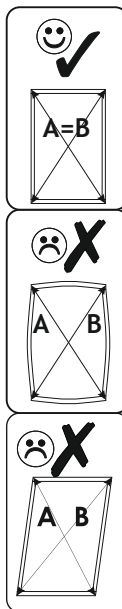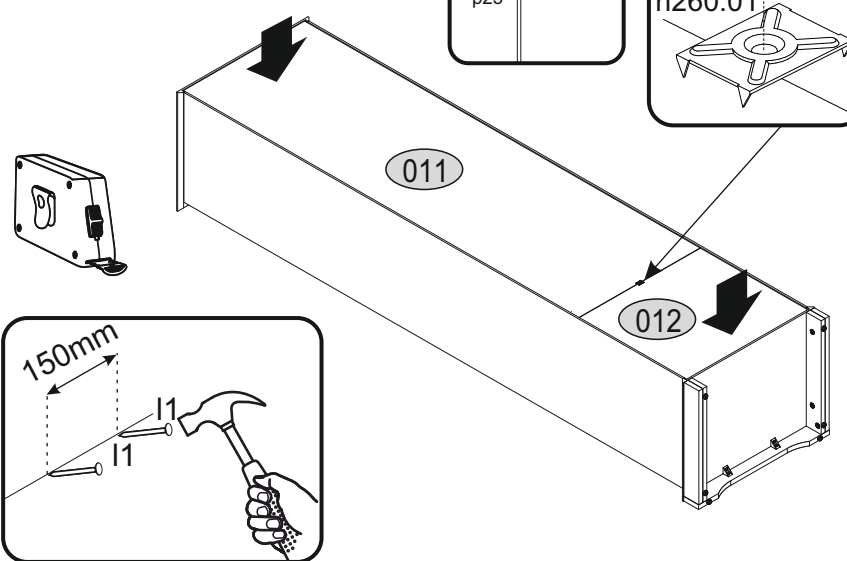

10

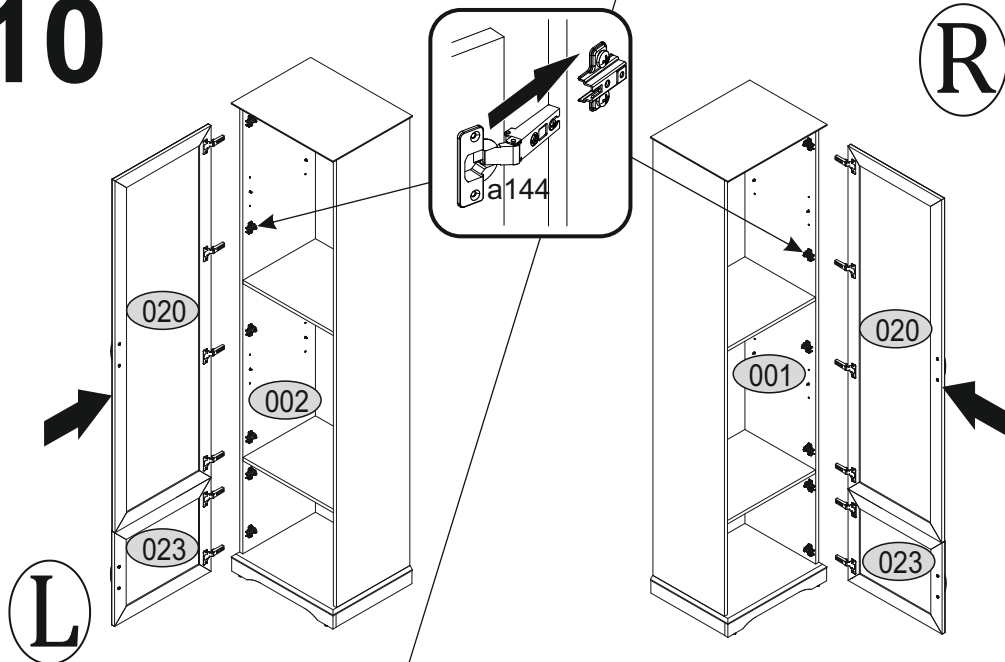

11

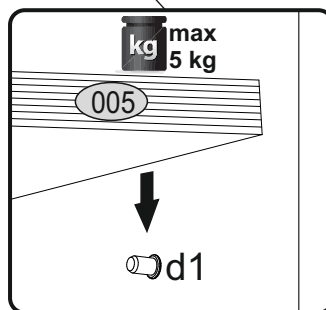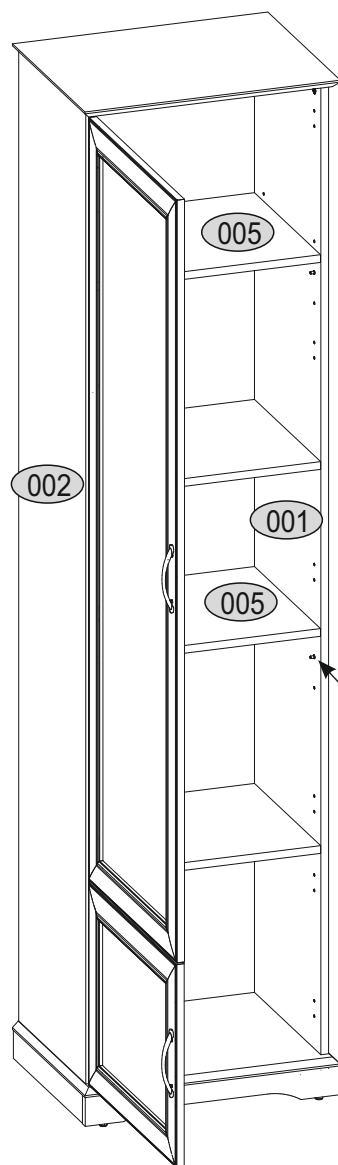

12

s2	p17	f3	n14	s4	p25
x12	x1	x1	x1	x28	x2

