
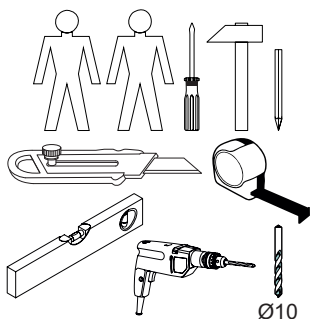
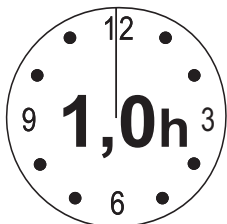
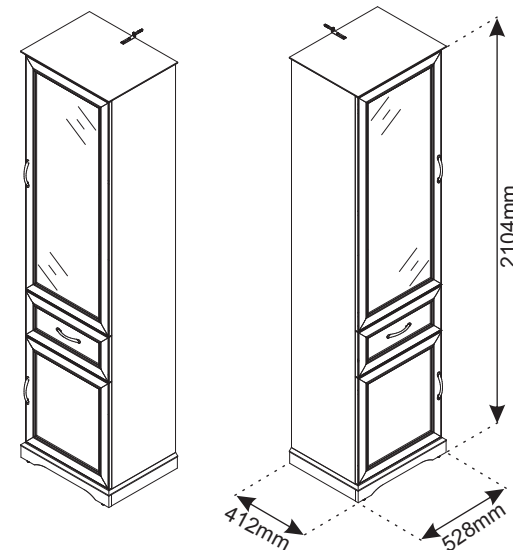



Instrukcja montażowa


WIT 1D1W1S SORETTO

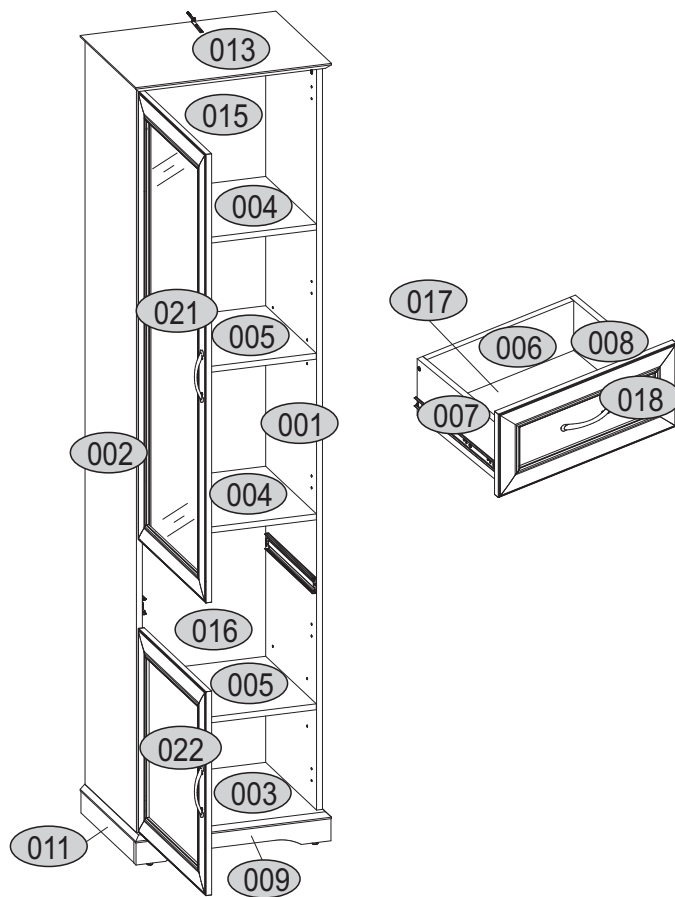

Kod	Wymiary				Pakiet
001	2006	381	16	1	1/3
002	2006	381	16	1	1/3
003	528	412	16	1	1/3
004	470	376	16	2	1/3
005	470	375	16	2	1/3
006	413	160	16	1	1/3
007	350	160	16	1	1/3
008	350	160	16	1	1/3
009	526	60	16	1	1/3
011	395	60	32	1	1/3
012	395	60	32	1	1/3
013	528	412	16	1	1/3
015	1224	488	2,5	1	3/3
016	800	488	2,5	1	3/3
017	352	431	2,5	1	3/3
018	500	234	18	1	2/3
021	1210	500	18	1	3/3
022	500	550	18	1	2/3
Akcesoria				1	1/3


Akcesoria:

30x f1 <i>Ø8x30</i> 	22x r1 <i>15x12</i> 	22x r16 <i>Ø5x24</i> 	8x e1 <i>Ø7x50</i> 
6x k1 	2x n221.01 	29x p25 <i>Ø3.5x16</i> 	1x n260.01 
1x f3 	1x lb-350 	5x b119 	1x n14 
5x a144 	1x p17 <i>Ø6.0x50</i> 	40x l1 	26x s4 
16x s2 	1x z1 	3x c80 	2x j2 <i>Ø4x9</i> 
8x d1 			

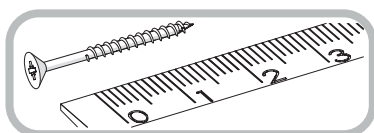


1

r1	f1	r16	k1	n221.01	p25
x18	x22	x10	x6	x2	x2

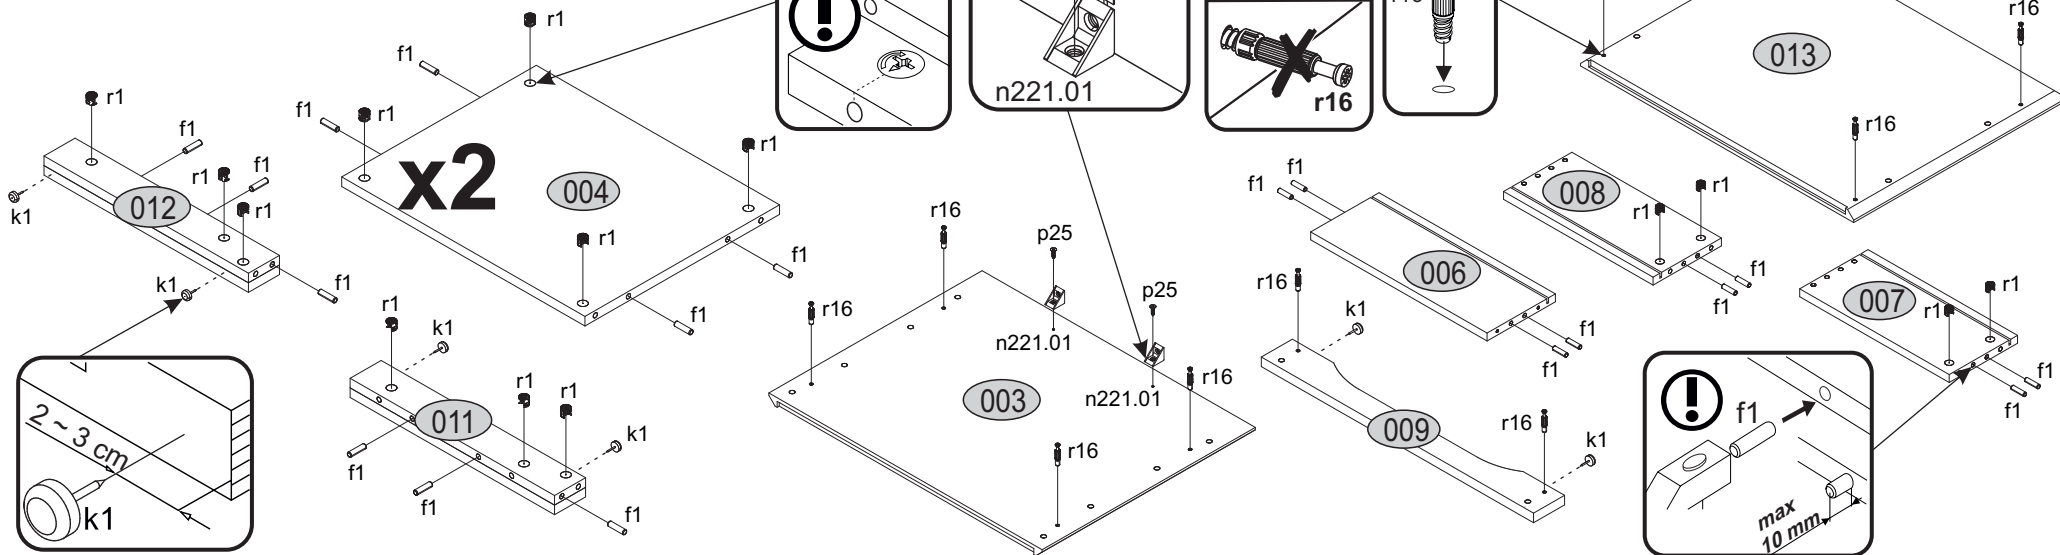



2

r16	r1	d1	f1	lb-350	p25	b119
x8	x4	x8	x8	x3	x6	x5

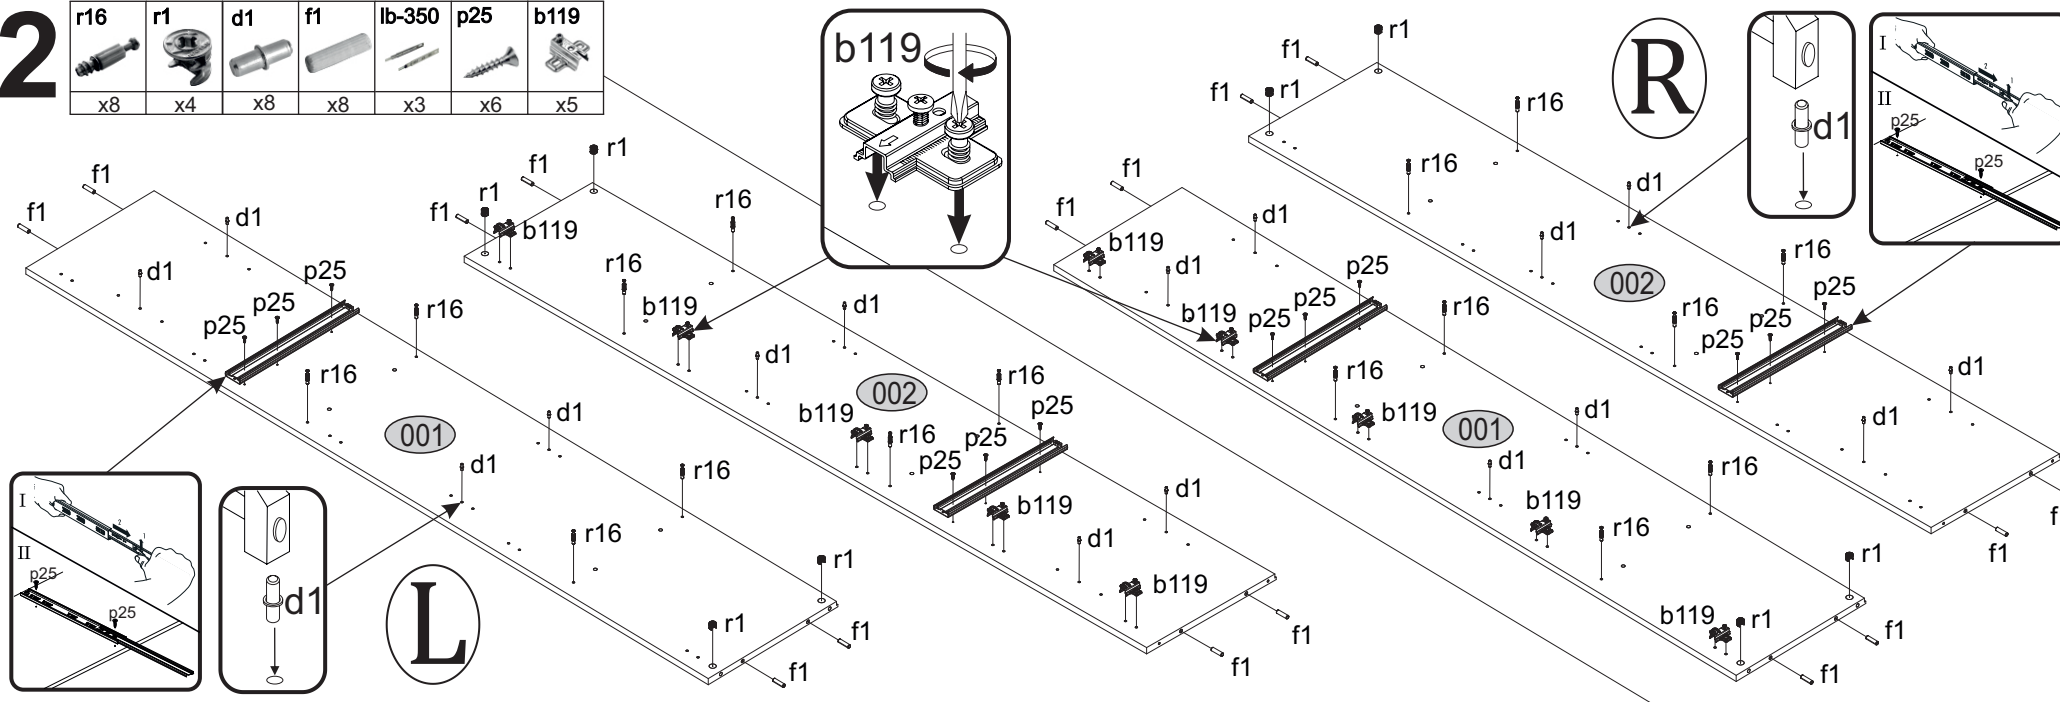


3


c80	p25	a144	r16	j2
x3	x10	x5	x4	x2

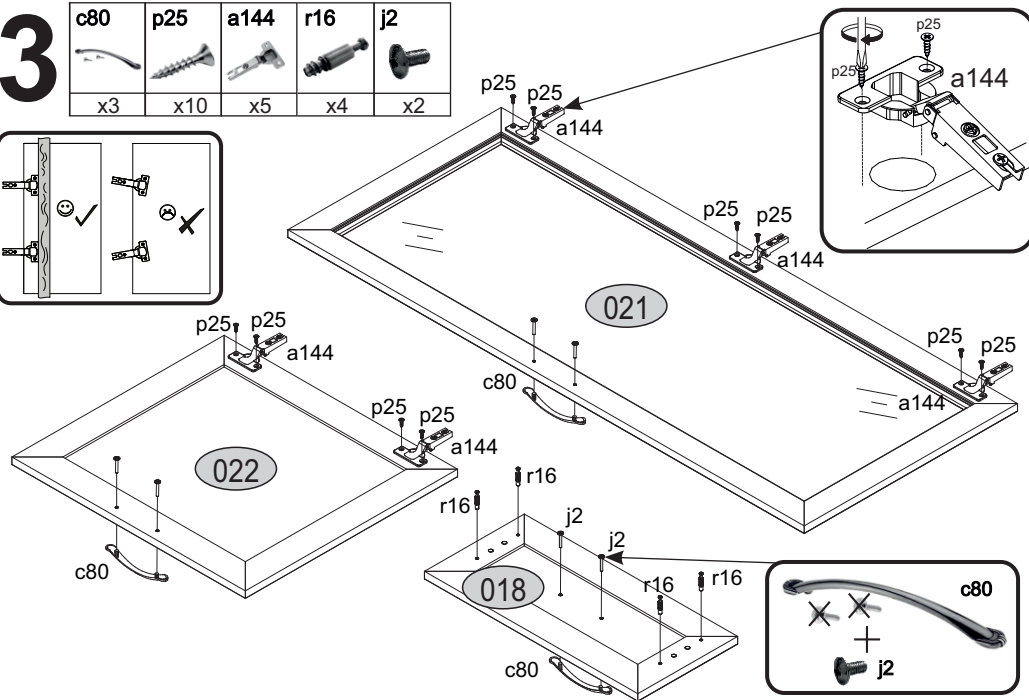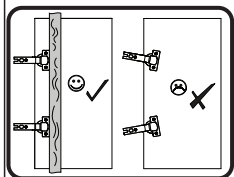


4

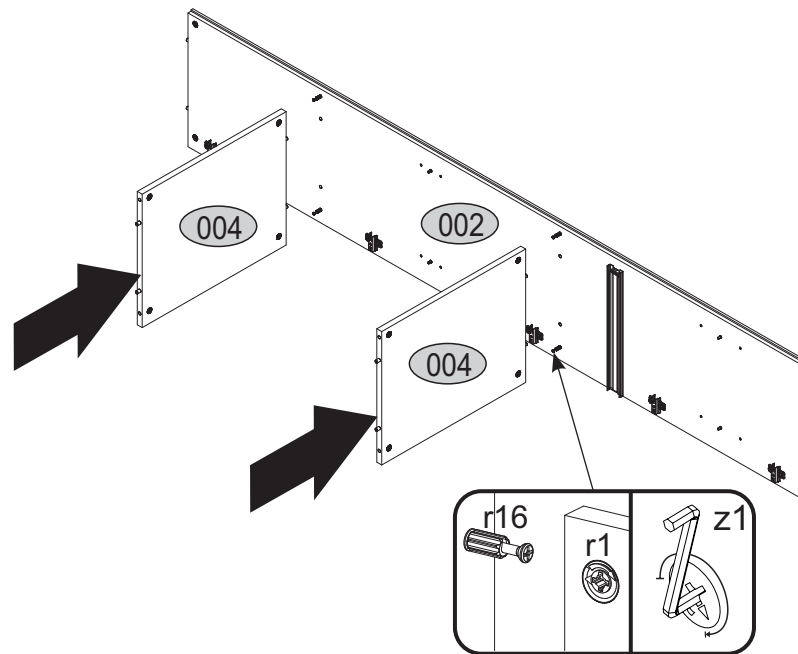




5

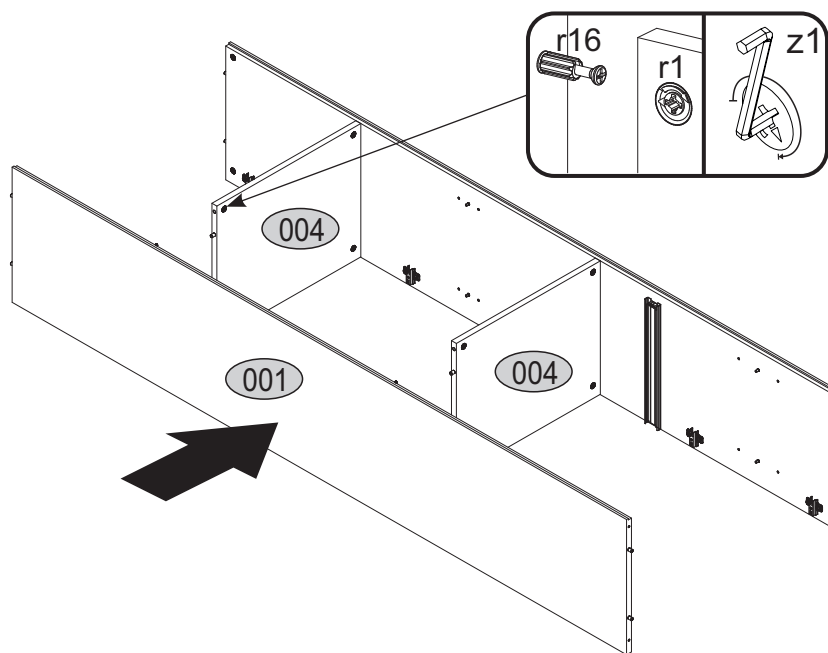



6

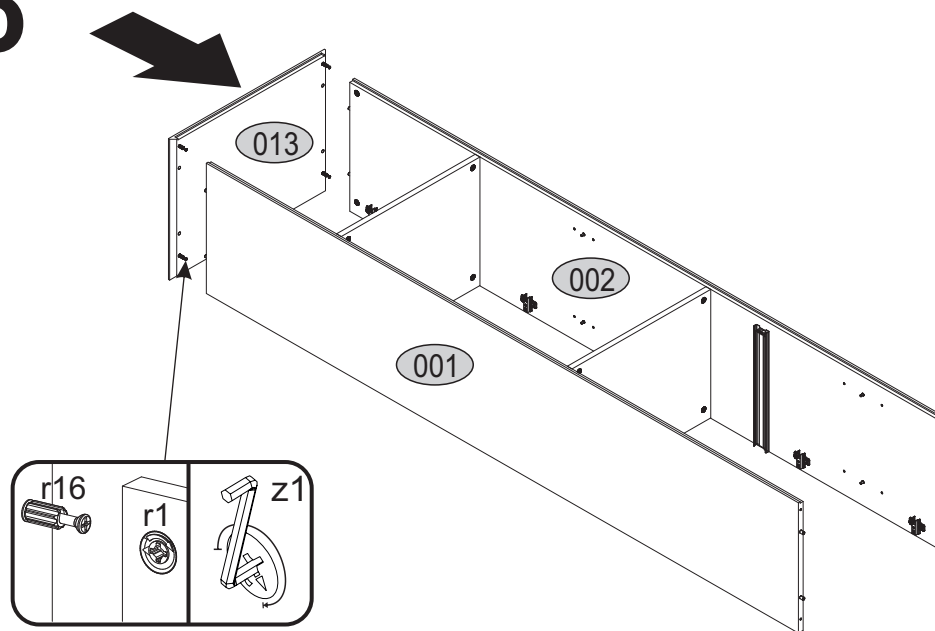




7

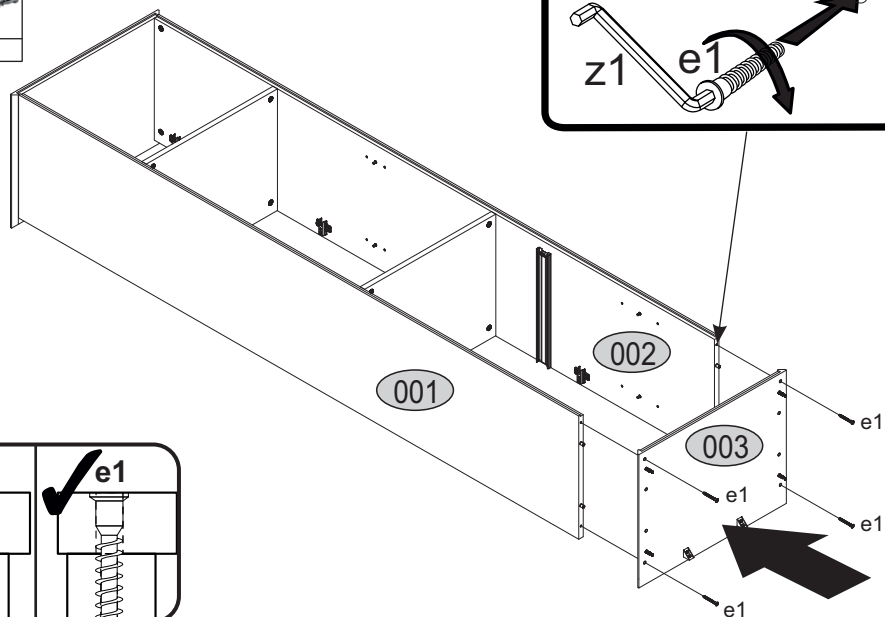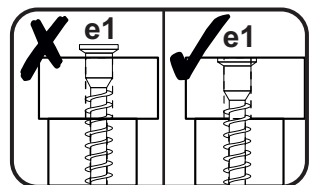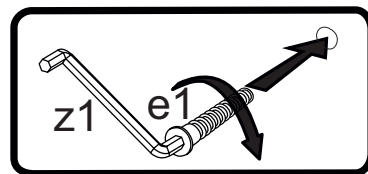





8

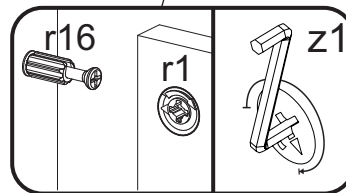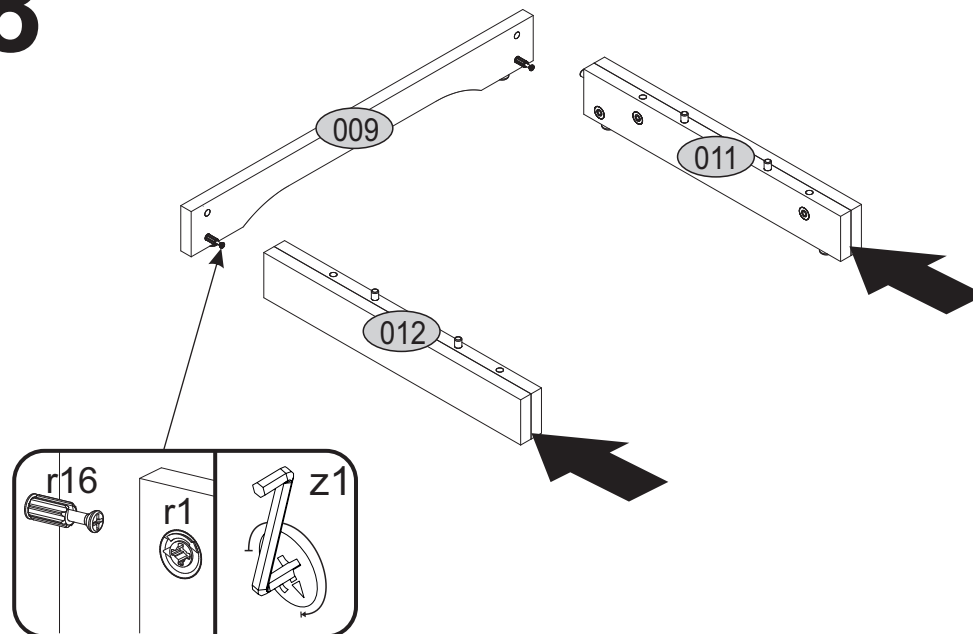


9

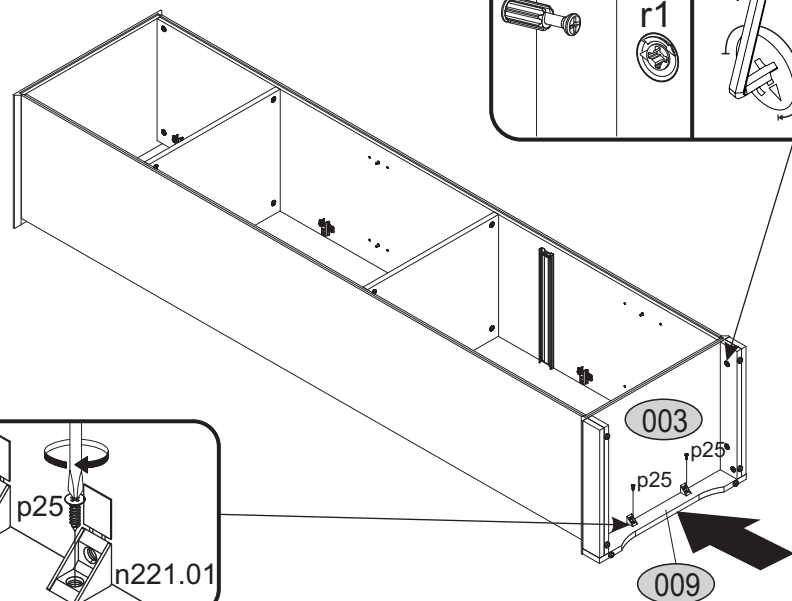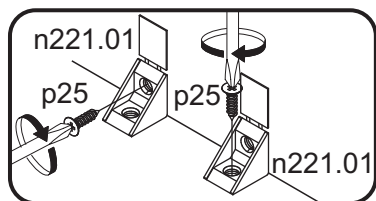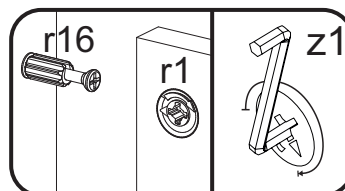


10

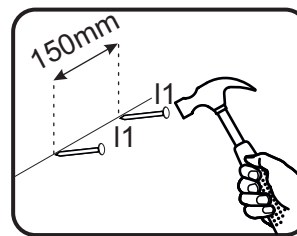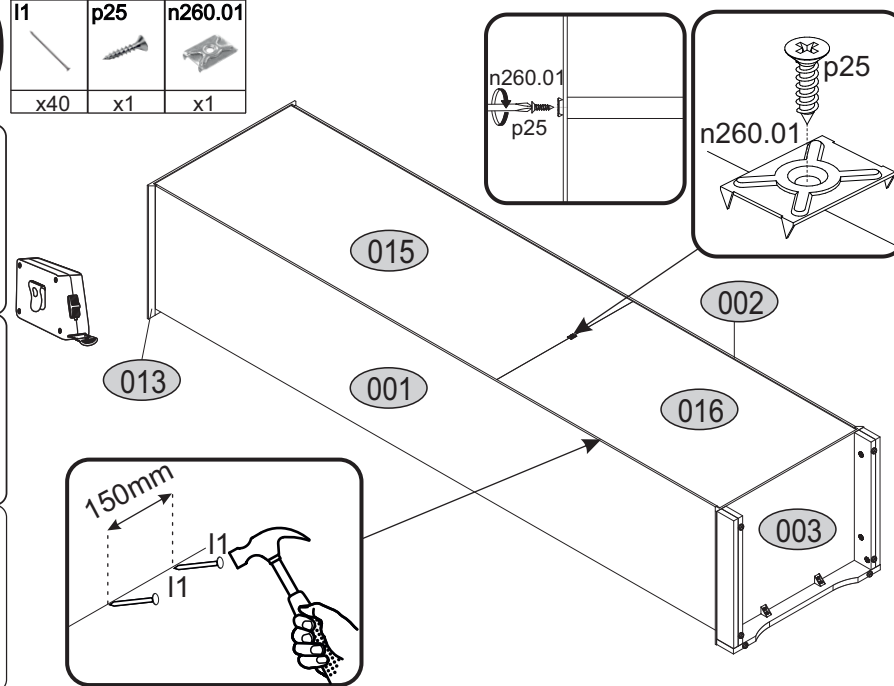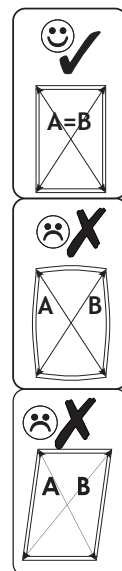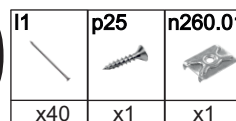



11

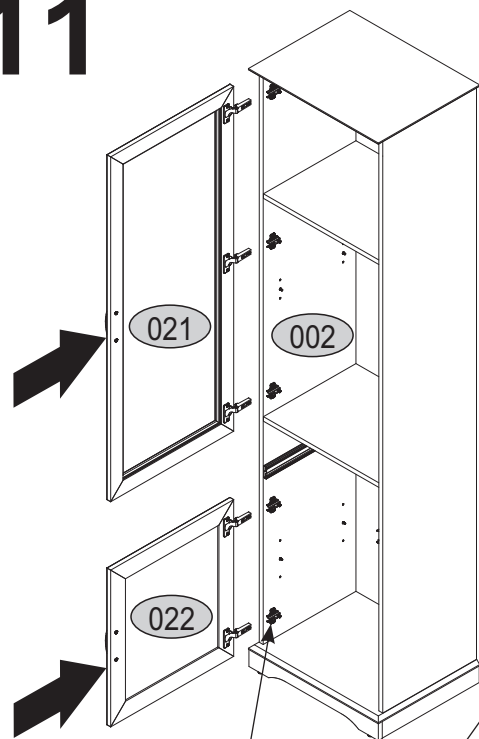

L



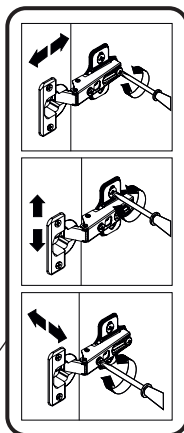


R

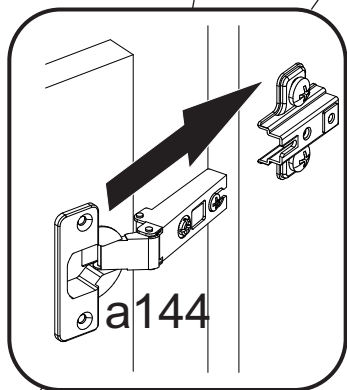
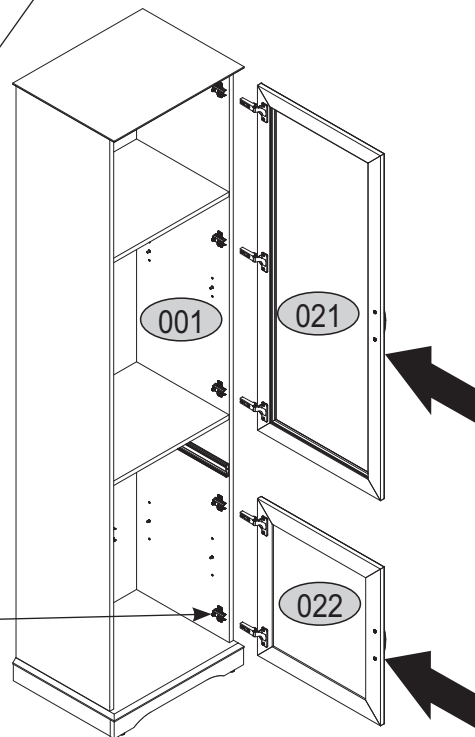


12

e1
x4

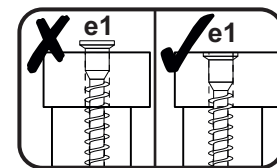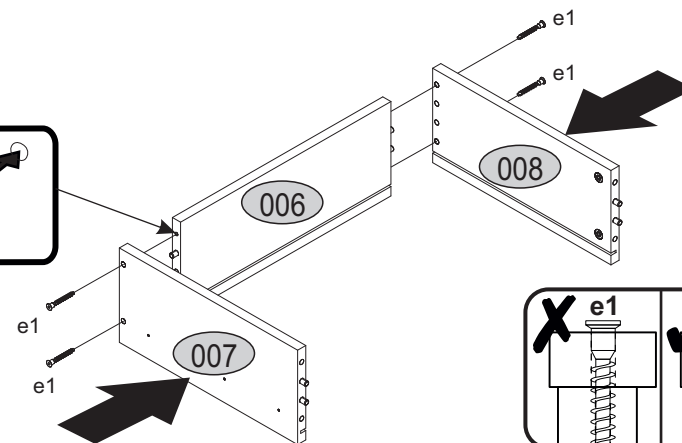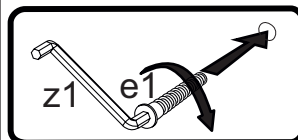


13

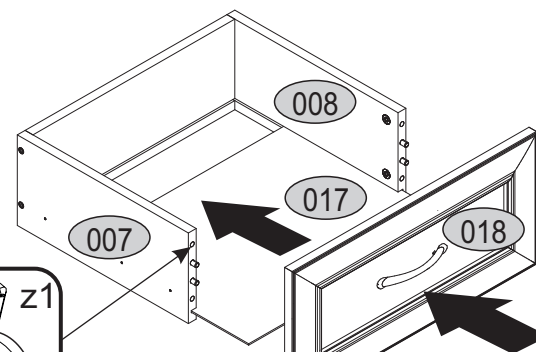
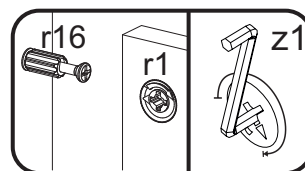


14

lb-350 x1
p25 x6



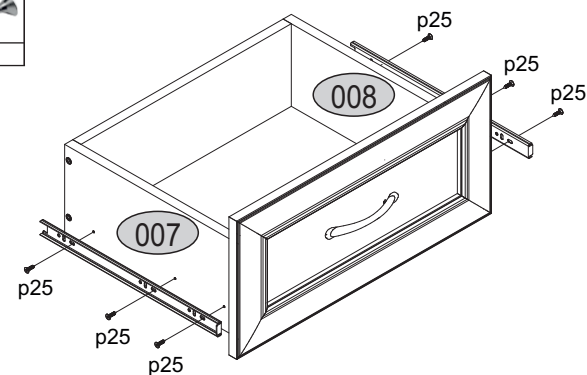


15

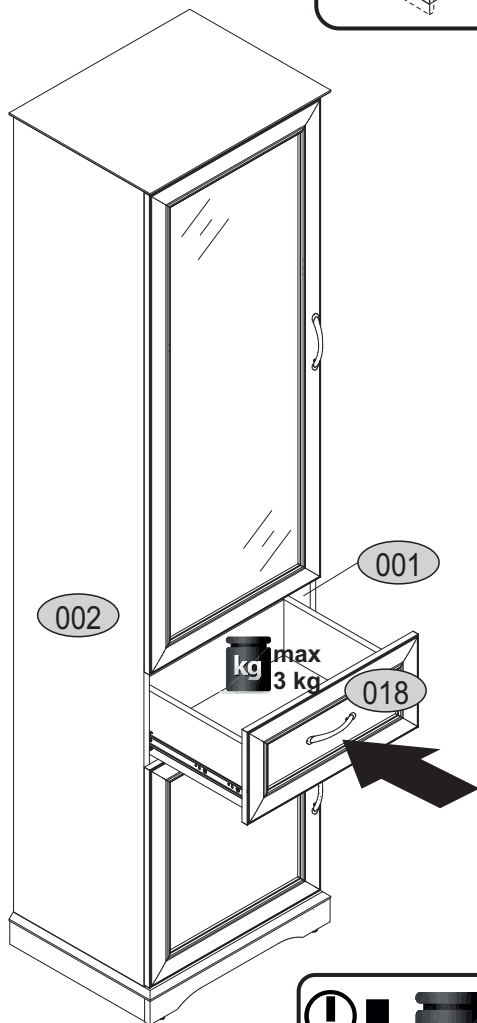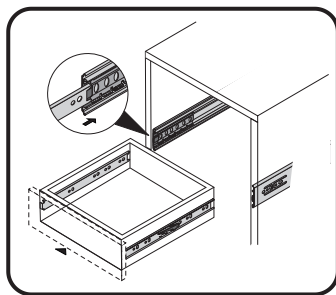

16

p17	f3	n14	p25
x1	x1	x1	x2

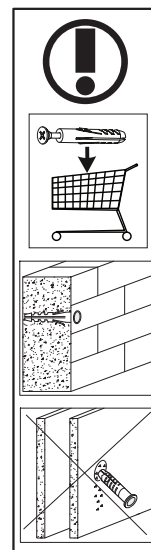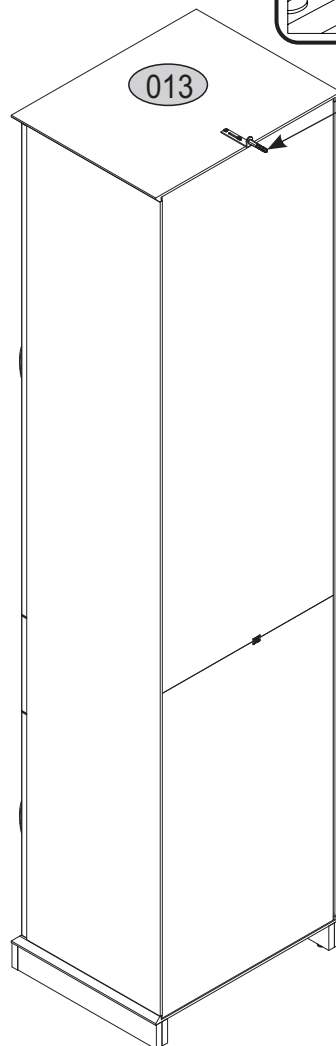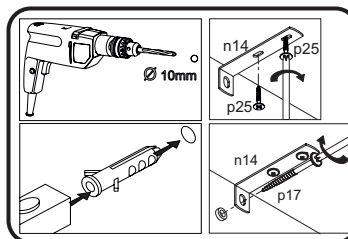

17

s2	s4
x16	x26

