

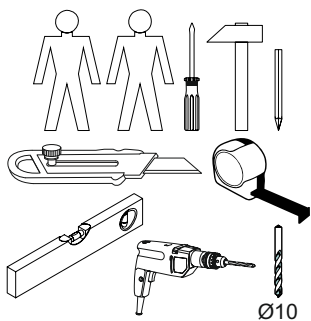
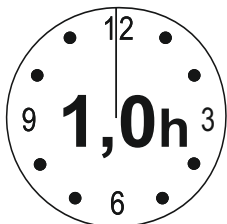
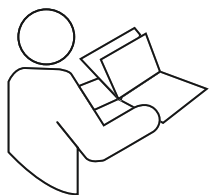



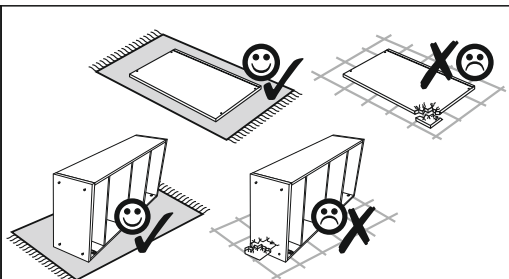


Ø10

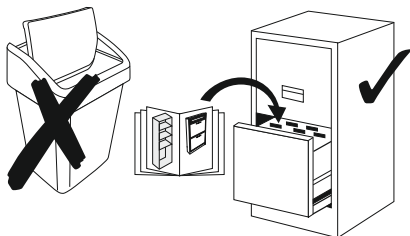



Instrukcja montażowa


WIT NIS 2D1W1S SORETTO

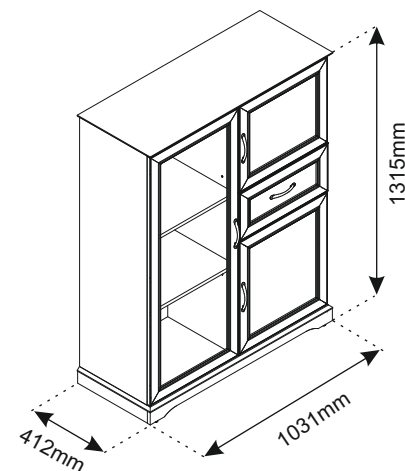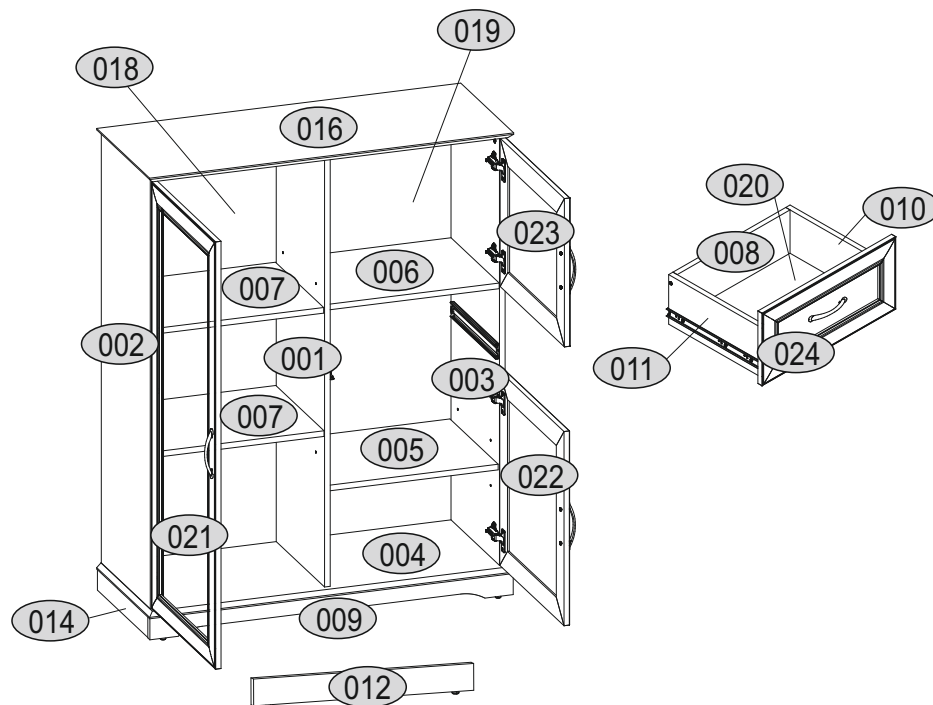

Kod	Wymiary				Pakiet
001	1216	376	16	1	1/3
002	1216	381	16	1	1/3
003	1216	381	16	1	1/3
004	1031	412	16	1	1/3
005	479	375	16	1	1/3
006	479	375	16	1	1/3
007	478	375	16	2	1/3
008	422	160	16	1	1/3
009	1029	60	16	1	1/3
010	350	160	16	1	1/3
011	350	160	16	1	1/3
012	519	60	16	1	1/3
014	395	60	32	1	1/3
015	395	60	32	1	1/3
016	1031	412	16	1	1/3
018	1234	495	2,5	1	2/3
019	1234	495	2,5	1	2/3
020	352	440	2,5	1	2/3
021	1210	500	18	1	3/3
022	500	550	18	1	2/3
023	500	420	18	1	2/3
024	500	234	18	1	2/3
Akcesoria					1/3


Akcesoria:

12x d1 	x30 f1 Ø8x30 	1x f3 	1x n14 
1x p17 Ø6x50 	x41 p25 Ø3.5x16 	20x r1 15x12 	20x r16 Ø5x24 
2x j2 Ø4x9 	3x n260.01 	10x e1 Ø7x50 	1x z1 
7x a144 	7x b119 	4x c80 	46x l1 
14x s2 	16x s4 	8x k1 	1x lb350 
5x n221.01 			

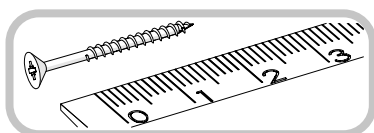


1

r1	f1	r16	k1
x21	x18	x8	x8

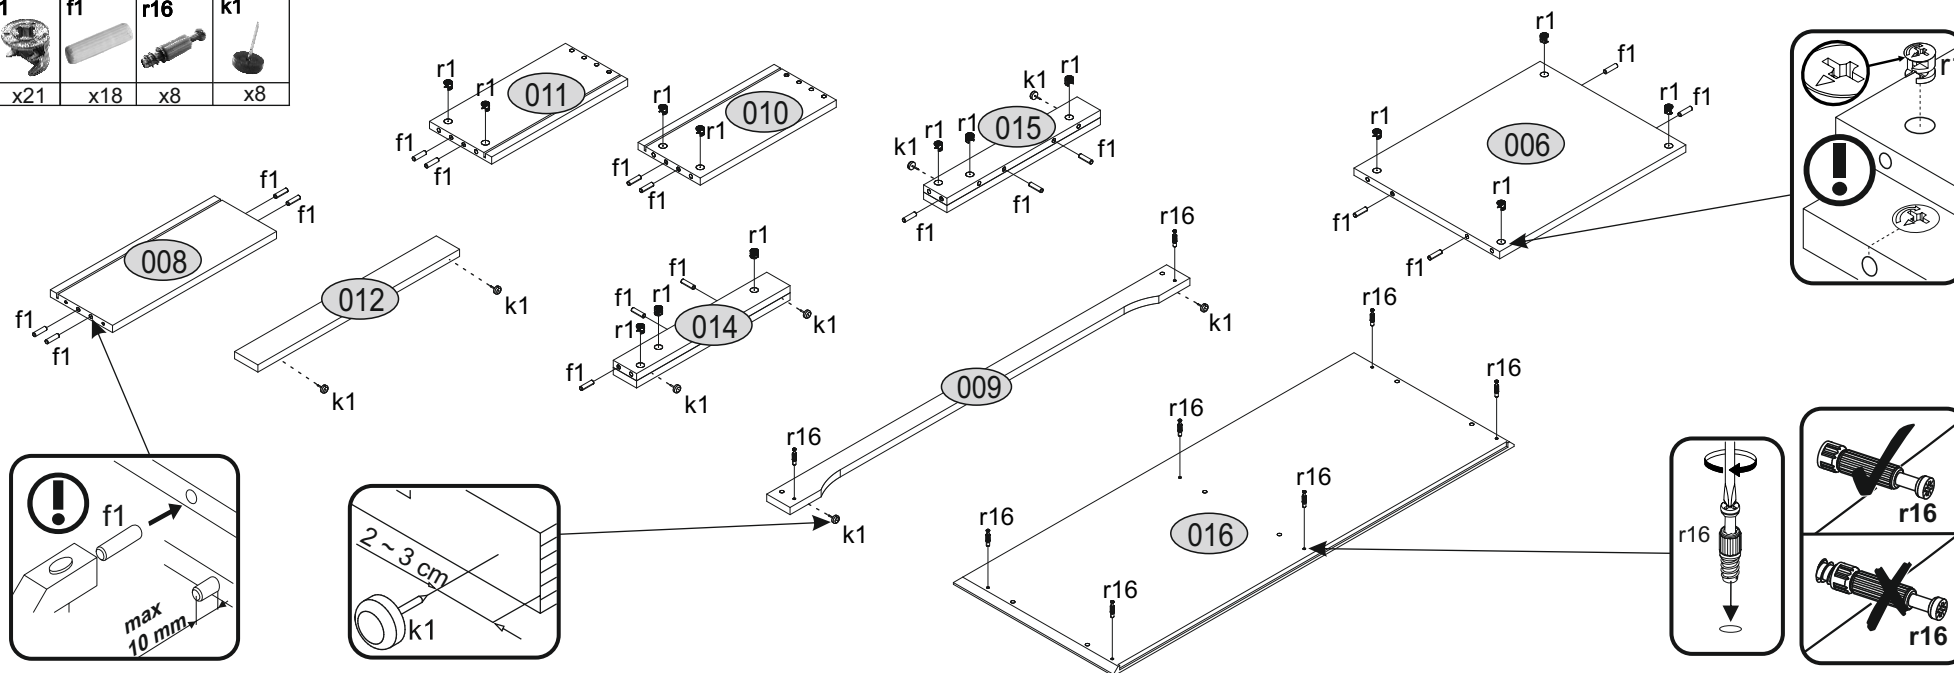


2

r1	f1	r16	n221.01	p25	lb-350	d1
x2	x4	x6	x5	x8	x1	x6

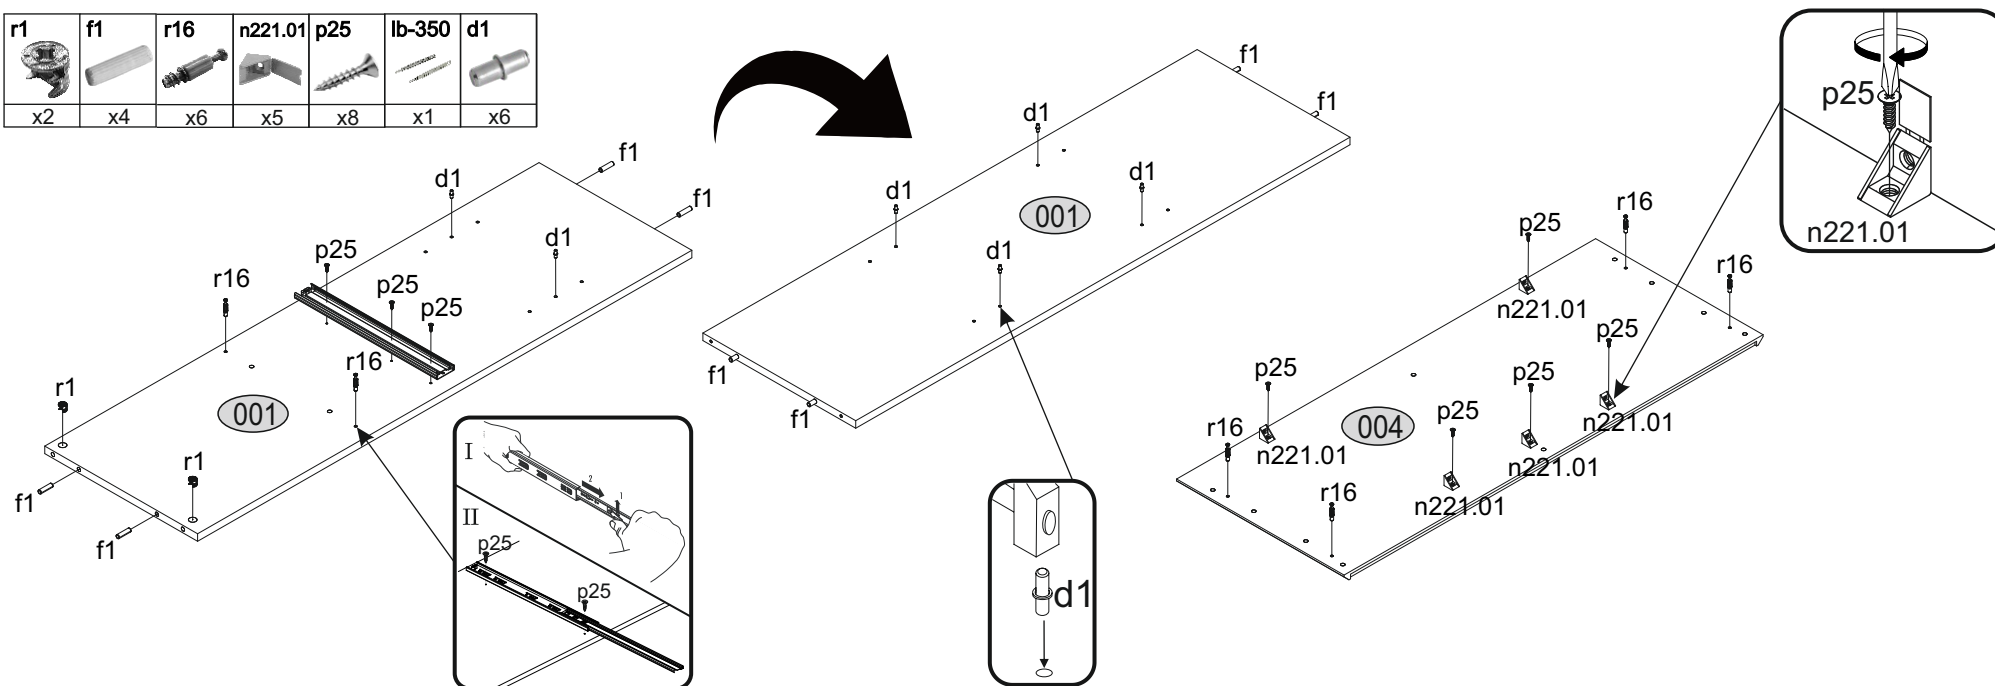


3

b119	p25	lb-350	d1	r1	f1	r16
x7	x3	x1	x6	x4	x8	x2

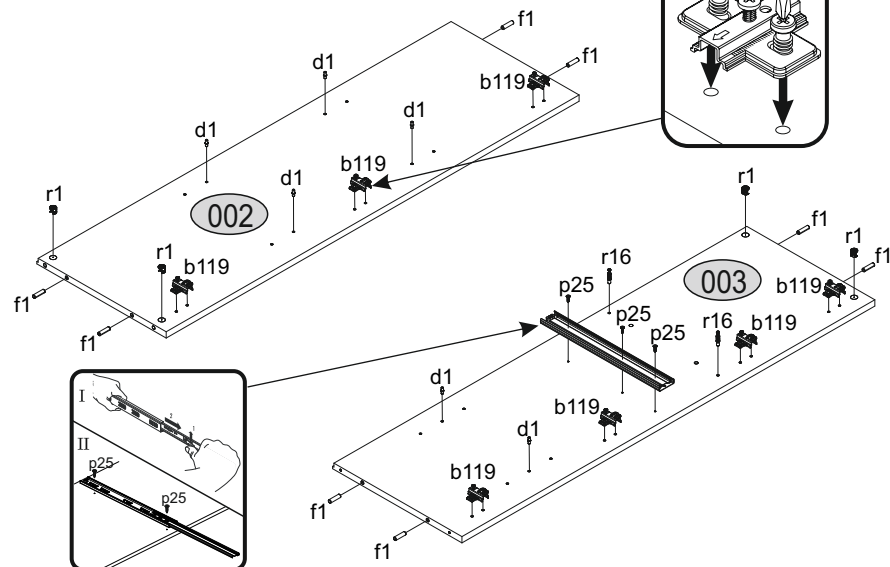


4


a144	p25	c80	j2	r16
x7	x14	x4	x2	x4

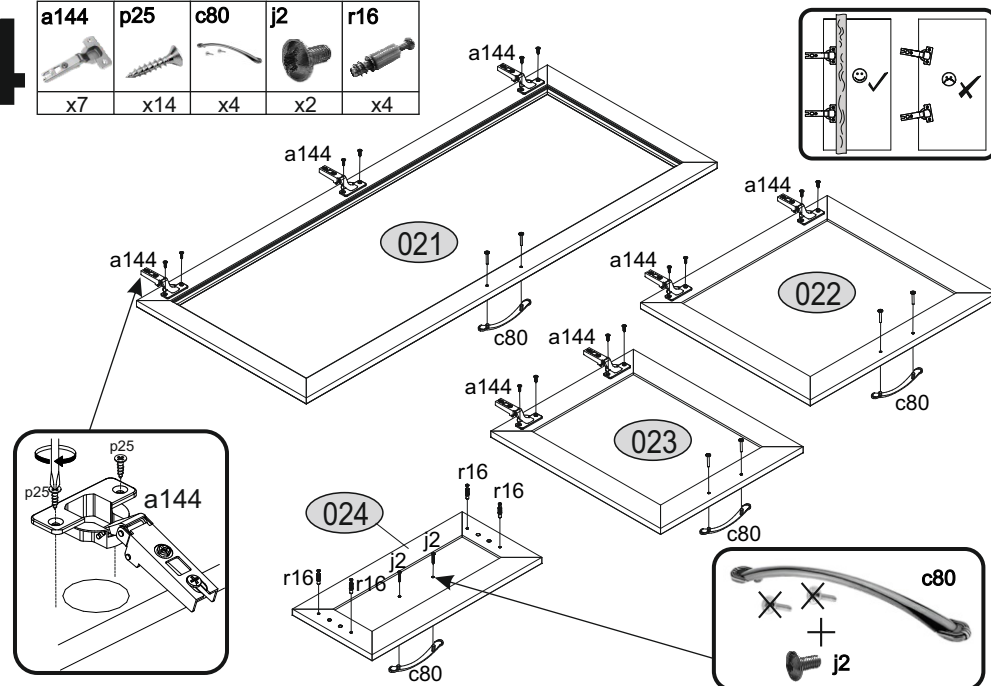



5

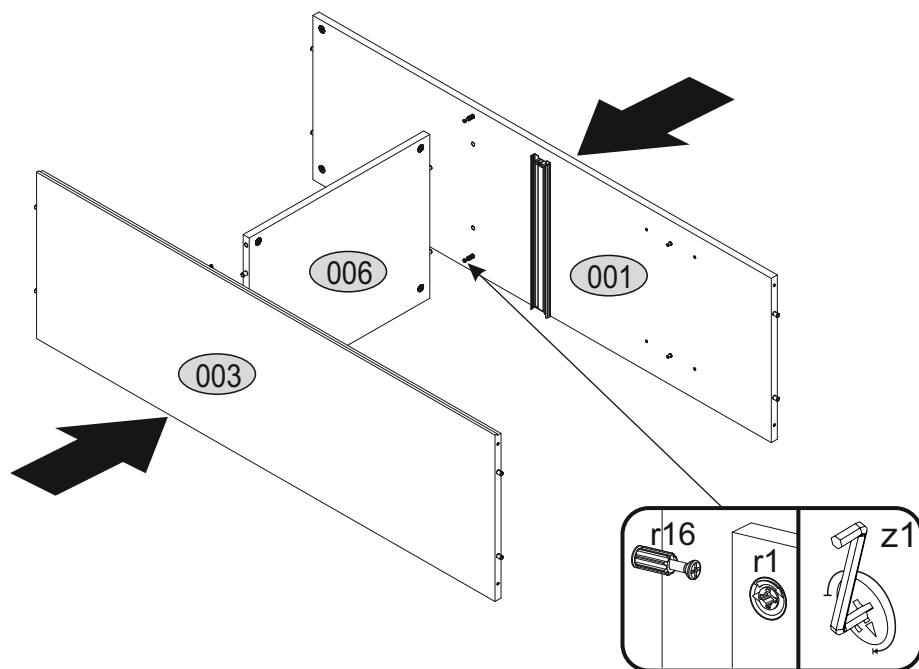



6

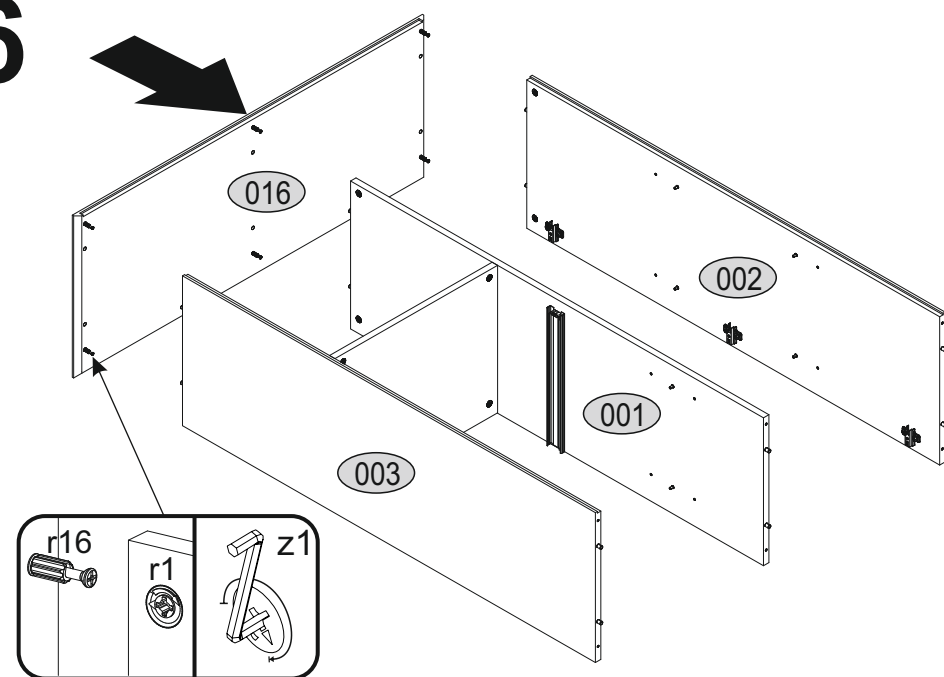



7

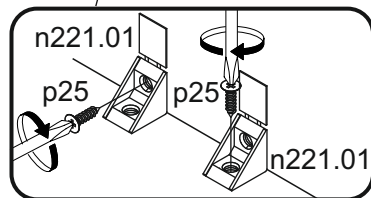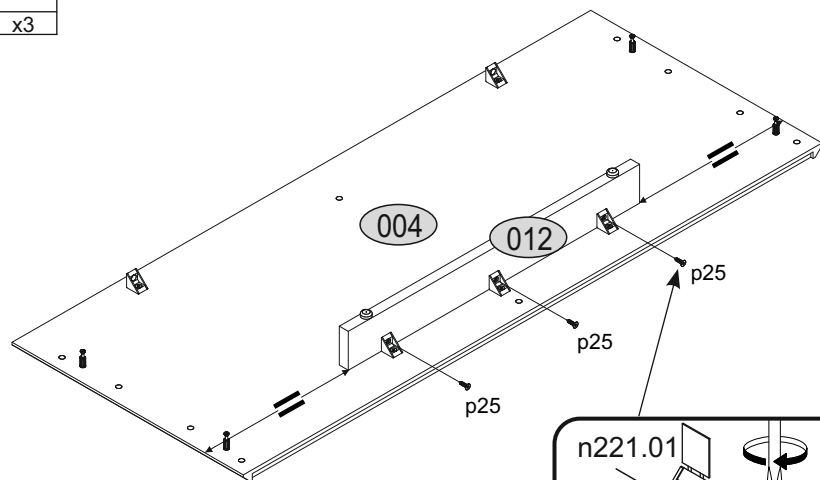



8

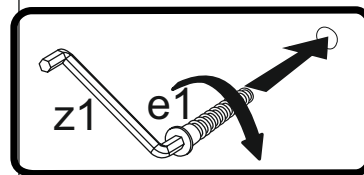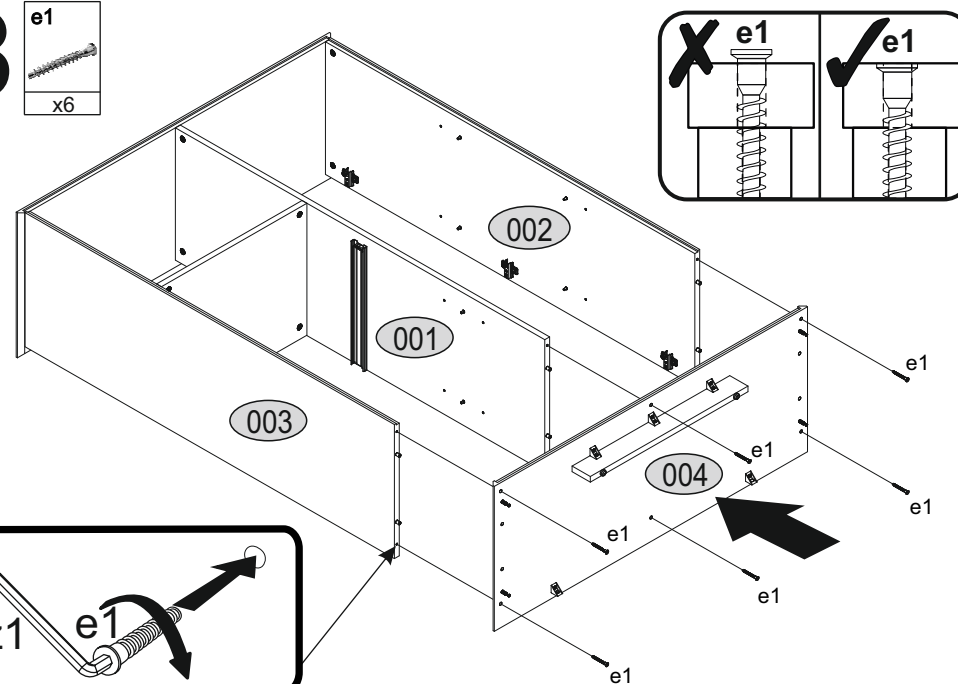

9



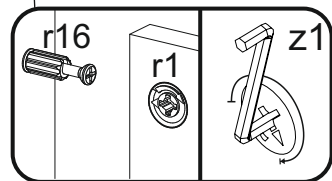
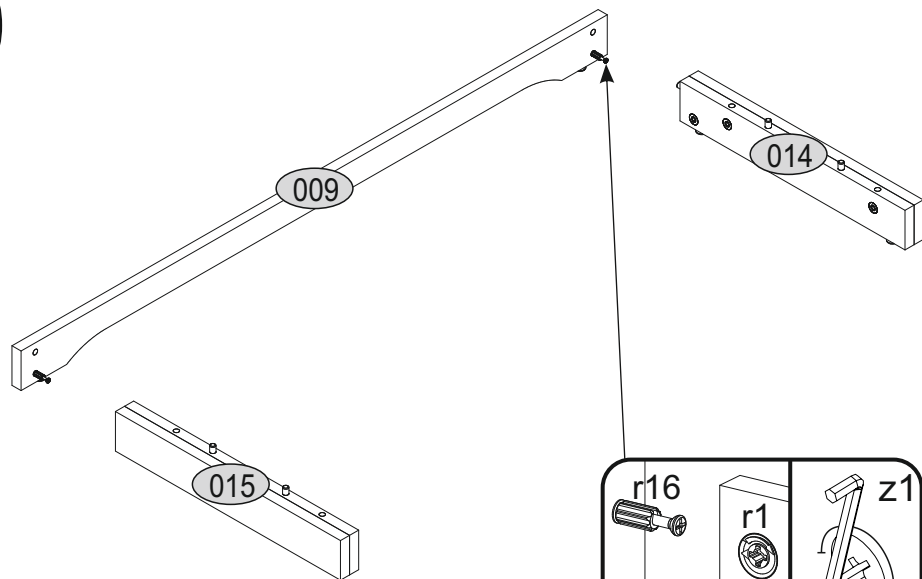


10


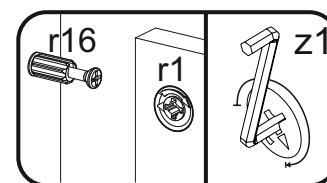
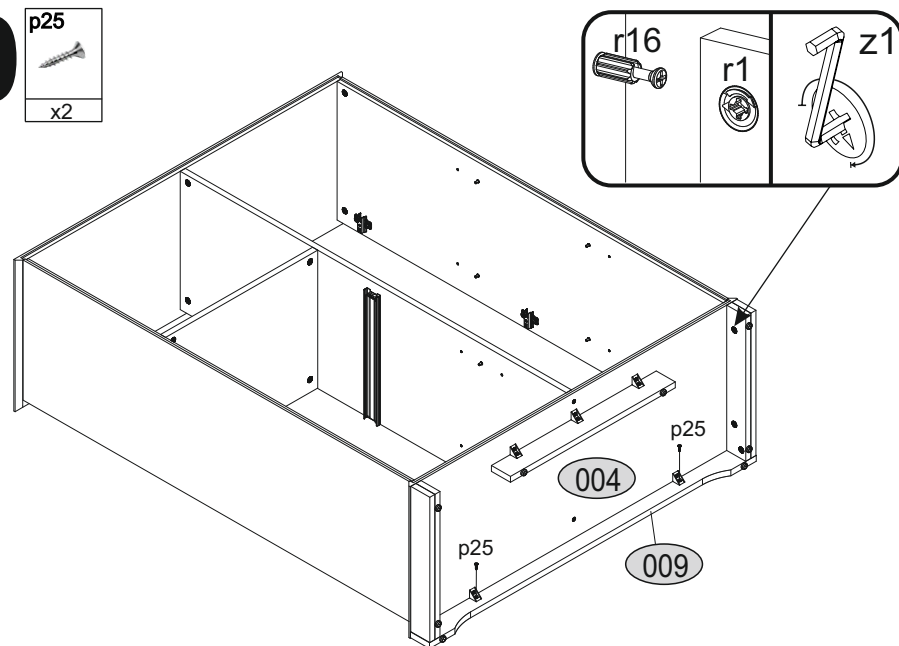


11



l1	p25	n260.01
		
x46	x3	x3

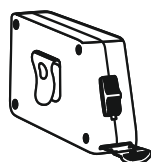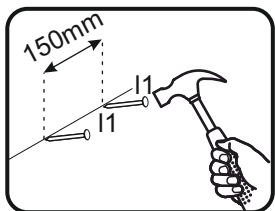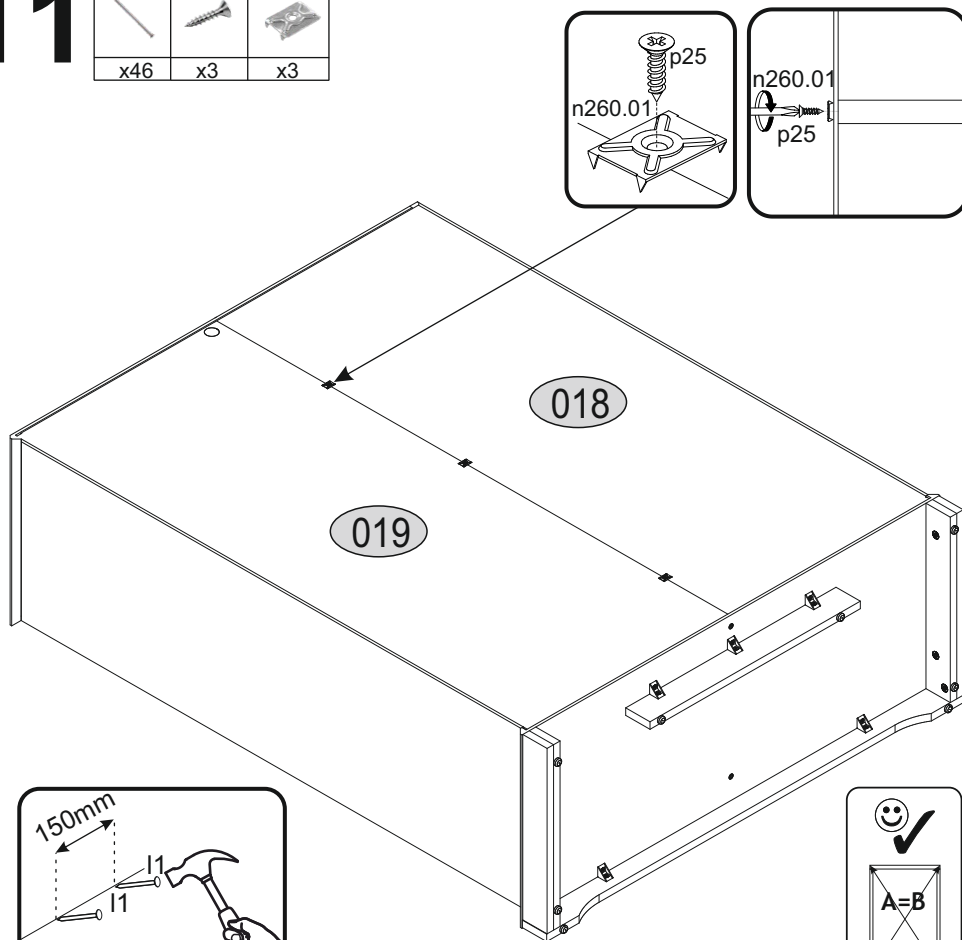



12

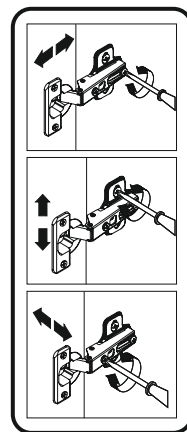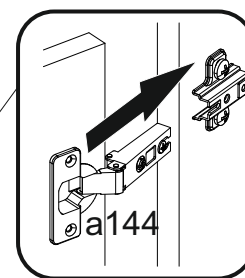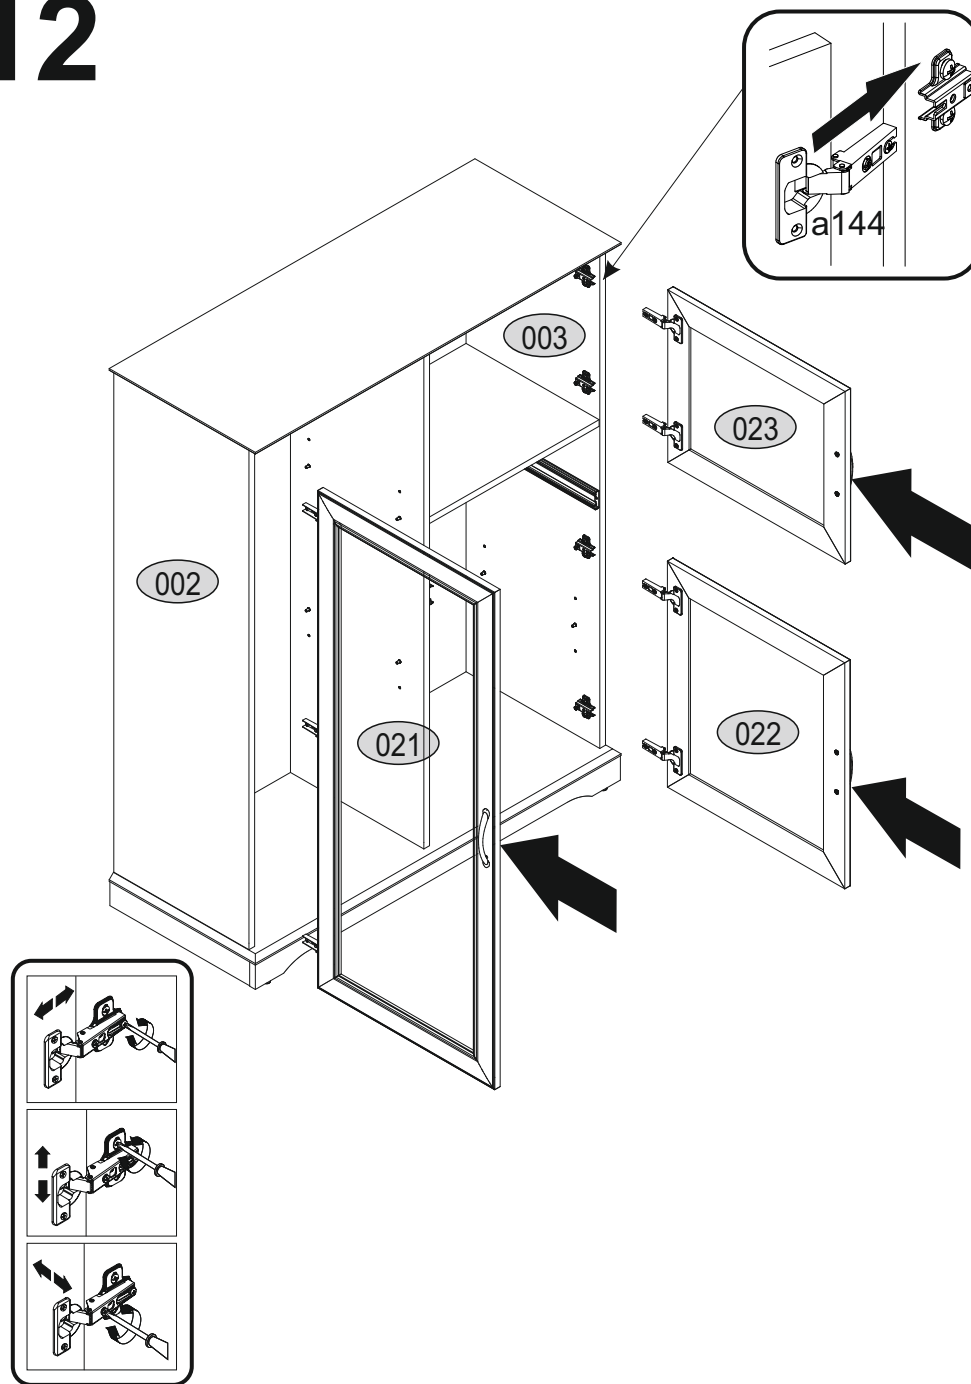


13

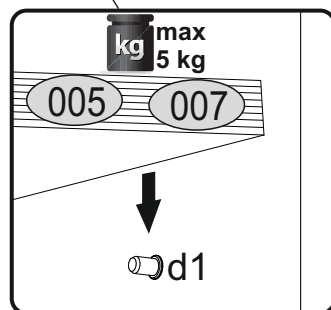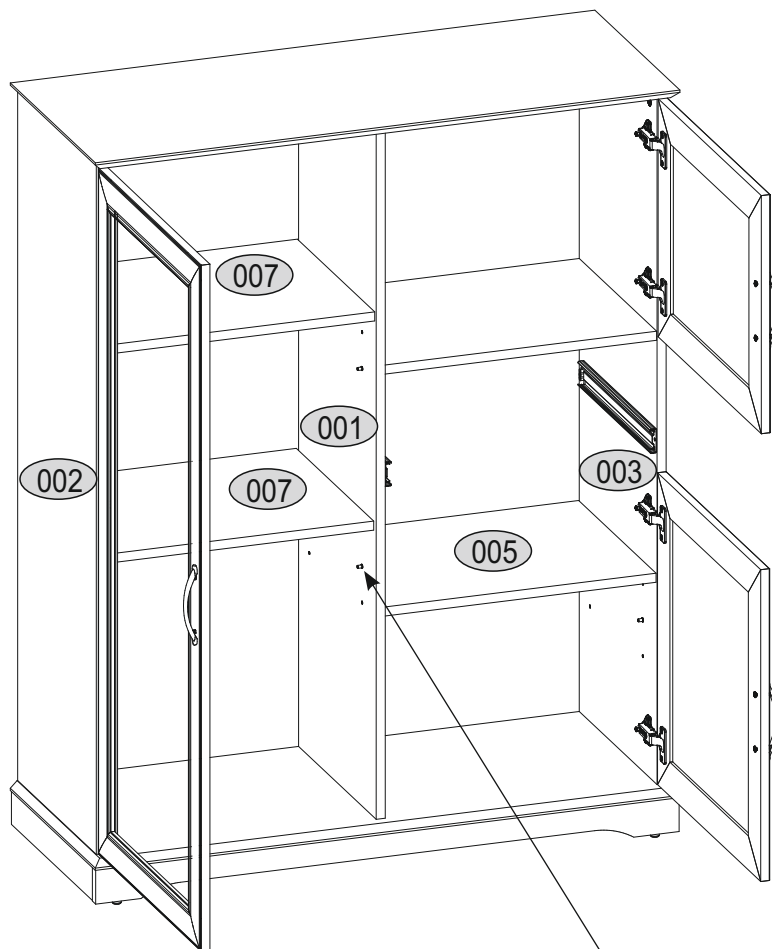



14

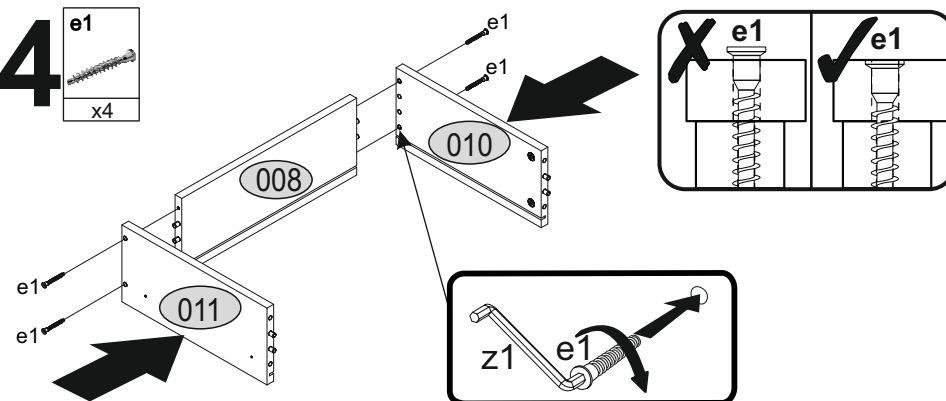



15

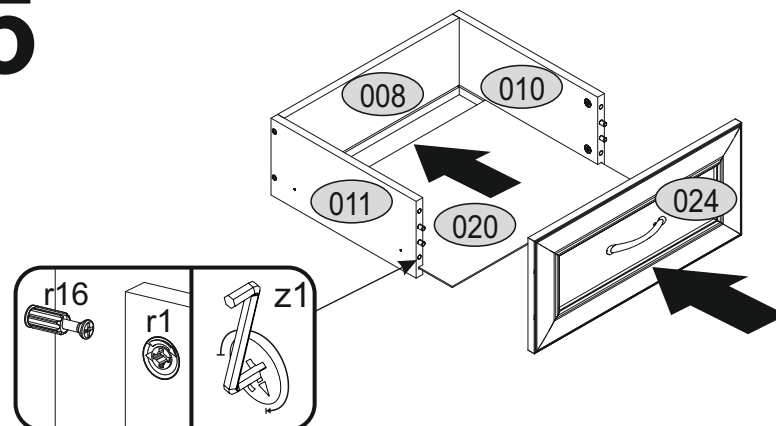

16

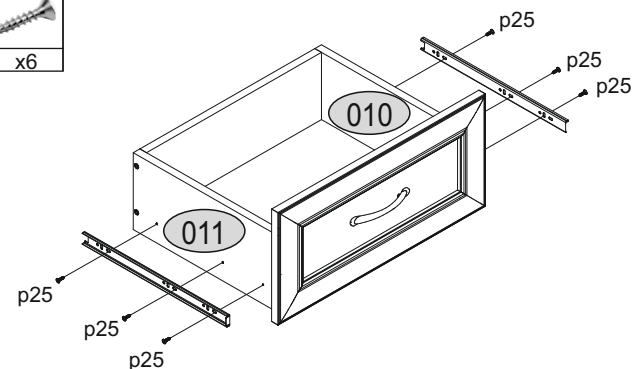

17

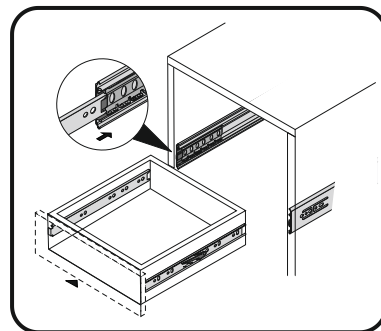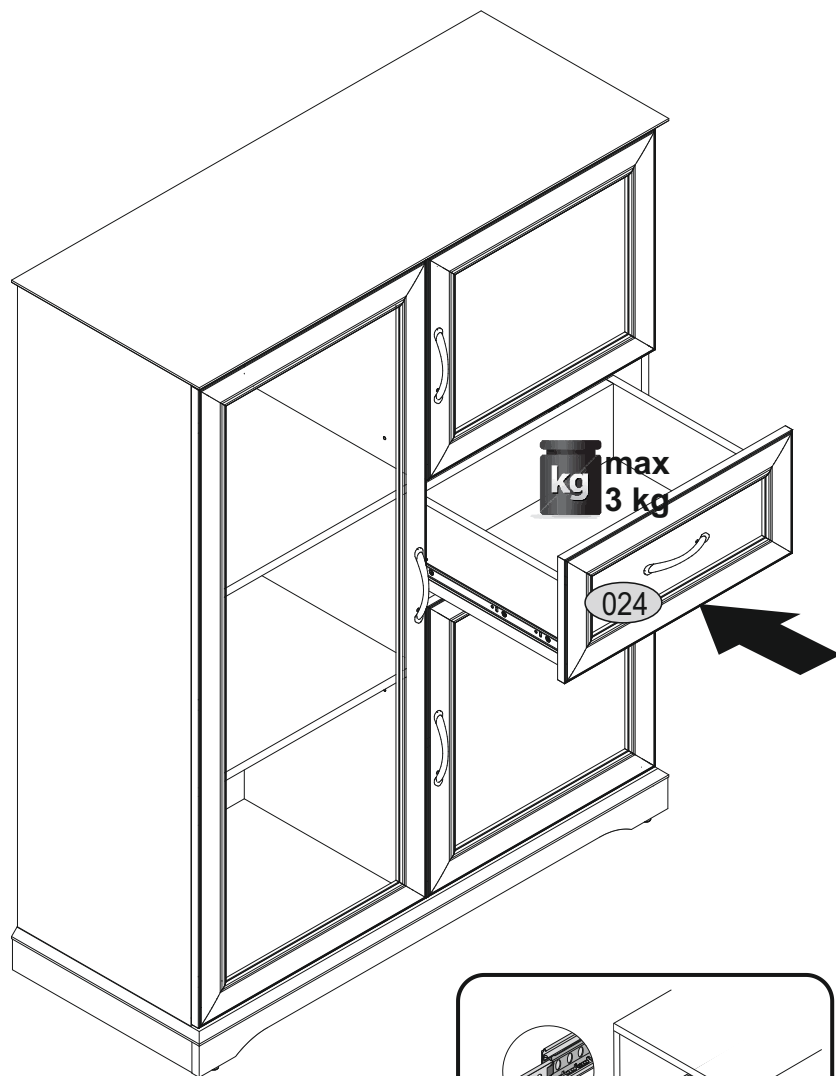

18

s2	s4	n14	p25	p17	f3
x14	x16	x1	x2	x1	x1

