


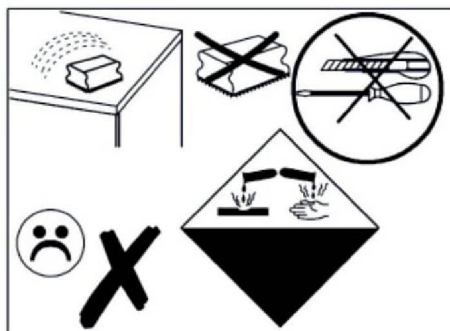
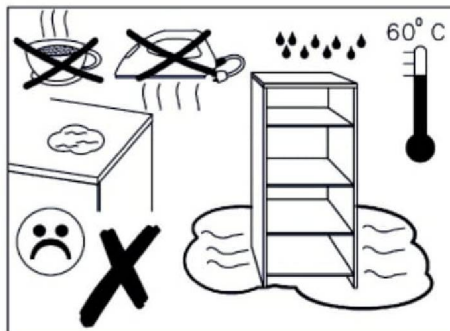
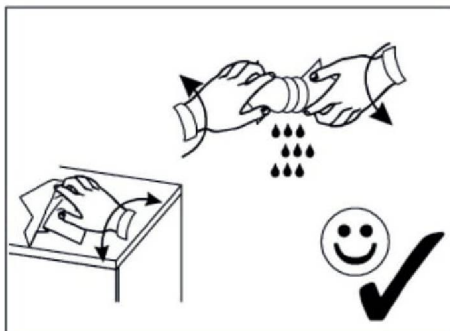
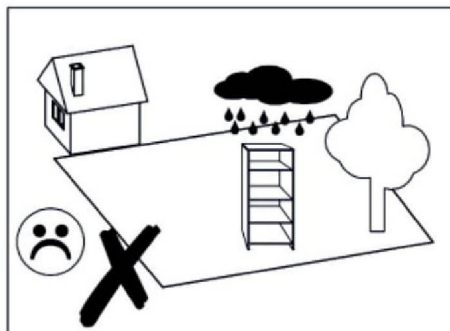


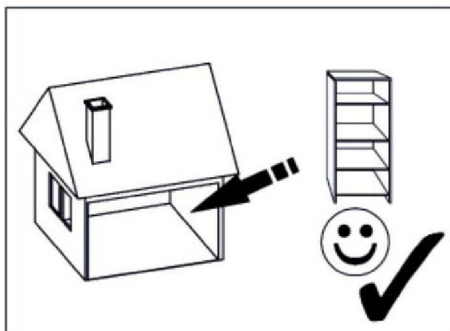



MURCIA

(RU) Инструкция по сборке:
 (CZ) Návod montáž:
 (HU) Szerelési útmutató:
 (EN) Assembly instructions:
 (SK) Návod montáž:
 (PL) Instrukcja montaż:

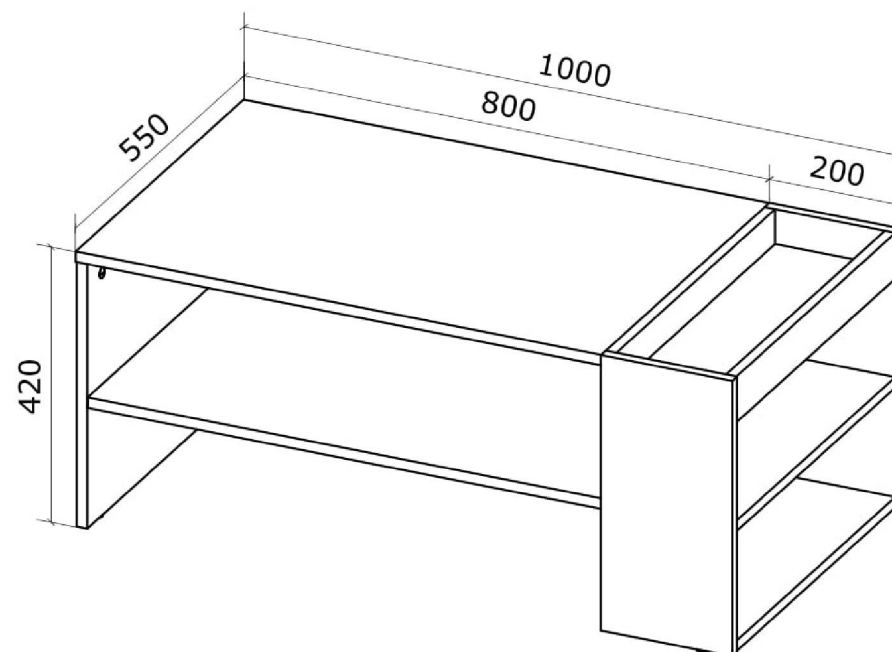

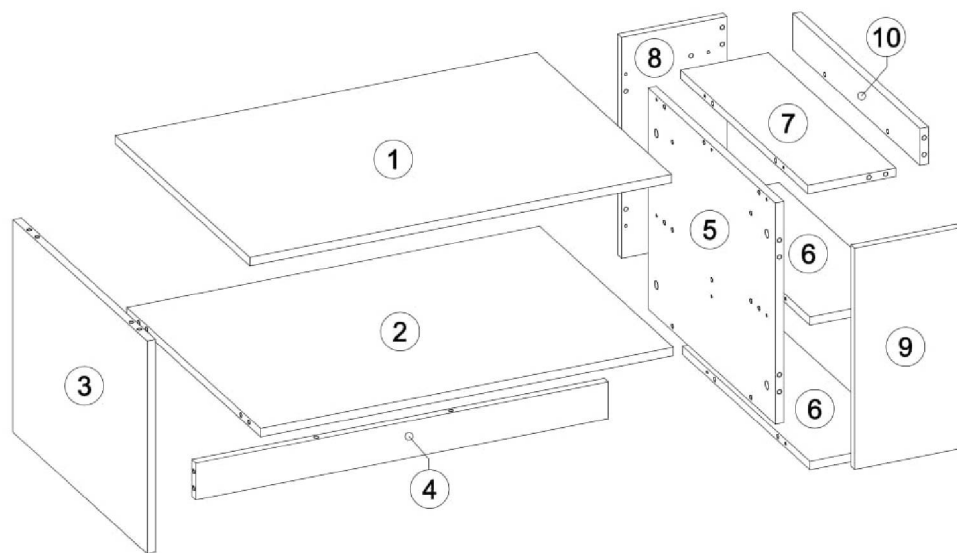

Nº	A	B	C	x
1	548	800	16	1
2	544	783	16	1
3	546	404	16	1
4	783	70	16	1
5	420	518	16	1
6	518	183	16	2
7	518	167	16	1
8	420	200	16	1
9	420	200	16	1
10	518	70	16	1

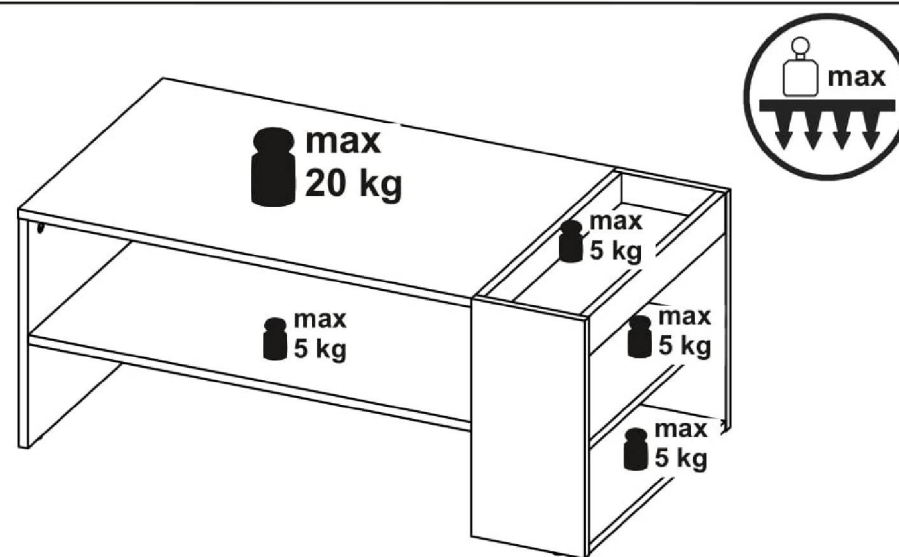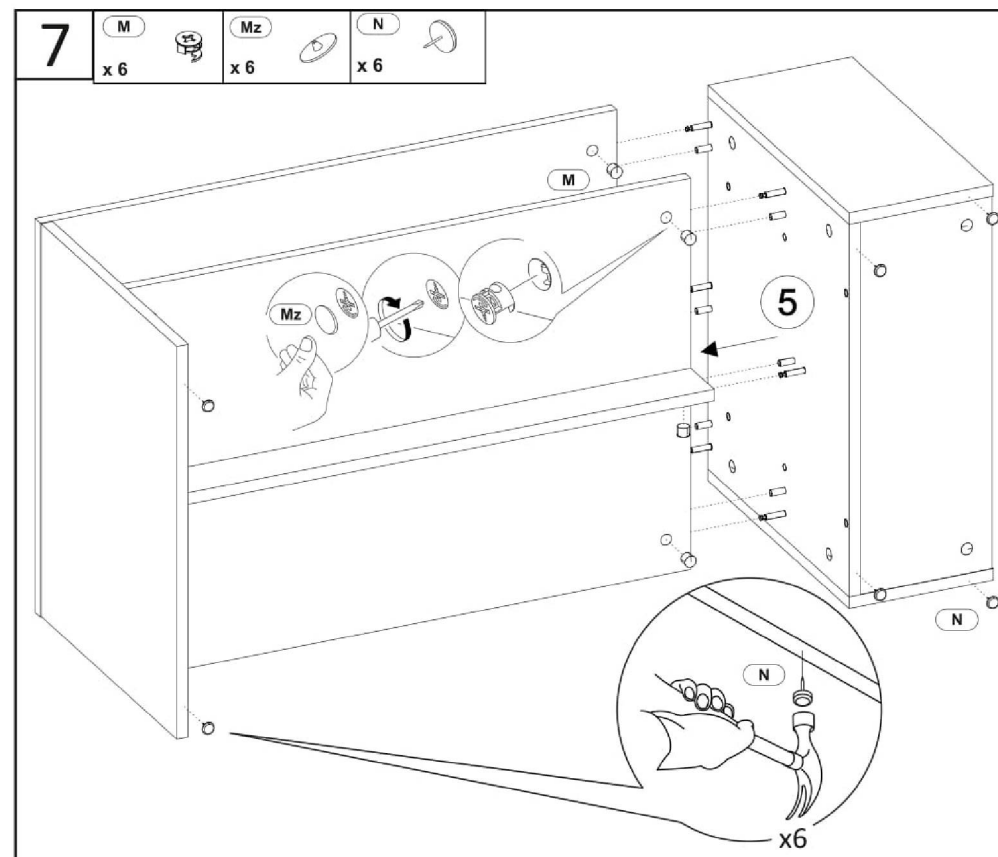


5

M

x 3

Mz

x 3

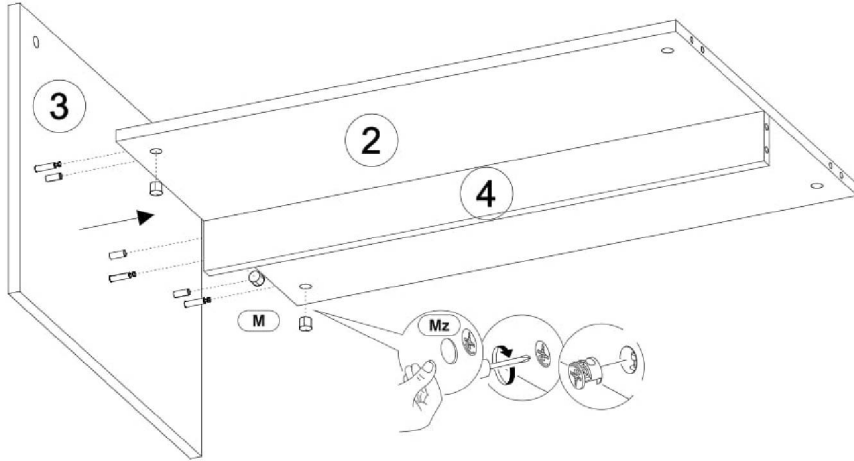


6

M

x 2

Mz

x 2

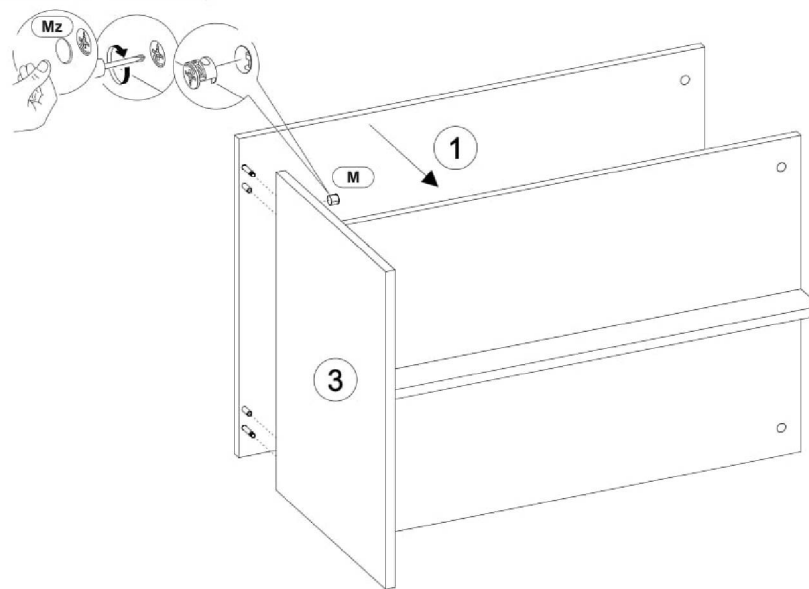

6/8

I

x 35

M

x 21

MB

x 21

Mz

x 21

K

x 6

Kz


x 4

N

x 6

KK

x 1

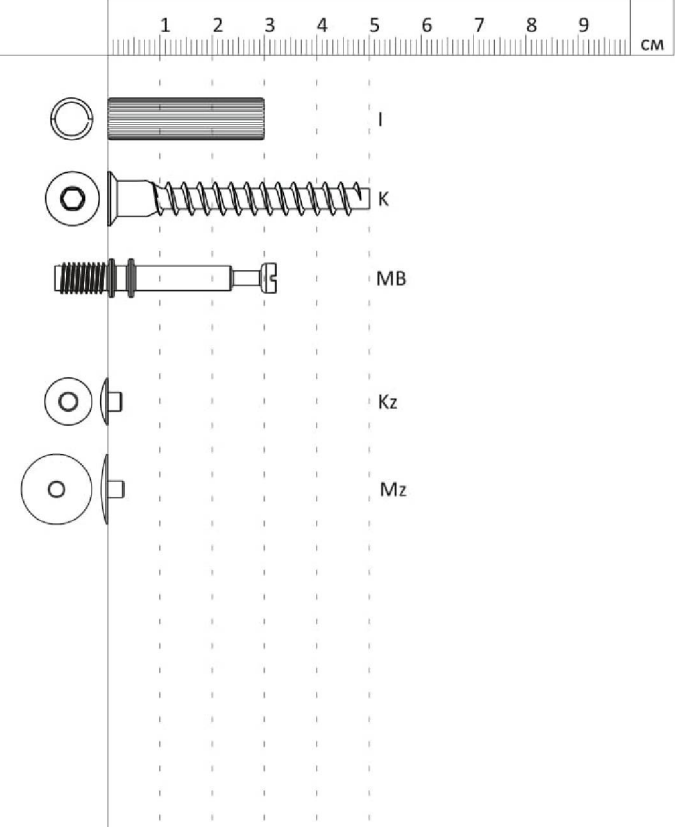

3/8

